

CARE AND USAGE INSTRUCTIONS

ALL MODELS




TO ASSEMBLE HANDLE
Locate the three sections as illustrated (Fig. 1) then lock in position by striking down onto a magazine on the floor

TO FIX THE HANDLE TO SWEEPER


Depress button (Fig. 2) on the sweeper, slide handle over until the button locates into the hole in the bottom section of the handle.

Fig. 1


Fig. 2

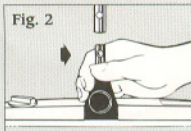

HANDY AND SEEKER MODELS

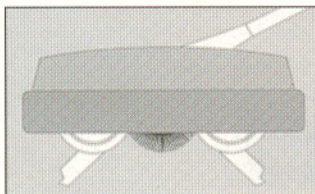


EMPTYING Empty your sweeper regularly to ensure maximum efficiency. To empty, hold pans upright over bin and press edges to open front pan. Tip forwards to empty. Repeat with other pan.

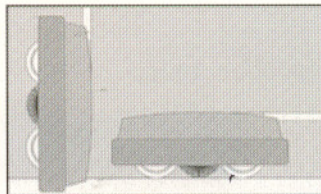


CLEANING The handle will drop into a horizontal position so your sweeper can easily clean under furniture.

TO CLEAN: Comb brush through occasionally to free fluff and cottons for maximum efficiency. Wipe body case over with a damp cloth.

DEEPSWEEP, ELITE, MULTISWEEP, COMBISWEEP, VARISWEEP MODELS

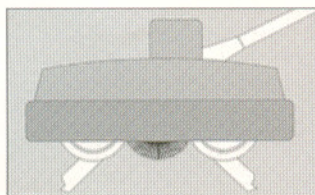

EMPTYING Empty your sweeper regularly to ensure maximum efficiency. To empty, hold over bin, tip front downwards, lift the lever located on the top of the case, empty by tipping dustpan forward. Tip backwards to empty rear dustpan and release lever to close.

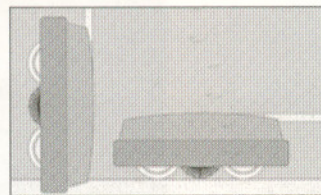

CLEANING The handle will drop into a horizontal position so your sweeper can easily clean under furniture.

TO CLEAN: The built-in comb keeps the brush free from tangles. Comb through occasionally to free fluff and cottons for maximum efficiency. Wipe body case over with a damp cloth.




Your Ewbank Sweeper should give years of satisfactory service and any defects due to faulty materials or workmanship will be replaced or serviced. This does not cover defects arising from abuse or normal wear and tear. You should retain your receipt as proof of date of purchase. Your statutory rights are not affected by this guarantee.

As part of our continuous product development programme, Ewbank reserve the right to change the specification described at any time.


4005258 PF

CLASSIC & SUPREME MODEL

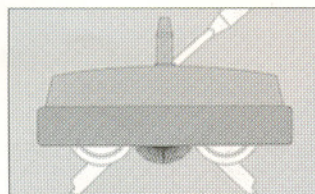

EMPTYING Empty your sweeper regularly to ensure maximum efficiency. To empty, hold over bin, tip front downwards, lift the lever located on the top of the case, empty by tipping dustpan forward. Tip backwards to empty rear dustpan and release lever to close.

IMPORTANT: Do not prevent the dustpan from opening whilst operating the dustpan opening lever.

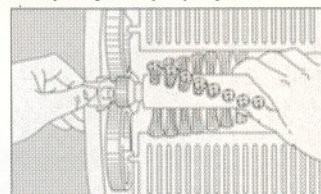

BRUSH REMOVAL To remove brush simply unclip at both ends.

TO CLEAN: The built-in comb keeps the brush free from tangles. Comb through occasionally to free fluff and cottons for maximum efficiency. Wipe body case over with a damp cloth.