

WARNING

Weight

Keep children away from the front of the dishwasher so that they are not accidentally hit by the door during loading or unloading or if door should unexpectedly open. The weight of the door can cause injury.

CAUTION

Screws

To prevent the possibility of corrosion, use factory supplied screws for mounting the wood panel.

The EW24ID70QT can be installed with a fully integrated, buyer supplied custom door panel.

The custom panel should be 1/2 to 3/4" (19mm) thick.

Items provided with the unit:

2x neck screws, used for the pre-fixation on the metal panel on the dishwasher

4 x 2" screws for mounting the custom wooden panel to the dishwasher.

INSTALLING THE CUSTOM PANEL

A custom panel should be installed before the unit is mounted in the cabinet.

1. Fit the handle onto the panel according to the manufacturer's instructions.

NOTE: A handle should be used rather than a knob. A knob does not provide enough grip)

All handle attachment screws must be flush/recessed below panel surface (Handle not include).

2. Pilot drill 6 holes in the back of the panel using this paper template as a drilling template or alternatively be following the dimensions to measure the hole positions
3. The two neck screws go into the back of the panel as indicated.
4. Hook the neck screws into the keyhole openings of the metal panel on the dishwasher door.
5. Open the door and use the four screws supplied to secure the panel to the door.

NOTE: The door panel cannot exceed 12 pounds in weight and 30 ½ "(77,6 cm) in length.