

WingSpan[™] Wall Stand Off Instructions



1. Take an Arm Assembly and put it through the Rung Bracket.



2. Once the Arm Assembly is inserted, line up the holes of the Arm and the Bracket. Insert a bolt and then tighten the wing nut onto the back. Repeat step 1 and 2 for the remaining parts and ensure wing nuts are secure and tight.



3. Place the WingSpan on the top rung of the ladder when the ladder is in extension form only.



4. Make sure the WingSpan is centered and secure on the top rung.





6. Slide the Clamp into the front slot of the Bracket so that the Clamp is facing downwards. Adjustment of the Clamp may be necessary to insert Clamp into the front slot.



This is how the WingSpan Wall Stand Off should look after you have assembled it and placed it correctly on the top rung when the ladder is in extension form.

Parts and Final Assembly

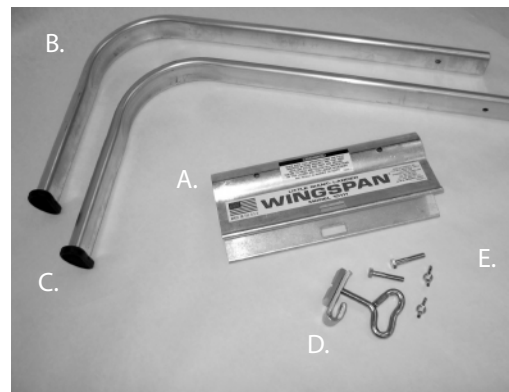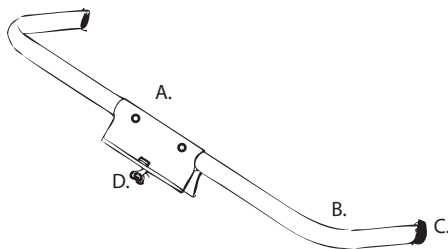

PART NO.

A. Rung Bracket	30126
B. Arm Assembly includes foot (2)	30127
C. Rubber Foot (2)	30128
D. Clamp Assembly	30129
E. Hardware (2 bolts, 2 wing nuts)	30130

This is how the WingSpan Wall Stand Off should look after you have assembled it.

LITTLE GIANT® WINGSPAN WARRANTY

Wing Enterprises, Inc. warrants each new WingSpan, to original purchaser thereof, to be free from defects in workmanship and materials when operated under normal conditions and maintained properly. This warranty covers all parts of the WingSpan.

This warranty shall be in effect for a period of 1 year from date of purchase. This shall be in lieu of any other warranty, expressed or implied, including, but not limited to, any implied warranty of merchantability or fitness for a particular purpose. Certain states do not allow limitations on how long an implied warranty lasts. The above limitation may not apply to you.

Wing Enterprises, Inc. will repair or replace, at its option and without cost to the original purchaser, any WingSpan which has been found defective and is within the period of warranty. All freight to and from factory is to be paid by the customer. The factory address is: Wing Enterprises, Inc., 1198 N Spring Creek Place, Springville Utah 84663.

The liability of Wing Enterprises, Inc. under this warranty shall be limited solely to repair or replacement of the WingSpan within the warranty period; Wing Enterprises, Inc., shall not be liable, under any circumstances, for consequential or incidental damages, including, but not limited to, personal injury or labor costs. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you. This warranty gives the original purchaser specific legal rights and you may have other rights which vary from state to state.

Under no circumstances will Wing Enterprises, Inc., be responsible for any expense in connection with any repairs made by anyone other than the factory or authorized service station unless such repairs have been specifically authorized in writing by Wing Enterprises, Inc.