

INSTALL DIRECTION

STEAM BATHROOM

MODEL : WS-801L



<http://www.eaglebath.com>

- ★All we do our best for the particular and definitude of the products information making , but only for reference , please depend on the practise and reality in detail .
- ★Our company keep down the authority of amending the aspects and the spare parts , according as the scheme's or parameter's redressal which was come out from technical renewal , sorry to will not offer any notice.
- ★our company reserve the final explanation and modify right for all the contents.



Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

Your best choice!



SANITARY WARE

Dera user,

Thank you very much for purchasing our sanitary ware. To enable you to use this product safely and effectively, please read this installation and operation manual carefully before use.

Notice

1. Please connect the water pipe before installed the products.
2. Please ensure that the product installed reliable electric leakage protection device, the power plug contains earthing conductor, and make sure it is reliable for earthing. Check the protect system of leakage protection each time before use.
3. Before turn on water pump, check if the water level over jets 10 to 20 mm or not, make sure regular usage of water pump, otherwise it will be destroy because of water leakage.
4. Do not turn on water pump, heat pump and air bubble pump without water.
5. People with Hypertension symptom, after drink or heart disease are not allowed to use this product. Children have a bath must under adult's guidance.
6. During using, please noticed that don't block the jets completely in case of water leakage by the air switch . Also keep this product clean and don't let it block with hair or mess.
7. During using, please firstly adjust the water temperature in case of being burned.
8. The outdoor spa is designed with ergonomic, rise and fall changes are dis tinctly, so pay more attention of slip.
9. Please shut down the system when not use.
10. Don' t turn on all the water pump in the steamroom for long time.


Technical Parameter

Size: 1060x1060x2150mm


Technical Parameter

Voltage	Frequency	Water Voltage	Power generator	Light
AC110V	60HZ	0.1-0.2Mpa	2.65KW	12V & 20W



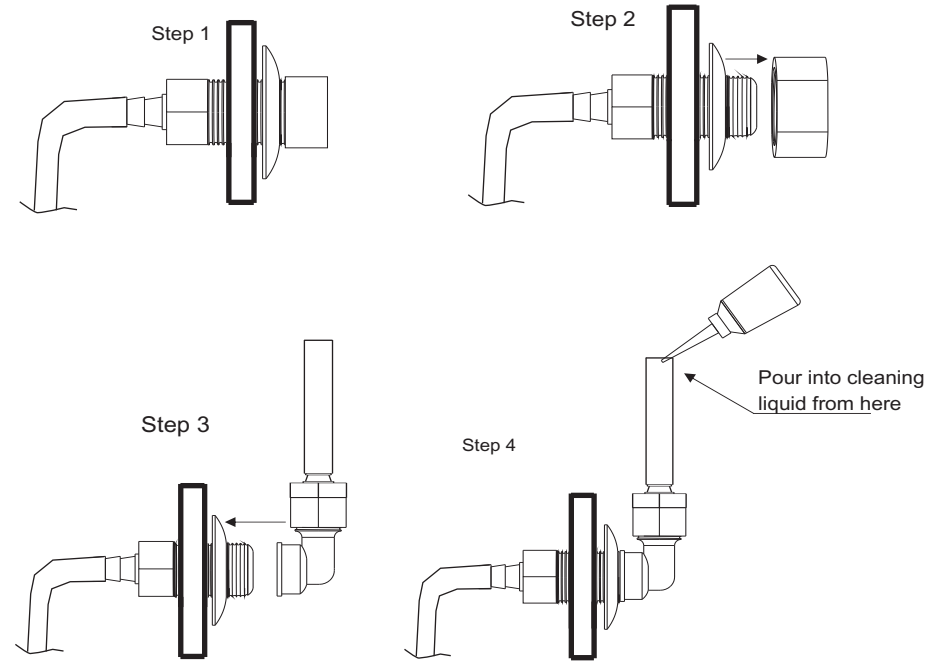




Self-clean system




Cleaning method :

1. Clean the steam engine regularly at least once by every 2weeks or after using 20 times.
2. Inject citric acid as main cleaning liquid, add 1.5L each time. after 10 minutes, turn on and When the system turns on, press "  button to start the steam function for about 30seconds and then shut down the system. After vent the stagnant water, repeat 2 or 3 times.
3. CAUTION: The system must be shut down before injecting cleaning liquid .

Packing list



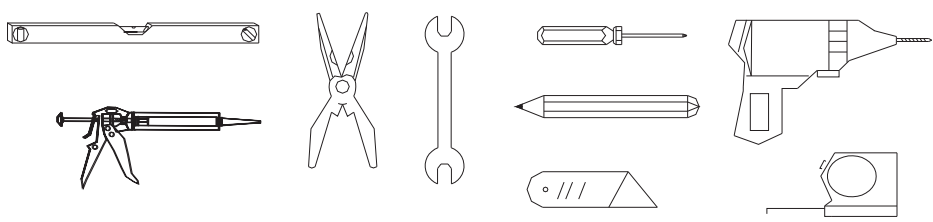
Packing 1	two pieces of glass body,two pieces of fixed glass door,two pieces of sliding glass door, two pieces of aluminum column , two pieces of U shaped plastic seal , four pieces of water resist strip.			
Packing 2	one tray,one roof, two pieces of up and down bended aluminum column with eight pieces of wheels.			
Packing 3	one piece of post,one pieces of steam pipe.			
Spare parts list	one set shower,two pairs of “ ”shaped handle,eight pieces of wheel with cover,one set of glass towel shelf, M6*25 screws(1),M6*35 screws(2),ST4*20 screws(3),ST4*25 screws(4), ST4*20 screws(5),one instruction.			
	SCREW (1)	M6x25		6pcs
	SCREW (2)	M6x35		6pcs
	SCREW (3)	St4x20		4pcs
	SCREW (4)	St4x35		4pcs
	SCREW (5)	St4x20		20pcs
	SCREW (6)	St4x25		20pcs
				

CONSTRUCTION SKETCH

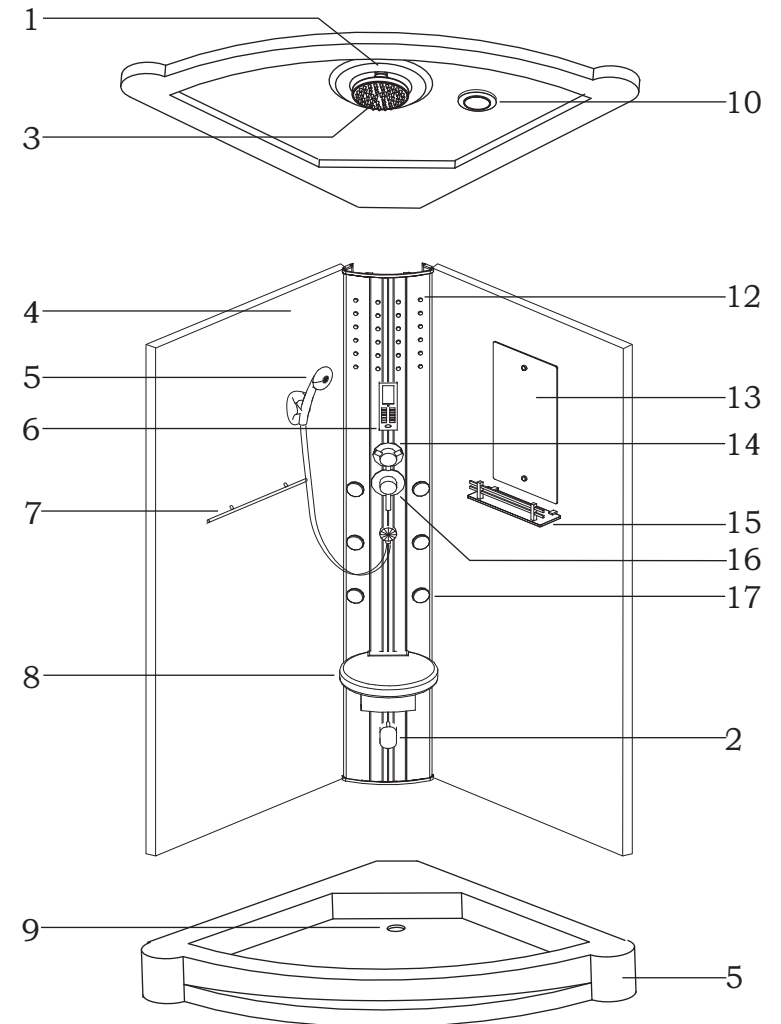

- 1、 top light
- 2、 steam out
- 3、 top shower
- 4、 room body
- 5、 moveable shower
- 6、 control panel
- 7、 towel shelf
- 8、 seat
- 9、 drainage
- 10、 exhaust fan
- 11、 bottom tray
- 12、 decorated light
- 13、 mirror
- 14、 shift switch
- 15、 back light
- 16、 cold/hot water switch
- 17、 nozzle

INSTALLATION SKETCH

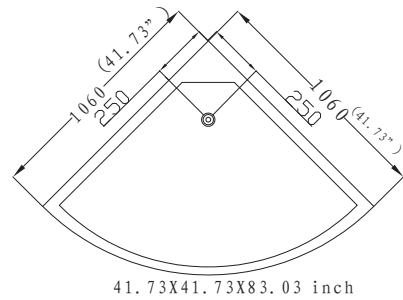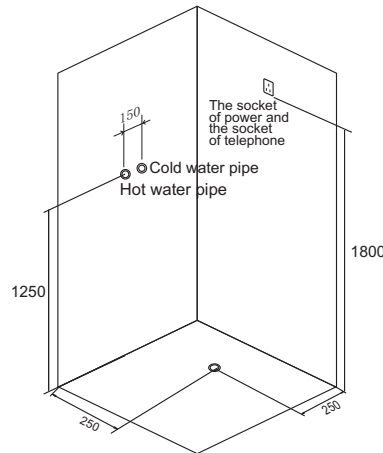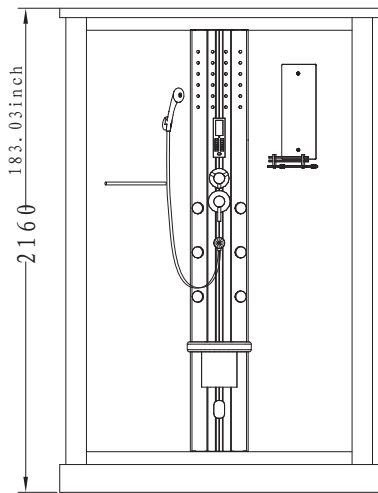


41.73X41.73X83.03 inch

SIZE:1060X1060X2160mm

Other screws
M4x20 M4x25



 Install the screw
M6x25



Active chain wheel of glass



ILLUSTRATION OF INSTALLATION

1. The products should be installed by technical guy who are got the certificate or those technical who are assign by dealers. The main power switch and electronic leakage device should be installed.
2. The plug of electronic should be installed above the steam generator and the length of electronic wire not less then 1800MM from the earth.
3. There are should be with main power switch for hot and cold water pipe of steam room and the water pipe should be connect to drainage water pipe.
4. Install the products according to the diagram of installation When fixed the place for the products.

ATTENTION

1. In order to be tripped and fell down, pay more attention when get into the steam room. Please don't shut the finger in the door in order to be hurt.
2. In order to avoid damaging the surface of products please do not use hardness and sharpness tool to curve the products.
3. In order to course fire, no smoking inside the bathroom.
4. the jets of steam and drainage pipe both are high temperature when products working, in order to be hurt please be careful.
5. In order to be tripped and fell down please keep clear of the bathtub after taking shower each time.
6. It will be leaking if the glass glue plastic sheet be off then please add some more for recover.
7. If there are marks of water please clear with soft cloth and toothpaste.
8. In order to be blocked of drainage device please keep clean of the surface of bathtub.
9. Please do not hang up heavy things on the steam room or the handle of steam room.
10. Please deal with the products according to the local laws when it is no longer be use.
11. Any request please contact with local dealer.

ATTENTION FOR USAGE

- 1 check if power and cold/hot water switch be turn on or be turn off each time before use this product.
- 2 check if power of electronic leakage device be get through or not.
Checking way:
Press testing button, light of power be off, press button of restart then light of power be on. It is not being what mentioned above after operated step by step, then that shows the electronic protection device out off control or there is something wrong with the electronic leakage device, so should ask professional to check and maintain the product.
- 3 Turn off the main power of control panel after stop usage. The plug of power should be pull out because only turn off all the functions of control panel that is not stop the power.
- 4 People with hypertension or drunk are not allowed to have sauna steam bath.
- 5 Children should have sauna steam bath under adult's instruction.
- 6 Please don't shut the finger in the door in order to be hurt when get into the steam room.
- 7 In order to be tripped and fell down, pay more attention when get into the steam room.
- 8 keep clean of the tray in order to be tripped and fell down.
- 9 Pay attention to the steam sprayer and water tank drainage, they are in high temperature while working.

Attention:

The machine must be fixed in the circuit which protected by creepage protection and should be well-connected with the ground. Nontechnical people can not be fixed or removed at random.



6、 Technical parameter

Model	Voltage	Current	Power	protecting electrifying	Waterproof Grade
KL-824	110V	25A	2650W	I	Ip4
Top light	Sidelight	Fan	Water inlet valve	Water drain valve	
20W	5W	3.5W	6W	7W	
AC12V	AC12V	DC12V	DC12V	DC12V	

INSTALLATION PROCESS


1. Assembly of tray
If the ground is not smooth , please adjust the nail under the tray to keep the balance of the tray and the ground .

STEP 1

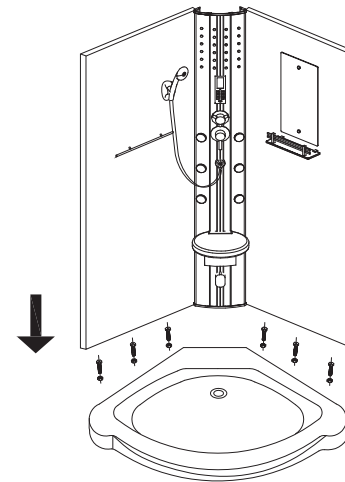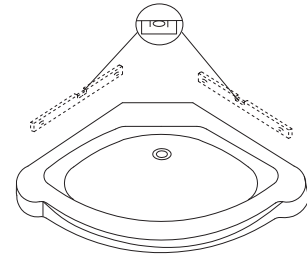


- 2 Install the shower body onto the tray .Put the shower body onto the tray , fix it .

 STEP 2




Chain wheel of glass door

STEP 3

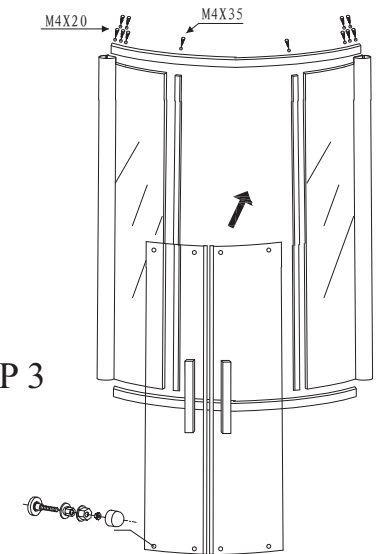


- (1) Assembly of fix glass door ;
- (2) Assembly of sliding door . Put the sliding door onto the up and down aluminum track to keep it balance .

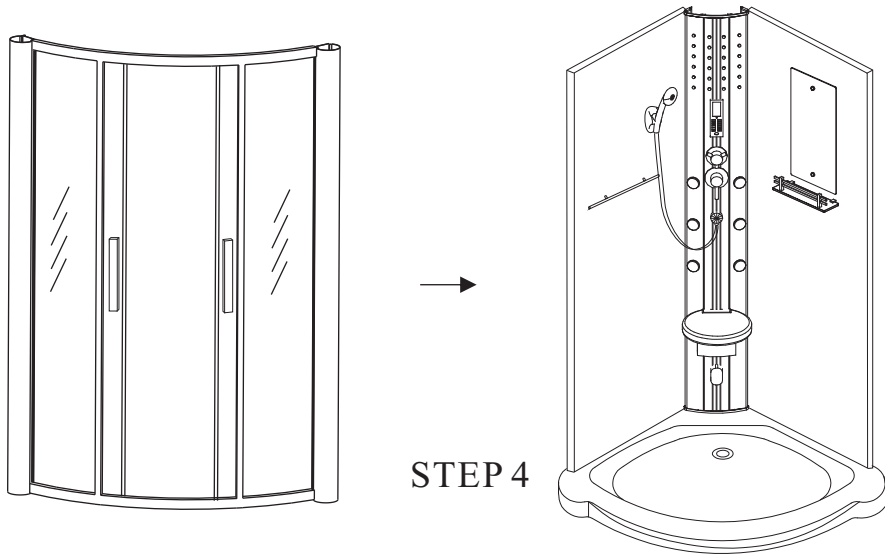


STEP 4

A Install the glass door onto the tray .Put the water strip onto the aluminum post of glass door , if the length of the water strip isn't suitable .Pls. cut it to suitable size , then put it on the tray screw with bolts .

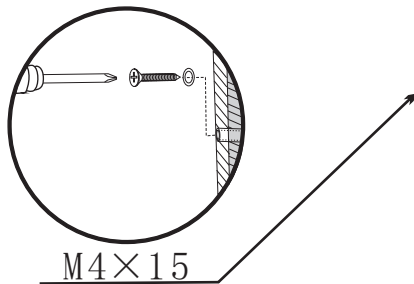

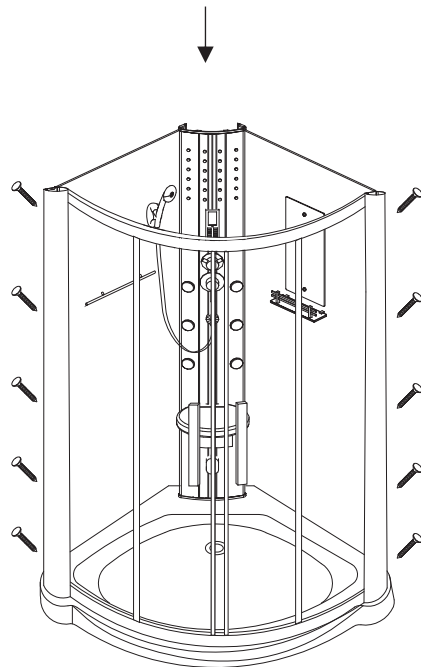

Assembly of sliding door . Put the sliding door onto the up and down aluminum track to keep it balance .






STEP 5


(1) The electrical pitch

Press  pitch can open the machine, the temperature is the room temperature. The time will show 30m. At the same time, it will open the ceiling lamp. Press  again will close all the functions. (After the closure of the machine, the water case will drain for 2 minutes)


(2) The application of the back lamp

Press , the sidelight is on. Press  again, the ceiling lamp is out, press  a third press, the sidelight is out too.



3) The steam function



Press , startup the steam function, the water case will pump water automatically. After 60 minutes or so, it will generate steam. (When the water case is lack of water, the controller will replenish automatically)


(4) The air draft function

Under the condition of turning on, press  can start up air draft function, press again will close it.

(5) The setting of time or temperature

1. Press   pitch can adjust the time from 1-99.

2. Press   pitch can adjust the temperature from 30-60 .

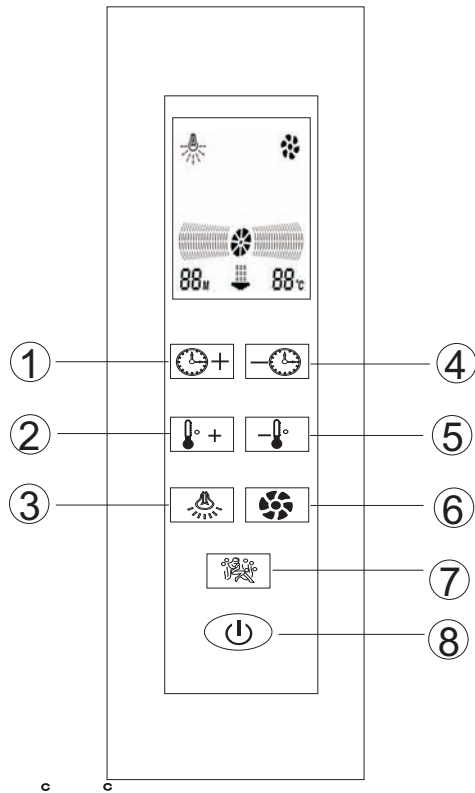

① Time adjustment pitch+

⑤ Temperature adjustment pitch-

② Temperature adjustment pitch+


⑥ Fan Pitch

③ CeilingLamp/Back Lamp pitch



⑦ Steam Pitch

④ Time adjustment pitch-

⑧ Main Cock Pitch

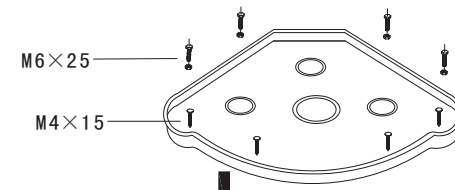

STEP 6

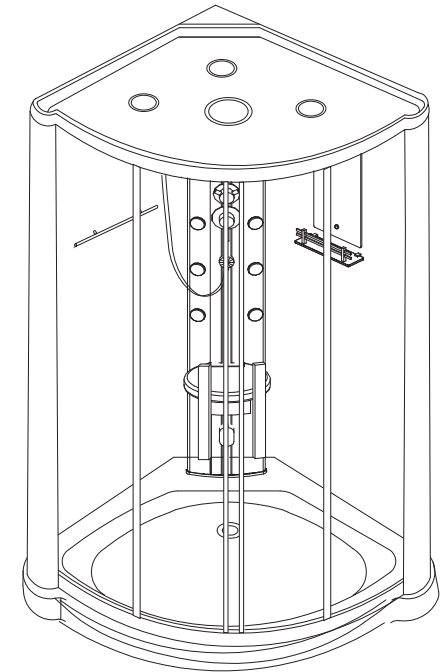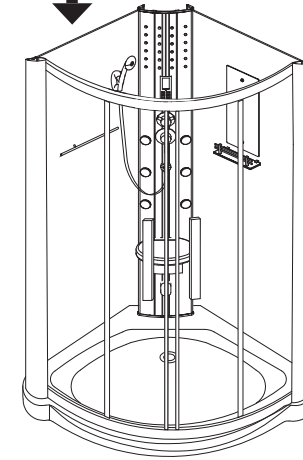

STEP 7

Install the roof

Leave the roof onto the top of the shower , then fix tightly with bolts .Then install the spare parts

A Finishing install the whole set , in order to avoid steam or water leaking , the silicone should be used in all connection position except the sliding glass door .

B While connecting the cold and hot water pipe to your house water , pls. wipe the silicone on the connection mouth tomake it connect well ;


 
C Connect the top shower pipe as drawing ;


D Assembly of the other spare parts on top (e.g . shower & so one)

E After all spare parts have been installed well . put the power supply and turn on the water switch to see whether every function works well .

DRAWING OF WATER CONNECTION

Instructions:

1. You should install the water heater yourself.
2. As the “” “” from the picture, please make the connection according to the serial number v1, v2, etc.

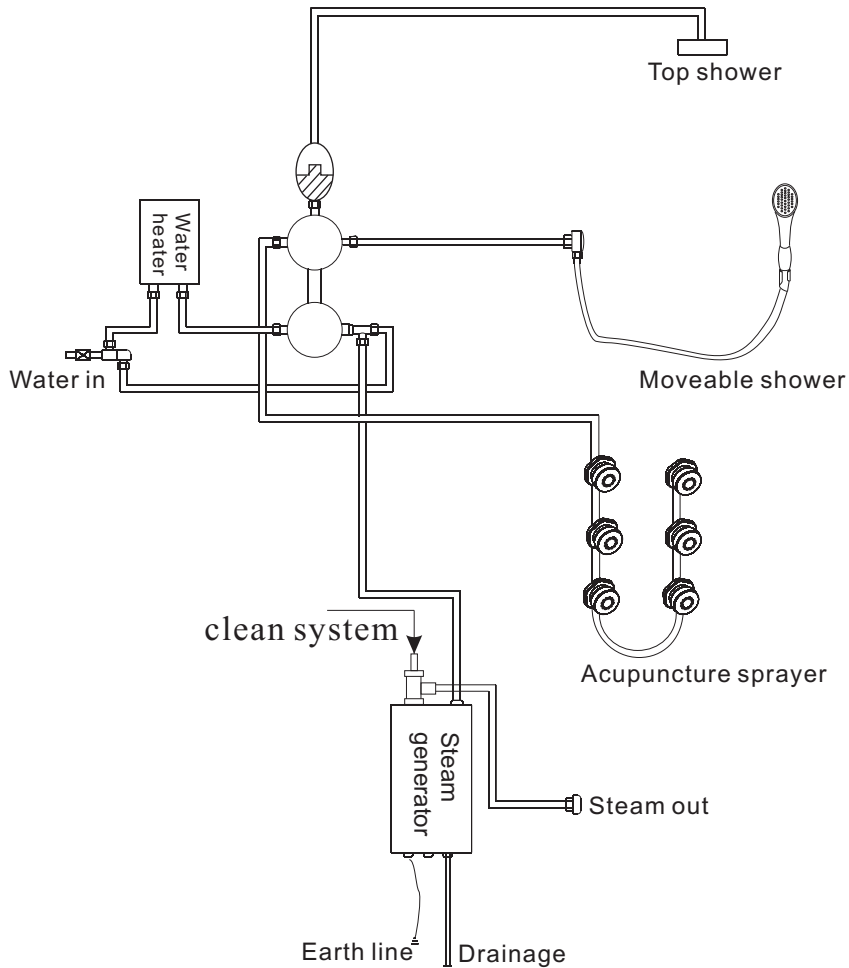

ELECTRIC CIRCUIT SKETCH

