

Kodak EasyShare M1033

Digital Camera



Beautiful pictures—automatically.

10.0 MP for prints up to 30 × 40 in. (76 × 102 cm)

3X optical zoom lens

Smart capture mode

HD stills and video

Face detection technology

Amazing quality prints with 10.0 MP

10.0 MP means you can make stunning prints up to 30 × 40 in. (76 × 102 cm)

However you choose to print—at home, at retail, or online—trust KODAK for picture quality that's truly exceptional and for memories that will last



3X optical zoom lens

3X optical zoom (35 mm equivalent: 35–105 mm) gets you closer to your subjects without reducing image quality

The KODAK RETINAR Aspheric Lens captures crisp details

5X digital zoom enlarges your pictures even more

Blur reduction technology reduces blur caused by subject movement or fast action situations



Show off your pictures

Get a good look at your pictures on the large 3.0 in. (7.6 cm) wide-angle viewing color LCD. Whether you shoot your pictures vertically or horizontally, view them right side up with auto picture rotation.



True HD quality: capture stunning pictures and video

HD picture capture

Capture beautiful HD pictures in 16:9 format

View your pictures in high definition on an HDTV or other HD devices

HD video features

Capture HD quality video

Capture more video while using less memory with MPEG-4 compression

Print multiple frames on a 4 x 6 in. (10 x 15 cm) print

Save single frames and e-mail family and friends

Mark special spots in your video with video bookmarking

KODAK EASYSHARE HDTV Dock (OPTIONAL ACCESSORY)

Elevate your high definition experience—view your photos on your HDTV using the KODAK EASYSHARE HDTV Dock.

Experience HD video playback at 720p and 1080i resolution

Show off your still photography in vivid HD

Connect to your KODAK EASYSHARE HDTV Dock however you want; place your KODAK EASYSHARE Camera on it, use an SD card, USB flash drive, or card reader attached to the USB port

Display your photos as single pictures, multi-up, or in slideshow format



Beautiful pictures—automatically.

Who says you can't have it all? The KODAK EASYSHARE M1033 Digital Camera blends the latest picture-taking technology with the ultimate in style—and right at your fingertips. With innovative smart capture, it's the take-anywhere camera that does it all—automatically.

Smart capture

Take better pictures than ever before. Innovative smart capture adjusts camera settings for great pictures in just about any environment.

Intelligent scene detection—detects and analyzes scene conditions

Intelligent capture control—automatically sets camera settings including exposure, focus and ISO for clear, sharp pictures even in low light and challenging situations

Intelligent image processing—reduces noise and clears up dark shadows for vibrant, crisp details and true-to-life colors

Face detection technology

For great shots of friends and family, face detection technology locates faces and automatically adjusts camera settings

Li-Ion rechargeable battery

Don't miss a shot with the security of in-camera charging and the power of the included Li-Ion rechargeable battery*

KODAK PERFECT TOUCH Technology

Make your pictures as vivid as the moment you took them. Print better, brighter pictures using KODAK PERFECT TOUCH Technology.

Makes better, brighter pictures

Relive your memories in richer detail

Clear up dark shadows to reveal more smiles

High ISO

Capture the details in low light conditions and fast action situations with high ISO (up to 3200)

Shoot video with ease

Record continuous HD video (1280 × 720) at 30 fps or VGA video (640 × 480) at 15 fps with sound and on-camera editing. Video print options include 1, 4, 9 and 16-up prints.

Capture more video while using less memory with MPEG-4 compression

Multimedia slideshow



Tell your story your way using the multimedia slideshow feature.

Turn your pictures into a creative multimedia slideshow right from your camera

Set the mood when you choose from pre-loaded sound themes to accompany your slideshow

Insert creative transitions and bring your pictures to life

Text and sound tagging

Add text or sound tags to your pictures, so you can easily find and organize them later

Never forget the details of your pictures with text tags

Let your pictures have their say with sound tags

Show off your pictures

Get a good look at your pictures on the large 3.0 in. (7.6 cm) LCD indoor/outdoor color display

Whether you shoot your pictures vertically or horizontally, view them right side up with auto picture rotation

Scene modes and picture enhancing features

Capture great shots time after time with multiple scene and color modes such as portrait, children, snow, beach, and backlight

Combine up to three shots into one large picture with on-camera panorama stitch mode

Easily create great shots with features such as on-camera cropping

Internal memory plus

Don't miss a shot if your memory card becomes full—switch to in-camera memory quickly, thanks to the internal memory plus feature

32 MB internal memory** and SD/SDHC card expansion slot let you start shooting right out of the box

Customize your experience

Make a statement—pocketable with stylish colors and fun accessories to choose from including bags, wrist and neck straps

Selectable start-up sound themes available



The simple way to share

The M1033 is part of the KODAK EASYSHARE System, so sharing your pictures is amazingly simple. Just press Share.



On-camera Share button

Sharing starts right on the back of the camera

Have a picture you want to share? Tag it using the exclusive on-camera Share button and it will be ready to print or e-mail later. Use the Favorites feature to keep your special pictures close without filling up your internal memory.

KODAK EASYSHARE Software (included)

The simplest way to find, create, and share.



The award-winning, elegant design makes your pictures the star of the show for a more enjoyable viewing experience.

English, French, and German photo card templates turn pictures into 4 x 6 in. (10 x 15 cm) announcements, invitations, holiday cards, and more, right at home.

Get more out of KODAK EASYSHARE Software with a variety of useful tips.

Use KODAK EASYSHARE Software to access your pictures at the KODAK Gallery—then view, edit, and save them to My Collection.

KODAK EASYSHARE Camera Dock Series 3 (OPTIONAL ACCESSORY)



Transfer your pictures at the touch of a button.

Instantly upload pictures to your computer for viewing, printing, and e-mailing.

Charges your KODAK Camera Battery in less than 3.5 hours***.

USB connection (USB 2.0 compatible).

Simple ways to print your pictures at home

Real KODAK Pictures are just a touch away with our convenient home printing options.

KODAK EASYSHARE G610 Printer Dock (OPTIONAL ACCESSORY, WHERE AVAILABLE)

One touch to KODAK Lab Quality Prints

Waterproof, stain-resistant prints that last a lifetime****

Automatic KODAK Camera Battery recharging

Transfer pictures to a computer at the touch of a button

Compatible with KODAK Color Cartridge & Photo Paper Kit / G



Ready to go—right out of the box

Unpack the M1033 and you're ready to shoot. It's that simple.

*** Actual battery charging time may vary by camera model; rechargeable battery not included in all camera models.**

**** 32 MB internal memory/19 MB available for picture storage (1 MB equals one million bytes).**

***** Actual battery charging time may vary by camera model.**

****** Under typical home display conditions.**

EASYSHARE M1033 Digital Camera

Specifications

Standard features

Sensor type	1 / 2.3 in. CCD
CCD total pixels	10.3 MP (3279 × 2774)
Effective pixels	10.1 MP (3672 × 2748)
Zoom	3X optical, 5X continuous digital
Lens	35-105 mm (35 mm equiv.) f/3.1-5.7
Lens protection	built-in mechanical lens cover
Shutter speed	8-1/1448 sec.
Viewfinder	none
LCD	3.0 in. (7.8 cm) (230K) wide-angle viewing, indoor/outdoor color display
Storage	32 MB internal memory* available, SDHC/SD card expansion slot

Auto focus

Type	TTL-AF, selectable
Focus range	wide: 0.6 m-infinity, tele: 0.6 m-infinity (normal AF) wide: 0.07-0.7 m, tele: 0.4-0.7 m (macro AF) wide: 10.0 m-infinity, tele: 10.0 m-infinity (landscape mode)
Focus modes	normal, landscape, macro selectable
Focus	single, continuous
Auto focus zones	multi-zone (5 zone), center zone
AF assist light	yes

Exposure control

ISO sensitivity	auto (smart capture): 64, 100, 200, 400, 800, 1600, 3200 manual: 64, 100, 200, 400, 800, 1600, 3200, 6400** selectable
Metering modes	multi-pattern, center-weighted, center spot
Compensation	±2.0 EV with 1/3 EV steps
AE lock	exposure is locked when S1 locked

Histogram display yes
White balance auto, daylight, tungsten, fluorescent, open shade

Flash

Range wide: 0.6-4.2 m, ISO 400
tele: 0.6-2.3 m, ISO 400
Modes auto, fill, red eye pre-flash, red eye, off
Compensation yes

Shooting specifications

Burst modes single shot, self-timer (2 sec. or 10 sec.), 2-shot self-timer, burst 3 shot
Face detection yes
Shooting modes smart capture mode, program mode, scene modes, video mode
Scene modes portrait, sport, landscape, close up, night portrait, night landscape, snow, beach, text/document, fireworks, flower, museum/manner, self-portrait, high ISO, children, backlight, panning, candle light, sunset, panorama (right-left), panorama (left-right), blur reduction technology
Click to capture (flash off) wide: < 0.2 sec., tele: < 0.2 sec.
(flash on) wide: < 0.3 sec., tele: < 0.3 sec.
Shot to shot wide: < 1.5 sec., tele: < 1.7 sec.

Still capture

Still format JPEG/EXIF v2.21
Picture size 10.0 MP (3648 × 2736)-4:3
8.9 MP (3648 × 2432)-3:2
7.5 MP (3648 × 2064)-16:9
5.0 MP (2592 × 1944)-4:3
3.1 MP (2048 × 1536)-4:3
2.2 MP (1800 × 1200)-3:2
2.1 MP (1920 × 1080)-16:9
1.2 MP (1280 × 960)-4:3
Color modes high, natural (default), low, sepia, black and white
Sharpness high, normal (default), low
Long time exposure 0.5-8.0 sec.
Review options select all/deselect all, view all, search, KPT, crop, slideshow, multimedia slideshow, multi-up, copy, protect, favorite, tag, sound tag
Smart capture yes (integration of face detection, scene detection, optimized auto ISO, broader dynamic range, auto KPT, optimized output)
Framing grid yes
Blur detection yes

Orientation sensor	yes
Date/time stamp	yes
Editing	on-camera crop, KODAK PERFECT TOUCH Technology, sound tagging, text tagging

Video capture

Format	QUICKTIME, MPEG 4 with audio recording during capture and playback
Quality	HD (720p) at 30 fps*** HD (720p) at 30 fps (HQ)*** VGA (640 × 480) at 30 fps VGA (640 × 480) at 30 fps (HQ) QVGA (320 × 240) at 30 fps
Auto focus	yes
Zoom during video	yes
Image stabilization	yes (no for HD movie)
Length	HD: continuous up to 30 min. VGA, QVGA: continuous up to 80 min.
Review options	select all/deselect all, view all, search, edit slideshow, multi-up, copy, protect, tag
Editing	make print from video (1, 4, 9, 16-up), action print, trim, bookmarking

Share

Share	select all/deselect all, print, email, cancel prints
-------	--

Customization

Custom settings	camera sounds, sound volume, digital zoom, LCD brightness, LCD auto dimmer, auto power off, date/time, video out, date stamp, image storage, set text tag, orientation sensor, reset camera, language, format, about, red-eye preflash
-----------------	--

Physical specifications

I/O interface	A/V output (NTSC or PAL, user selectable), digital USB 2.0 full speed, PIMA 15740 Picture Transfer Protocol (PTP) via cable or exclusive KODAK Camera Dock
Power	optional KODAK EASYSHARE Docks with KODAK Li-Ion Rechargeable Digital Camera Battery KLIC-7004, 5V AC adapter inlet on camera, USB cable, USB/AC adapter for in-camera battery charging
Dedicated buttons	top: shutter, power, mode, flash back: zoom, menu, review, share, delete, five-way joystick
Tripod mount	¼ in. standard
Dimensions	W × H × D: 93.7 × 57.8 × 20.7 mm (19.8 mm thinnest)
Weight	126 g

Compatibility

[See the Dock Compatibility Chart](#)

Dock compatibility

Direct printing KODAK EASYSHARE Photo Printer 500, IMAGELINK print system compatible, PictBridge-enabled

Software works with KODAK EASYSHARE Software

Package Contents:

KODAK EASYSHARE M1033 Digital Camera

KODAK Li-Ion Rechargeable Digital Camera Battery KLIC-7004

AC adapter for in-camera charging

USB cable

Wrist strap

Getting Started Guide with KODAK EASYSHARE Software

Custom camera insert for optional KODAK EASYSHARE Camera and Printer Docks

System Requirements

WINDOWS

MACINTOSH

Hardware

WINDOWS XP OS or later

MACINTOSH OS X 10.3 +

INTERNET EXPLORER 6.0 or higher

SAFARI 1.1 +

- 600 MHz proc+
- 128 MB RAM
- 200MB HDD space available
- CD-ROM drive
- Available USB port
- Color monitor, 800 x 600 display resolution, 16-bit minimum

[wg03_1]

* 32 MB internal memory/19 MB available for picture storage (1 MB equals one million bytes).

** ISO 6400 available in manual mode at 3.1 MP setting and less.

*** For optimal viewing of HD videos visit www.kodak.com/go/hdsysreq for additional information.