

Life. Camera. Action!



ACTIVEON
ACTION CAMERA



www.activeon.com

English
Startup Guide

Inside the Package



. ACTIVEON-CX GOLD



. Waterproof Housing



. Opened Backdoor



. Curved Adhesive Mount



 
. Short Connector



. Screw



. Rechargeable
Battery



. USB Cable



. microSD Card

Start using your ACTIVEON camera -

1 Insert a micro SD Card on micro SD Card slot.

- * Note 1. Use Class 10 memory cards only.
- 2. The camera does not record when there is no micro SD inside.

2 Insert ACTIVEON Li-ion Battery

- * Note: Please do not use another battery.

3 Press Power/Shutter() and hold for two seconds. The camera will turn on and LCD screen will display live image.



Unlocking touch Screen -




Touch Panel

- When the camera is turned on or when the screen is turned off, the touch screen will be locked.
- If you want to unlock the touch screen, please follow below steps.

1. Tap the screen first.
2. Lock image will appear on the screen.
3. Tap and hold the "Lock image" until the live screen is ready.

Changing between modes -

- Press the () button to switch mode.
- Mode changes as
(Video > Photo > Playback > Setup) in turn.

1. Video mode : Recording video.



2. Photo mode : Taking a photo.



3. Playback mode :
Playback recorded video and picture.



4. Setup :
Adjust Video/ Photo mode setting, Effect,
and General setting option value.



*Note : For entering the playback and setup mode. Please press select button when playback and setup icons are displayed.

Using the Waterproof Housing -

Changing the Backdoor

Hold the waterproof housing body, and plug in metal frame of back-door into the hinge of housing body. Please move back and forth to check whether back-door is attached properly.

※ When detaching the backdoor, simply pull it out from the hinge of the housing body.




Waterproof Backdoor & Check the Waterproof O-Ring


Completely sealed with waterproof rubber O-ring up to 196ft (60m)

※ Housing is NOT waterproof if the O-ring is not sealed to the backdoor.

※ Warranty does not cover any damage caused by leaks in the housing.

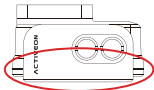

Correct Sealing (O)

 

Incorrect Sealing (X)

Connecting to the ACTIVEON App -

- By utilizing WiFi APP function of ACTIVEON, users can control the camera with a smartphone.
- Compatible with iOS and Android OS.
- Before connecting the camera, download 'ACTIVEON' application from smartphone app store.
- Search for 'ACTIVEON' in Apple App Store or Google Play Store.

On your Camera

- 1) Turn on 'WiFi APP' function on ACTIVEON CX GOLD.
- 2) The Camera screen will display "Waiting for connection"

On your Smartphone

- 1) On your smartphone or tablet, turn the WiFi on and select the network CXG-xxxxxx.
- 2) Default password is '1234567890'.
- 3) Run 'ACTIVEON' app on your smartphone or tablet.
- 4) Press 'Connect ACTIVEON' on the app. You can now control your ACTIVEON camera.

