

Battery installation

- Make sure the toy is switched OFF (if applicable).
- Use a screwdriver to open the battery cover located at the bottom of the toy.
- Install the required batteries according to the diagram inside the battery compartment. Alkaline batteries are recommended.
- Replace and secure the battery cover.
- Batteries must be installed and replaced by an adult.

BATTERY INSTRUCTIONS

- Be sure to insert batteries in the correct polarity positions.
 - Use only batteries of the same or equivalent type as specified.
 - Never mix old and new batteries. Replace all batteries at the same time.
 - Do not mix alkaline, standard and rechargeable batteries together in the battery compartment. Use only one battery type.
 - Do not use rechargeable batteries in this product.
 - Do not attempt to recharge non-rechargeable batteries.
 - Promptly remove exhausted batteries from the product.
 - Remove batteries from product before extended storage or product disposal.
 - Do not dispose of batteries in fire; batteries may explode or leak.
 - To prevent short-circuit of battery terminals, keep battery compartment free of all materials except batteries.
 - Do not throw batteries in household garbage; dispose of them at battery collection stations or special garbage sites.
 - Never leave button-cell batteries within reach of young children.
 - Batteries are harmful if swallowed, so keep them away from young children.
- ATTENTION: Batteries should be installed only by an adult.

CARE AND MAINTENANCE


- Keep the unit out of direct sunlight and away from any direct heat source.
- If the toy suddenly stops working, the voice becomes faint or the sound seems weak, the problem may be low battery power. If this is the case, install a new set of batteries before use.

This sheet contains important information.
Please keep all information for future reference.



This symbol, affixed to the product or its packaging, indicates that the product must not be processed with household waste. It must be brought to an electric and electronic waste collection point for recycling and disposal. By ensuring the appropriate disposal of this product you also help in preventing potentially negative consequences for the environment and human health. The recycling of materials helps preserve our natural resources. For further information regarding the recycling of this product, please contact your municipality, local waste disposal centre or the store where the product was purchased.

During the replacement of your used batteries, we request that you follow the current regulations as to their elimination. We thank you for depositing them in a location foreseen for that purpose to ensure their elimination in a sure manner and with respect for the environment.

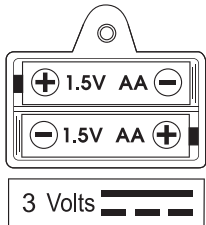

Uses 2 "AA" size (UM3/LR6) batteries.
Alkaline batteries are recommended.
COLOR AND DESIGN MAY VARY.
PRODUCT SPECIFICATIONS SUBJECT TO
CHANGE WITHOUT PRIOR NOTICE.



Made in / Hecho en CHINA. Distributed by Kmart Corporation, Hoffman Estates, IL 60179
Check out the entire line of Just Kidz toys at Kmart.com

JUST
KIDZ®



OWNER'S MANUAL

i-Fun Pad

CAUTION: Suitable for children aged 12 months and up
Product code: 0-05372462-1
UPC code: 840172000787

Date of purchase: ____/ ____/ ____



Diagram:

- 1) Power / Volume switch
- 2) Modes Switch
- 3) Battery compartment (back)

How to start the unit

Slide the power switch to for low volume or for high volume.
To turn the unit off, slide the switch to Off position.

Activities / Games

Mode 1 (Letter learning)

When you press a button in mode 1:

- Press once: To hear the name of alphabets or shapes.
- Press twice: To hear the fun sound effects of the characters.
- Press three times: To hear the name of the characters and fun sound effects.

If you do not press any button for about 30 seconds, the i-Fun Pad will ask you a question.

Mode 2 (Vocabulary learning)

When you press a button in mode 2:

- Press once: To hear the name of characters and some fun sounds.
- Press twice: To hear the fun sound effects of the characters following by a sentence "A is for Apple".
- Press three times: To hear the spelling of the characters and some fun sounds.

If you do not press any button for about 30 seconds, the i-Fun Pad will ask you a question.

Mode 3 (Music Fun)

When you press a button in mode 3:

- Press once: To hear the fun sound of the character.
- Press twice: To hear a simple sentence containing the names of the characters followed by some fun sounds.
- Press each of the 4 shapes to hear a different melody.

If you do not press any button for about 30 seconds, the i-Fun Pad will say "Let's play music."