

---

# Use and Care Guide

## Parkside Wicker Gazebo

Product Code: D71 M48451

KSN: 0-01685251-9

UPC Code: 749241316975

Date of purchase: \_\_\_\_/\_\_\_\_/\_\_\_\_

## Thank you for your purchase

---

### Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

## Table of contents

---

<b>Table of Contents</b> .....	2
<b>Safety Information</b> .....	3
Set Up your Shelter Properly .....	3
Examine your Shelter .....	3
 <b>Warranty</b> .....	3
Excluded .....	3
Service Center .....	3
<b>Care and Maintenance</b> .....	4
 <b>Pre-Assembly</b> .....	5
Hardware Included .....	5
Package Contents .....	6
 <b>Assembly Instructions</b> .....	9
 <b>Customer Service</b> .....	20

## Safety Information

---

### SET UP YOUR SHELTER PROPERLY

- ☐ Please read and understand this entire manual before attempt to assemble, operate, or install the product.
- ☐ If any part is missing or damaged. Do not attempt to assemble the product.
- ☐ Two to four people are needed for assembly.
- ☐ In order to avoid damage to the gazebo and its components please use appropriate tools.
- ☐ Do not use the structure as support.
- ☐ Check all screws on a regular basis to maintain the solidity of the structure.
- ☐ Keep instruction for future use.
- ☐ Approximate time: 2 - 4 hours

### EXAMINE YOUR SHELTER

- ☐ Examine occasionally to ensure there are no loose parts. If loose parts are found, they must be retightened fully immediately.

## Warranty

---

### 1 YEAR WARRANTY FOR FRAME AND FABRIC

Limited warranty is applicable on parts only. Warranty extends solely to the original purchaser who must offer original sales receipt for record.

### WHAT IS COVERED

Limited warranty is applicable on parts only. We warranty to the original purchase for one year limited from the date of purchase that the frame and fabric will be free from manufacturing defects.

### WHAT IS NOT COVERED

Product used for commercial, contract, or other non-residential purposes, or damage due to acts of nature, vandalism, misuse, or improper assembly is not covered. Corrosion or rusting of hardware is not covered. Warranty is to the original purchase and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued.

### SERVICE CENTER

The purchaser must contact our customer service center directly if this product is found to be defect in material or workmanship. The manufacturer, as its option, will repair or replace the defectives parts.

Please contact us via 1-800-961-9838, 9AM-5PM, Pacific Time Zone, Monday-Friday, or [customerservice@bondvast.com](mailto:customerservice@bondvast.com)

## Care and Maintenance

---

- ❑ For cleaning, use a mild detergent solution, rinse with water, and allow to air dry. Do not use acetone, abrasive, or other special detergents as they would be harmful to the product's finish.
- ❑ Due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched.

## Warning

---

### **WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.**

The tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

This gazebo is intended for decorative and sunshade purposes only and is not meant to withstand inclement weather including high winds, rain and snow. Gazebo fabric is water resistant, not water proof and may leak during exposure to precipitation.

**Load of the hook on the roof: 50lbs (MAX). Please don't hang fan or any other working items on the hook.**

## Pre-Assembly

### PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly.

 
Tools required for assembly (not included): Allen wrench (included), a screwdriver, stepladder (min. 5ft.) and other safety items such as gloves, safety eyewear, and hardhat. To avoid injury from exposed sharp edges, it may be necessary to use the above safety equipment.

Do not leave it unattended if not fully assembled even if bolted to the ground.


### HARDWARE INCLUDED




**NOTED:** Hardware not shown to actual size.



\_\_AA

 

\_\_BB

 

\_\_CC



\_\_DD




\_\_FF

Part	Description	Size	QTY.
AA	BOLT	(Φ 6 x 15mm)	48
BB	BOLT	(Φ 6 x 35mm)	16
CC	BOLT	(Φ 6 x 20mm)	8
DD	BOLT	(Φ 6 x 10mm)	16
FF	ALLEN WRENCH		1











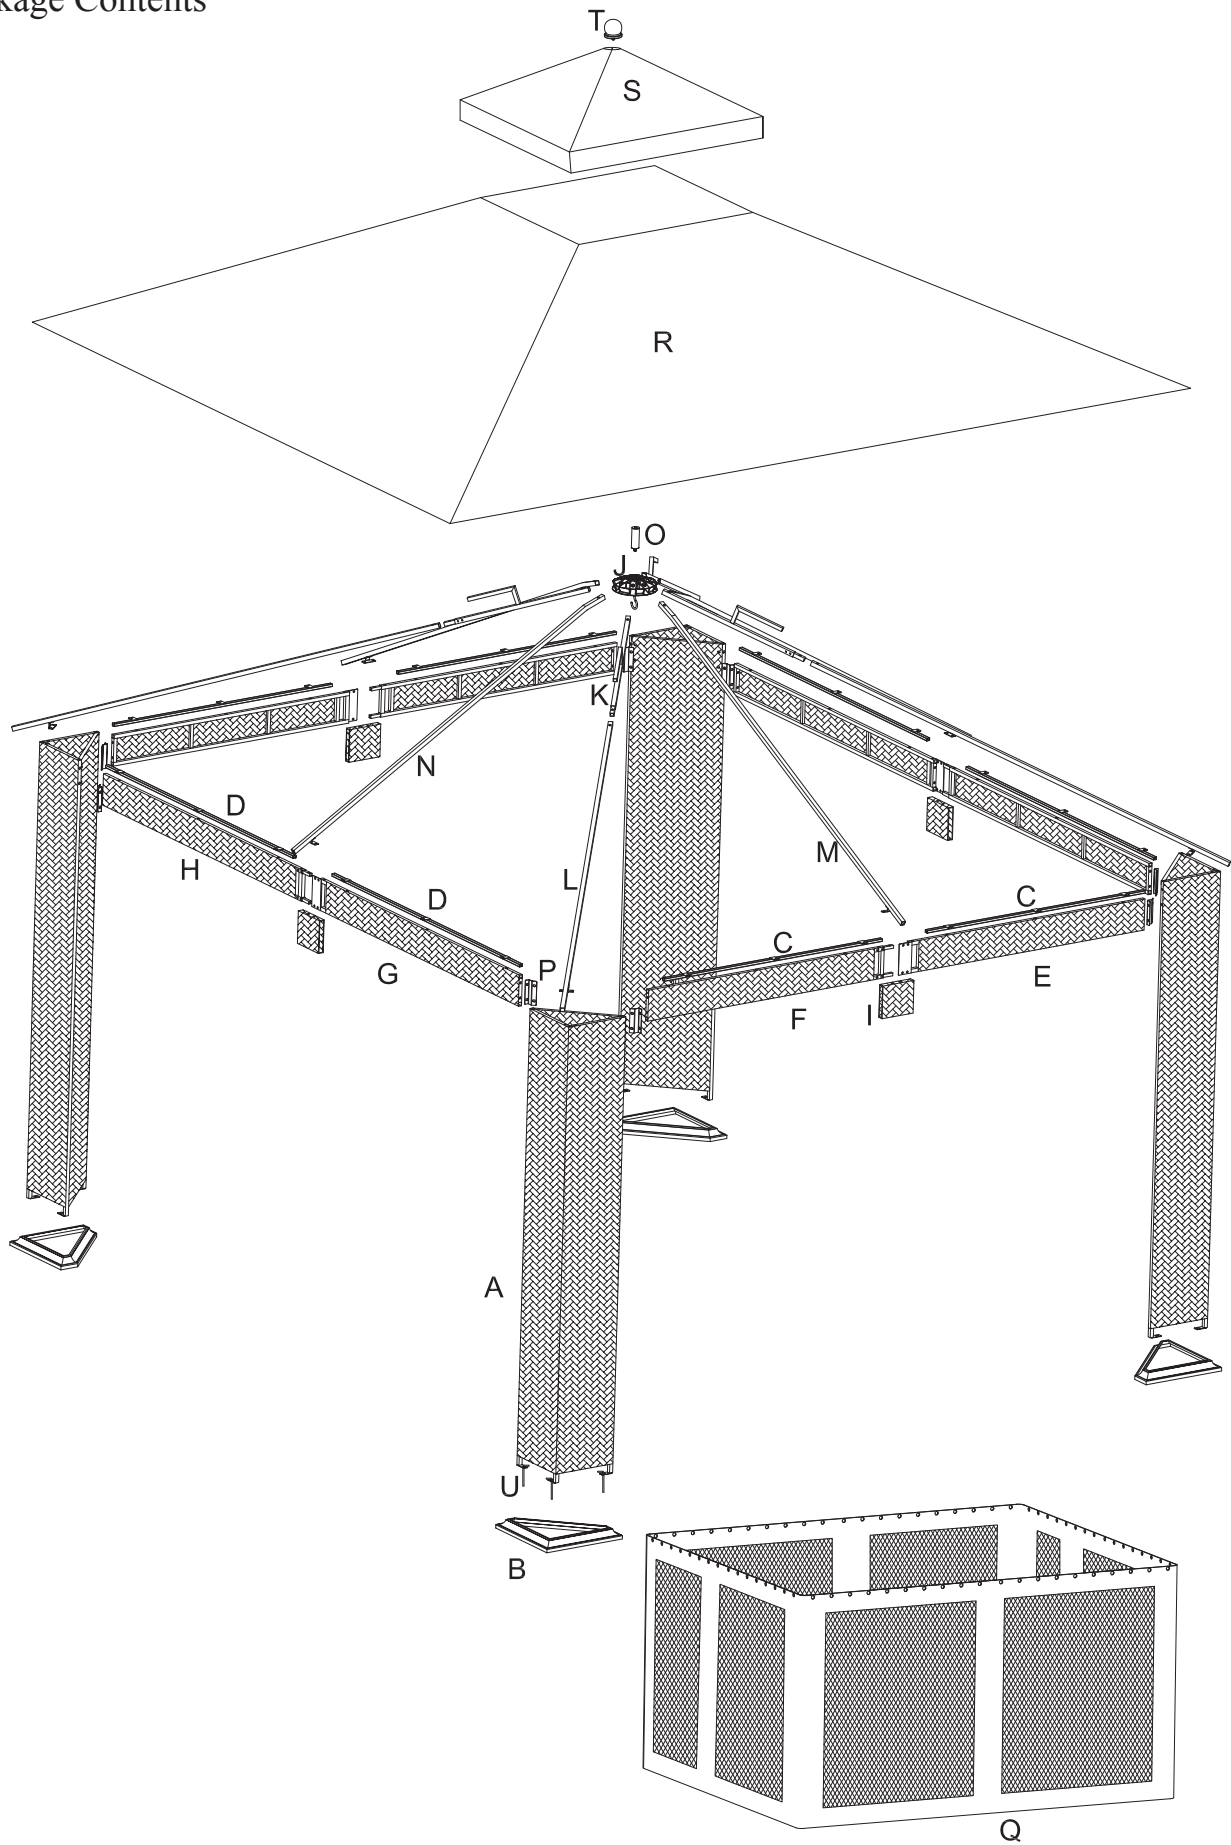 





## Pre-Assembly (continued)
  
### Package Contents

    



 


## Pre-Assembly (continued)

### Package Contents

ITEM	DESCRIPTION	QTY.	ILLUSTRATION
A	Post	4	
B	Base Cap	4	
C	Short Rail	4	
D	Long Rail	4	
E	Short Crossbar	2	
F	Short Crossbar	2	
G	Long Crossbar	2	
H	Long Crossbar	2	
I	Center Connector	4	
J	Roof Connector	1	
K	Roof Tube	4	
L	Corner Roof Tube	4	
M	Center Roof Tube	2	
N	Center Roof Tube	2	
O	2-tier Roof Tube	1	
P	Fixed Plate	8	
   
## Pre-Assembly (continued)

### Package Contents

ITEM	DESCRIPTION	QTY.	ILLUSTRATION
Q	Insect Net	1	
R	Canopy	1	
S	Air Vent Canopy	1	
T	Finial	1	
U	Stake	12	




## Assembly Instructions

 1. Insert Center connector (I) into Short crossbar (F), then insert Short crossbar (E) into Short crossbar (F) as figure 1 shown. Secure Short crossbar (F) with Short crossbar (E) using Bolt (DD) as figure 2 shown.


Then move Center connector (I) to the center of short crossbar.

Repeat this step for remaining Short crossbar (F) and Short crossbar (E).

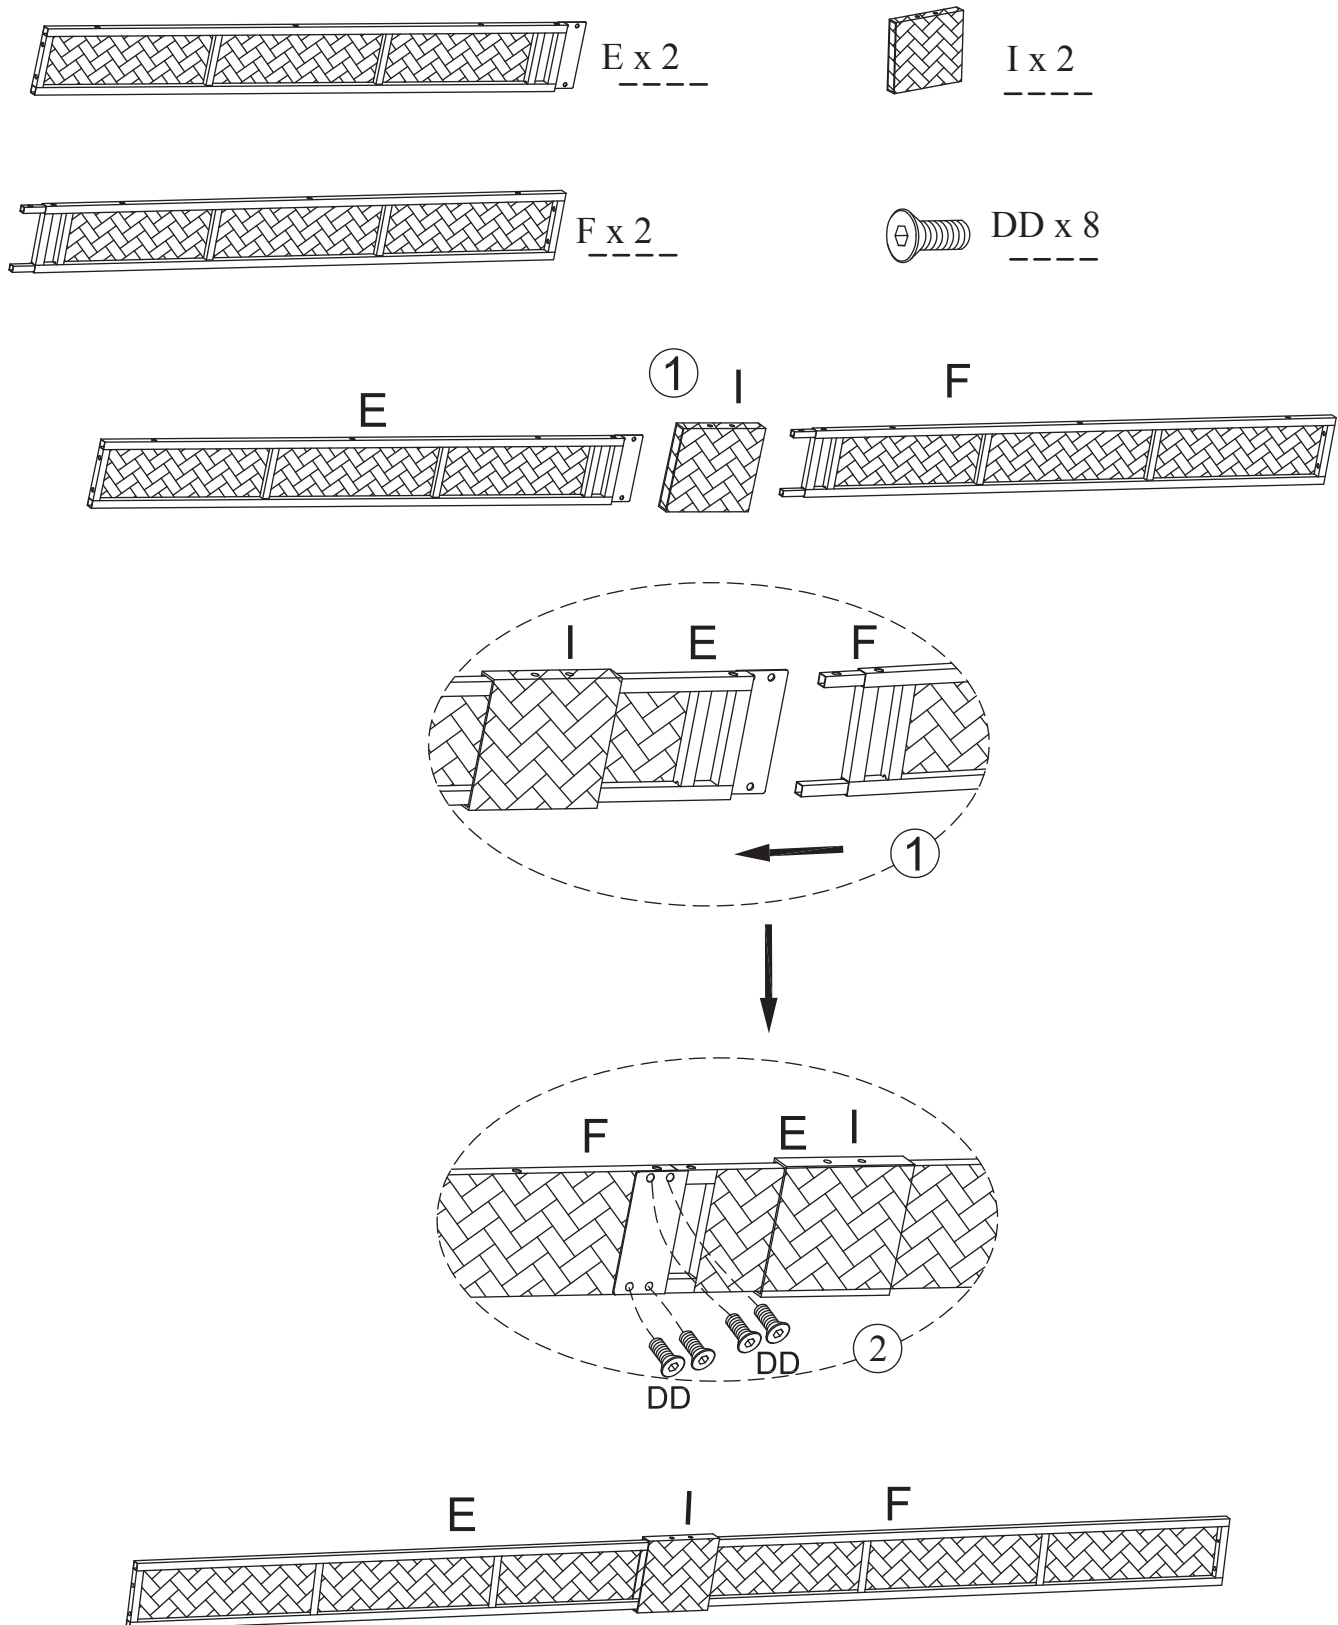




# Assembly Instructions

 2. Insert Center connector (I) into Long crossbar (H), then insert Long crossbar (G) into Long crossbar (H) as figure 1 shown. Secure Long crossbar (H) with Long crossbar (G) using Bolt (DD) as figure 2 shown. Then move Center connector (I) to the center of short crossbar.
- Repeat this step for remaining Long crossbar (G) and Long crossbar (H).

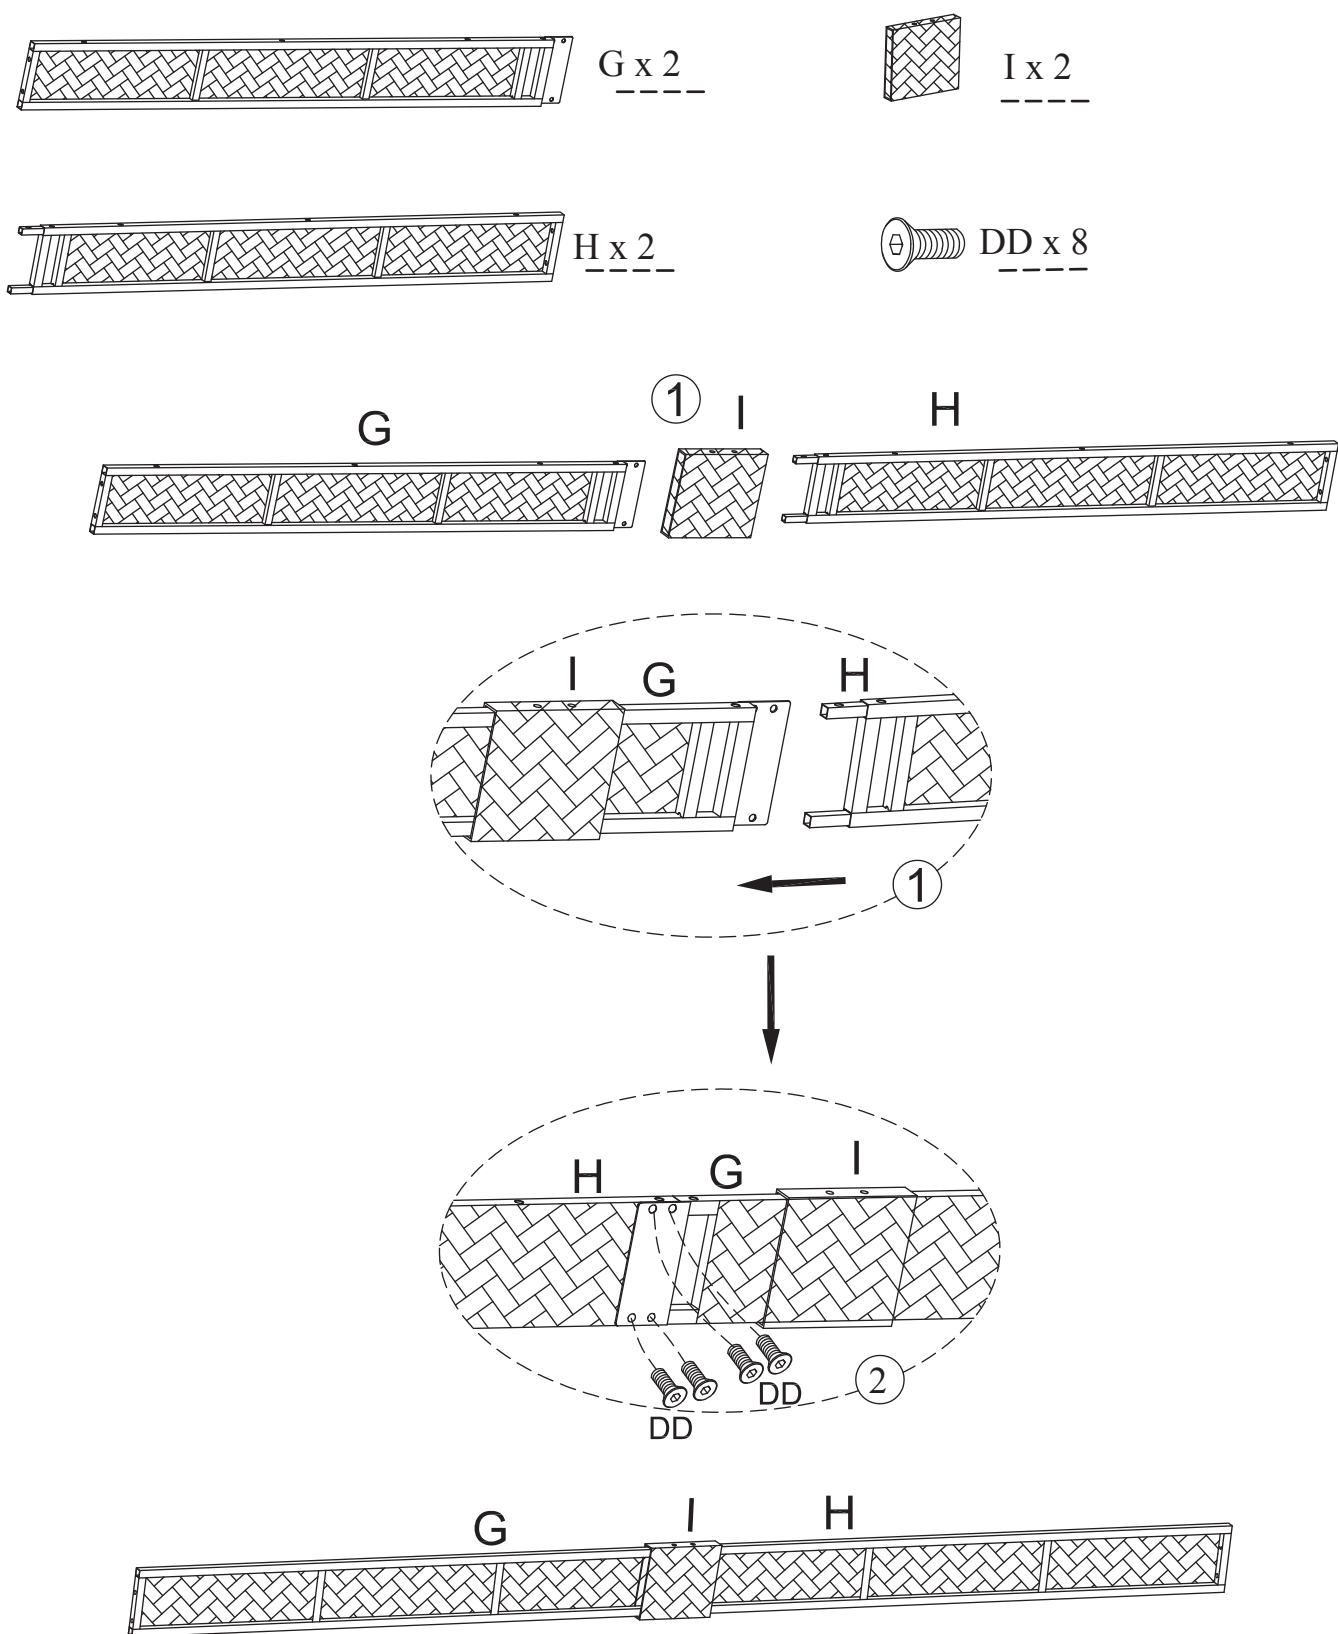




## Assembly Instructions

   3. Secure Short rail (C) on the Short crossbar (E, F) by Bolt (AA). Fully tighten once all bolts on position.

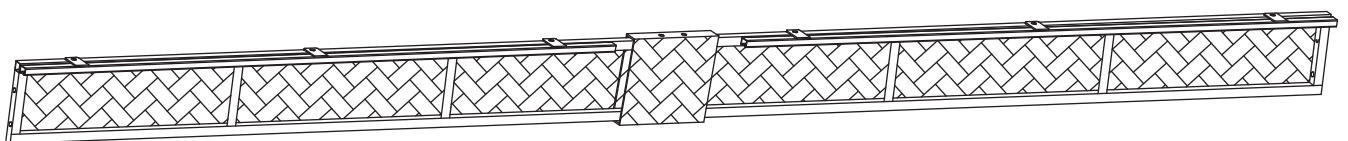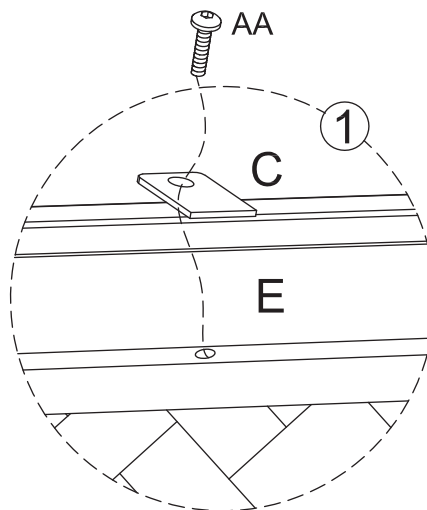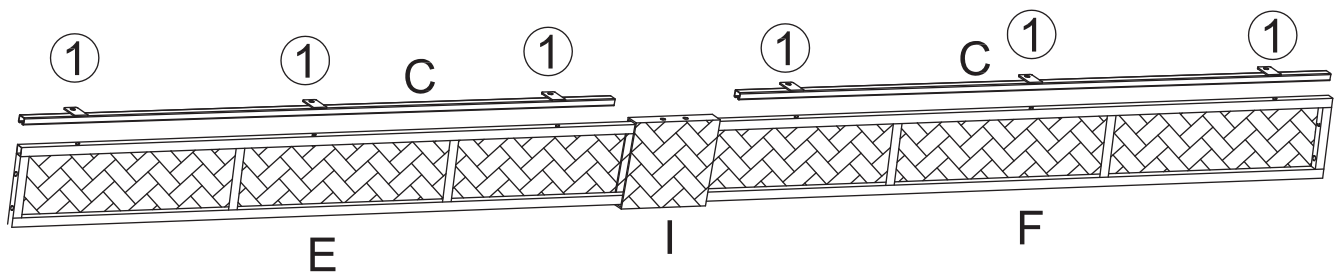



## Assembly Instructions

   4. Secure Long rail (D) on the Long crossbar (G, H) by Bolt (AA). Fully tighten once all bolts on position.

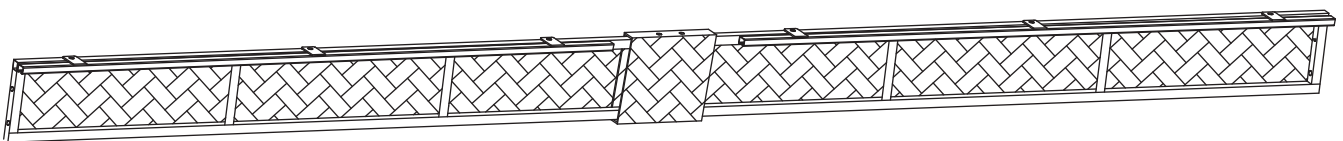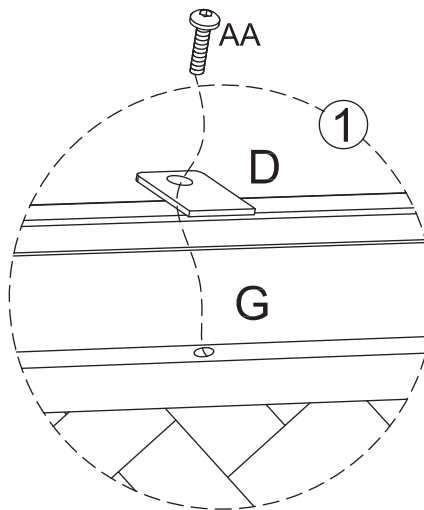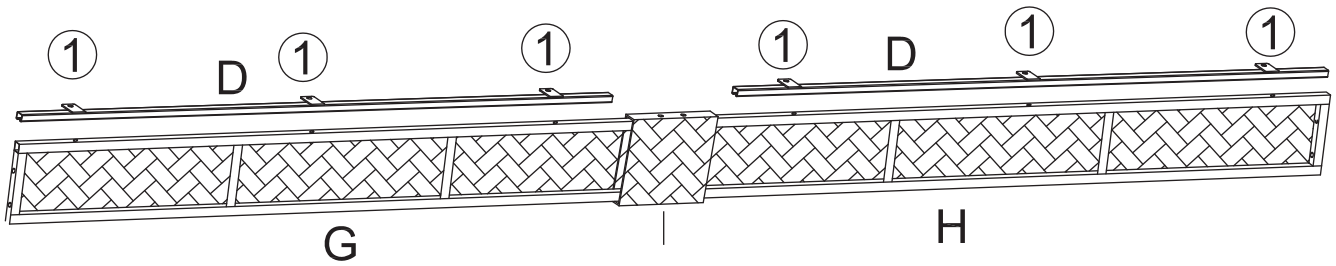




## Assembly Instructions

  5. Secure short crossbar and Post (A) with Fixed plate (P) by Bolt (AA, BB) (see figure 1).  
Fully tighten once all bolts on position.

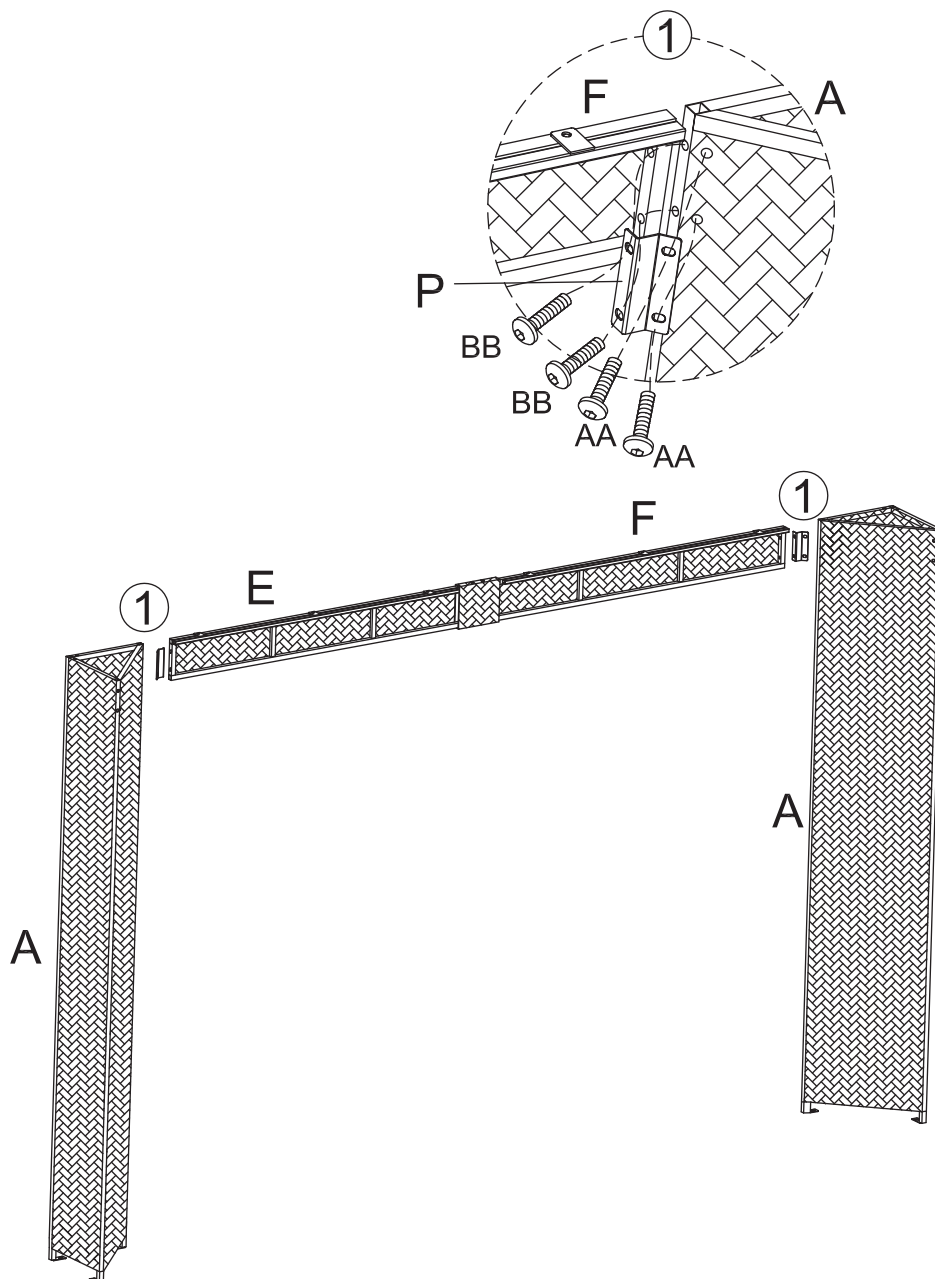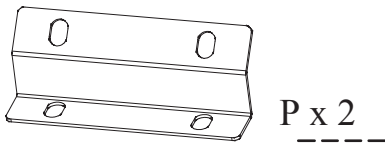




## Assembly Instructions

   6. Secure long crossbar and Post (A) with fixed plate (P) by Bolt (AA, BB) (see figure 1). Fully tighten once all bolts on position.

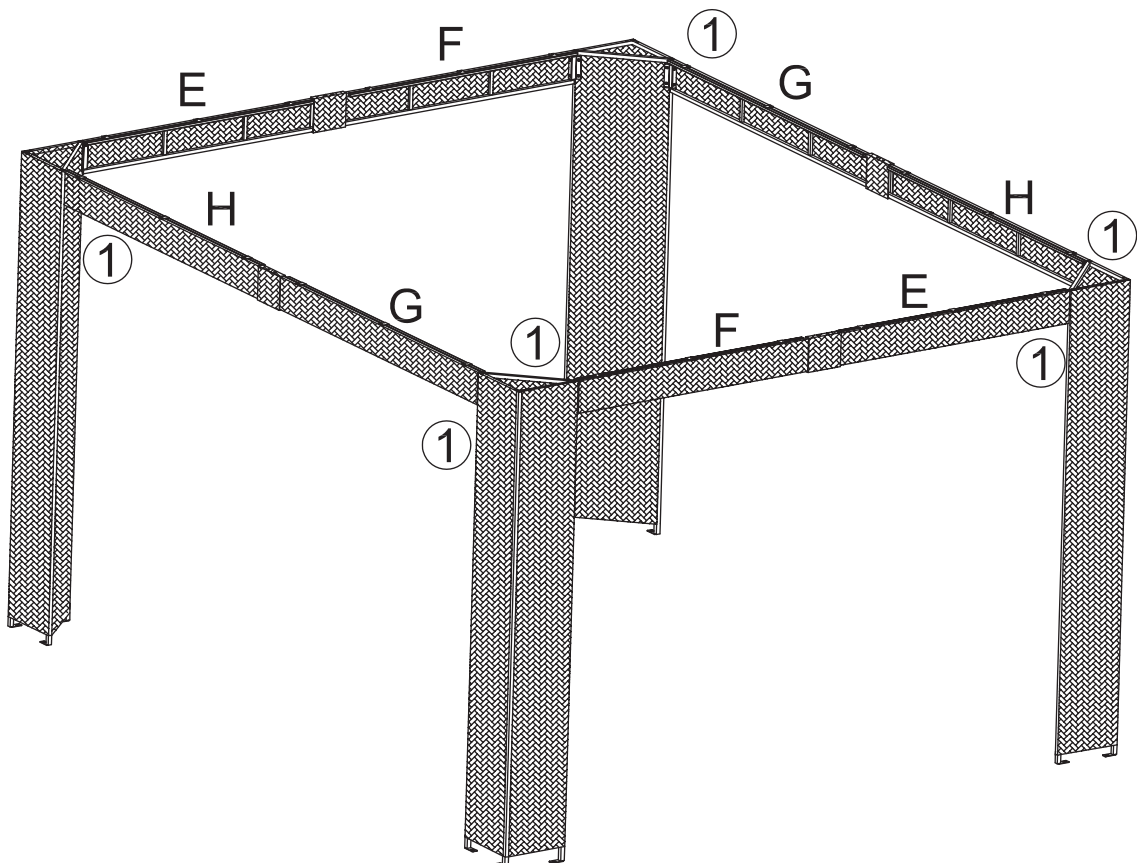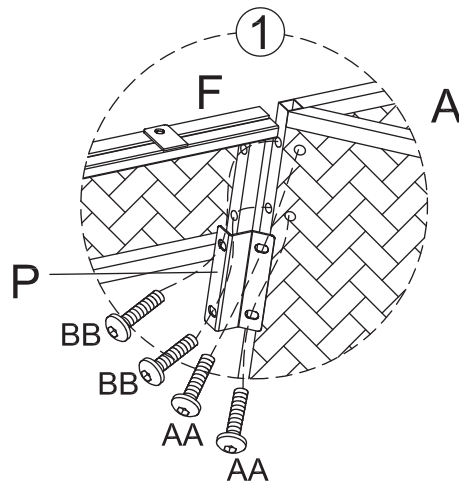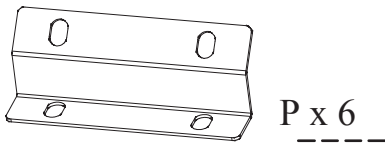

## Assembly Instructions

   
7. Insert Base cap (B) into Post (A).

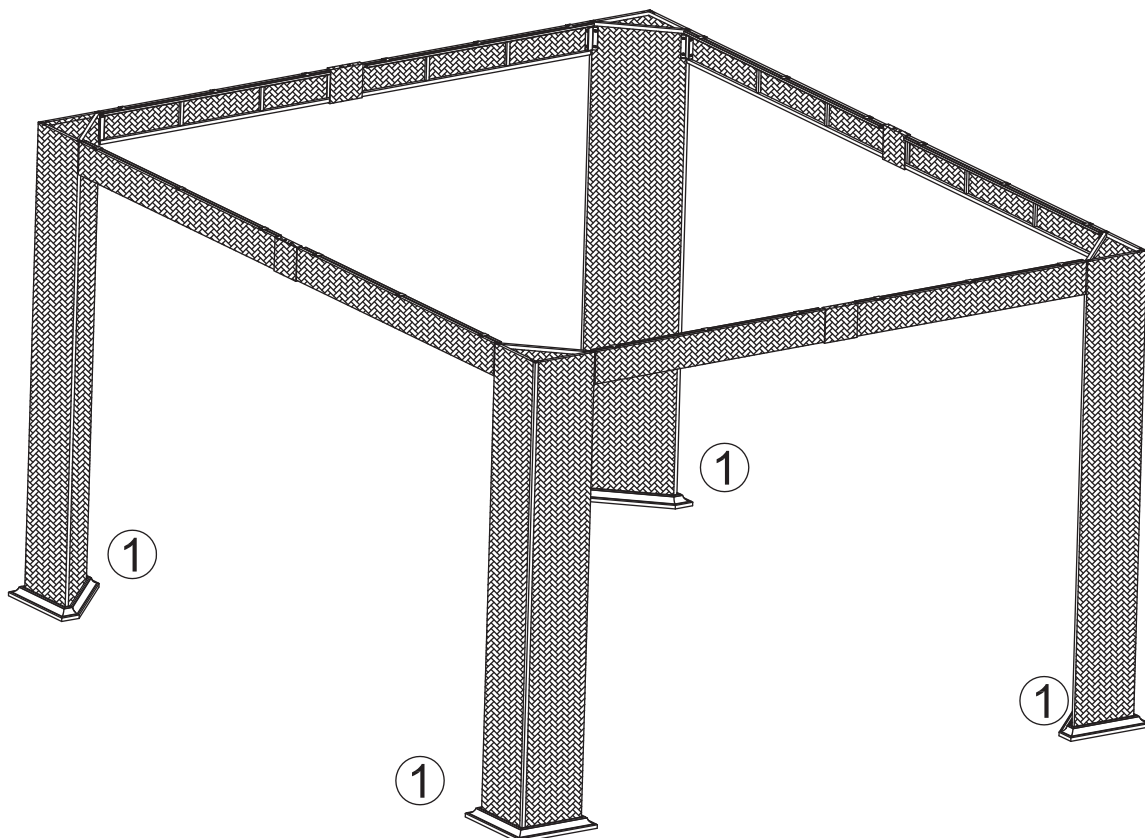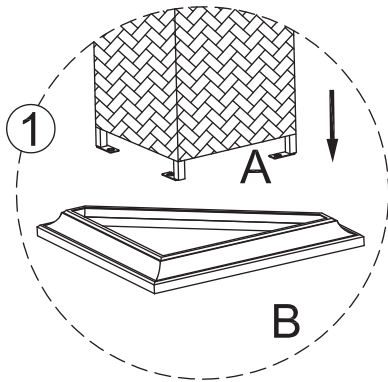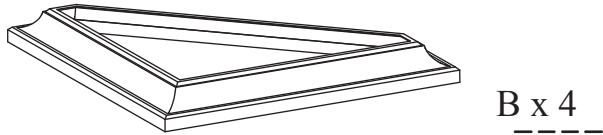




## Assembly Instructions

 8. Insert Roof tube (K) into Corner roof tube (L). Insert another side of Roof tube (K) into Roof connector (J) (see figure 2) then secure another side of Corner roof tube on the top of Post (A) with Bolt (AA).

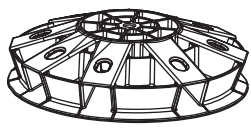

J x 1

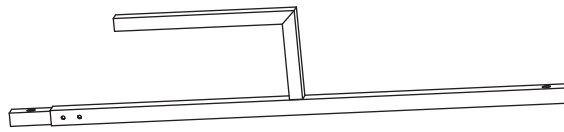 





K x 4



L x 4




 
 
 
 
AA x 8

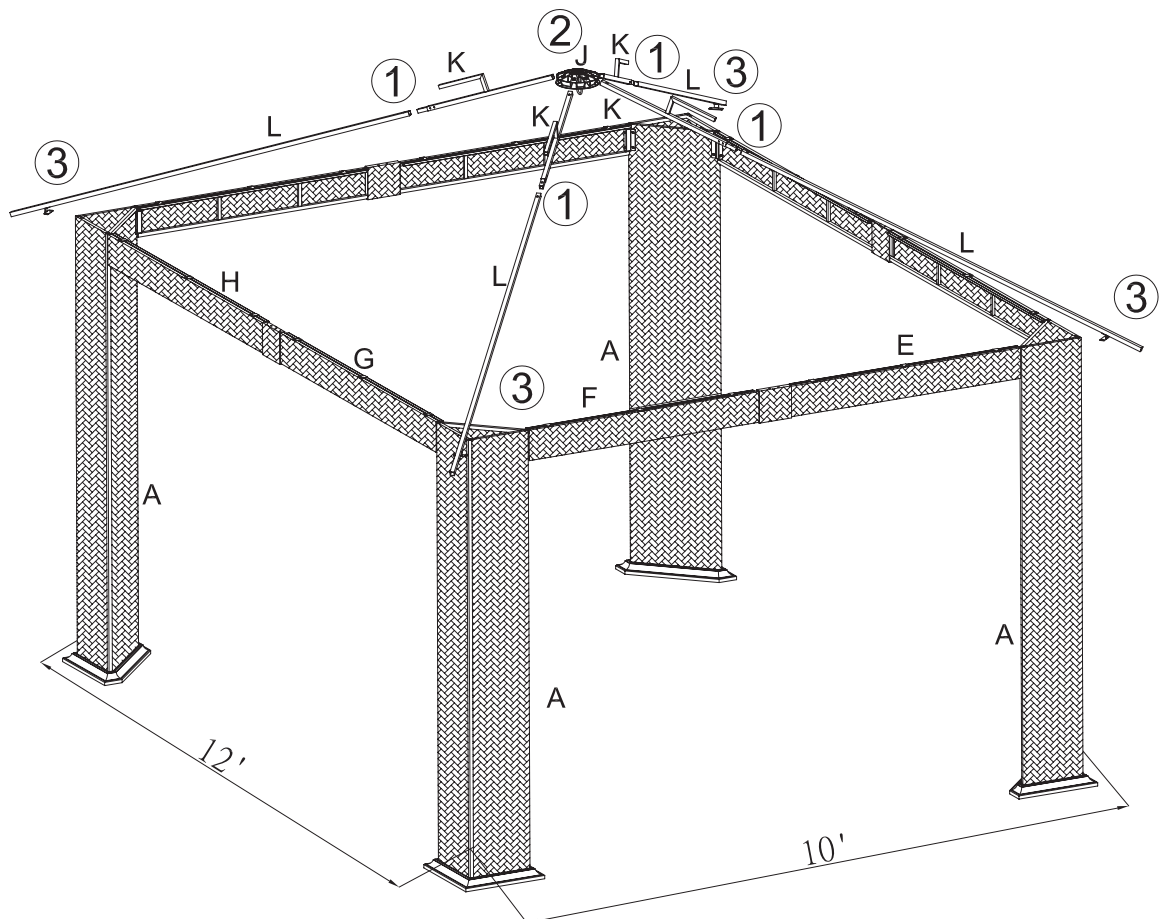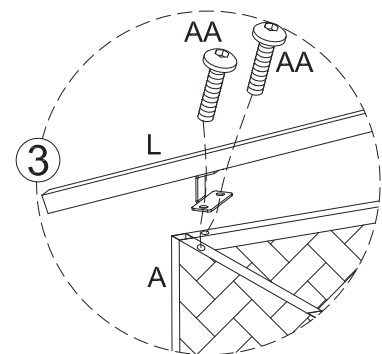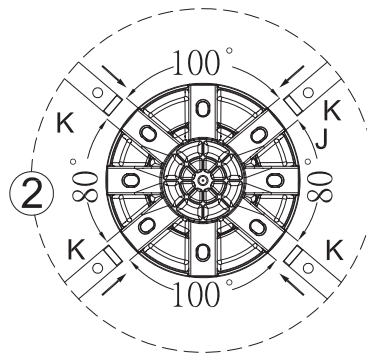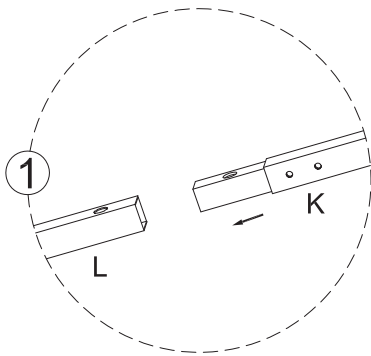




## Assembly Instructions

     9. Insert Center Roof Tube (M), (N) into Roof Connector (J) (see figure 2) and secure another side of Center roof tube (M, N) on the top of Crossbar. Then screw in 2 tier roof tube in the center of Roof connector (J).

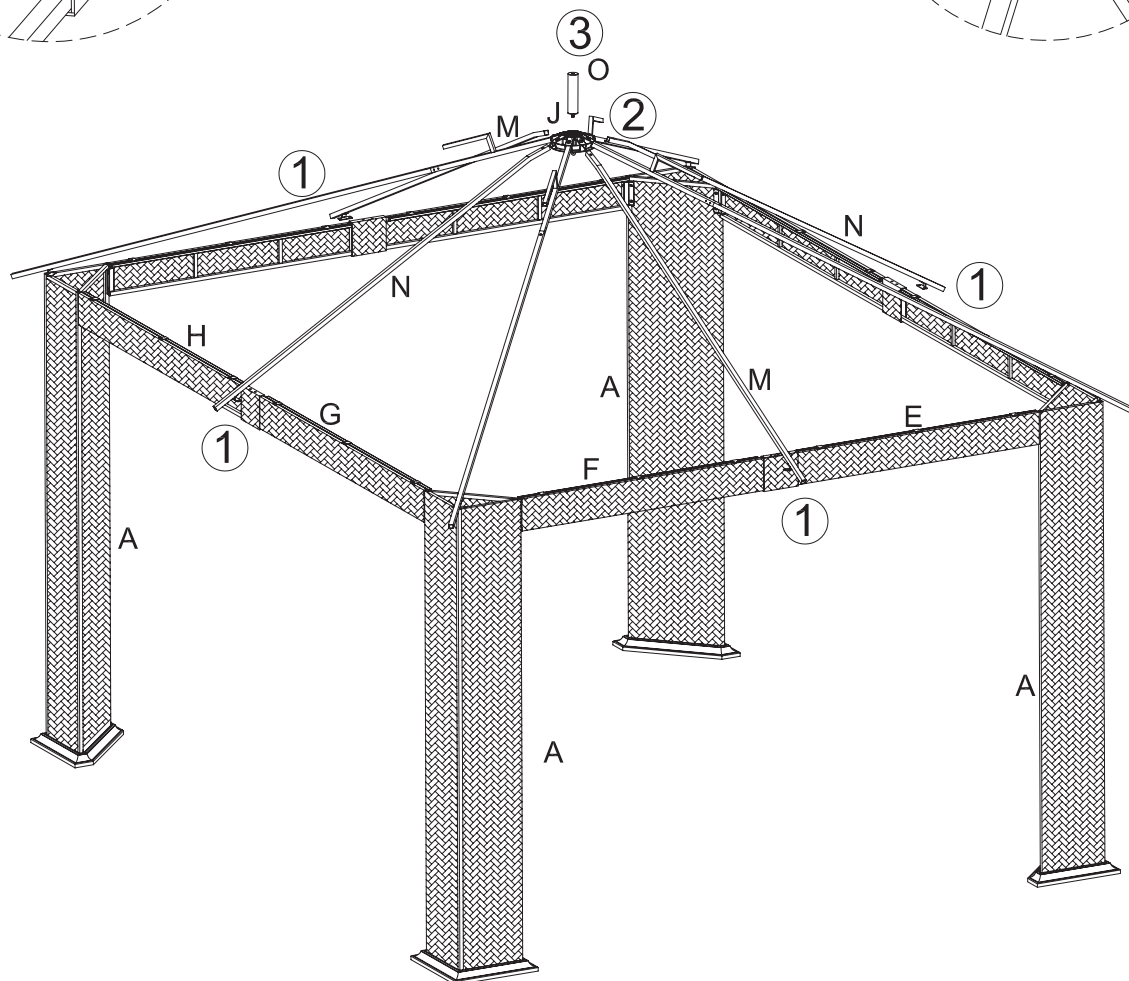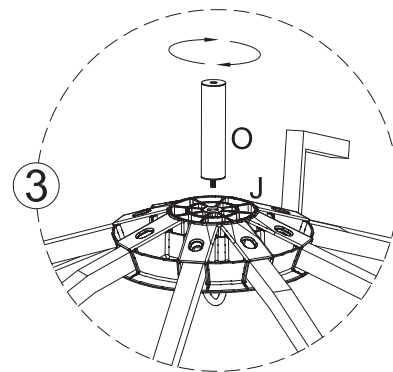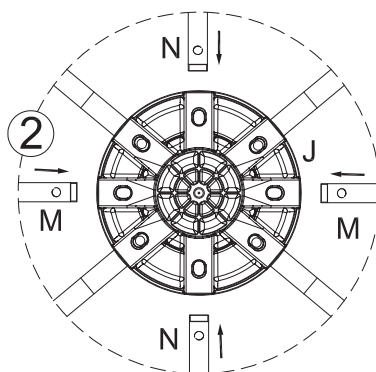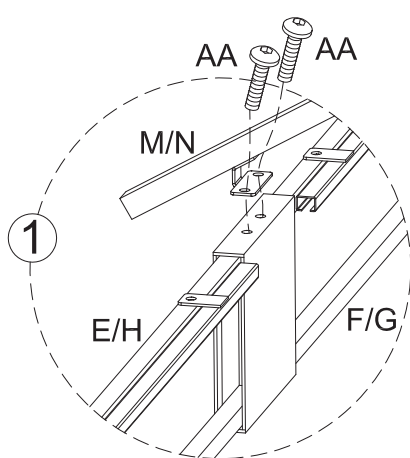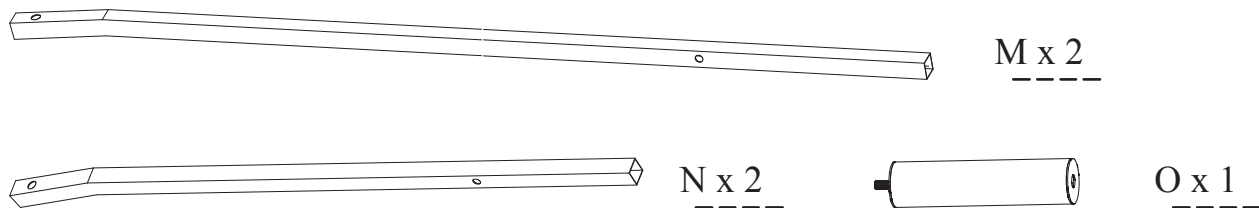


## Assembly Instructions

 
**10.** Place Canopy (R). Secure Finial (T) on Air Vent cover (S) and then place on top of Canopy (R). Place Corner roof tube (L) into Canopy in right position.

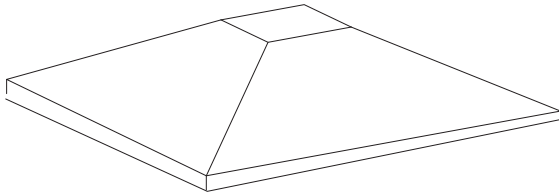


R x 1

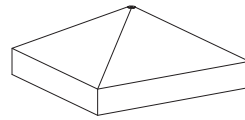 

S x 1

 


T x 1

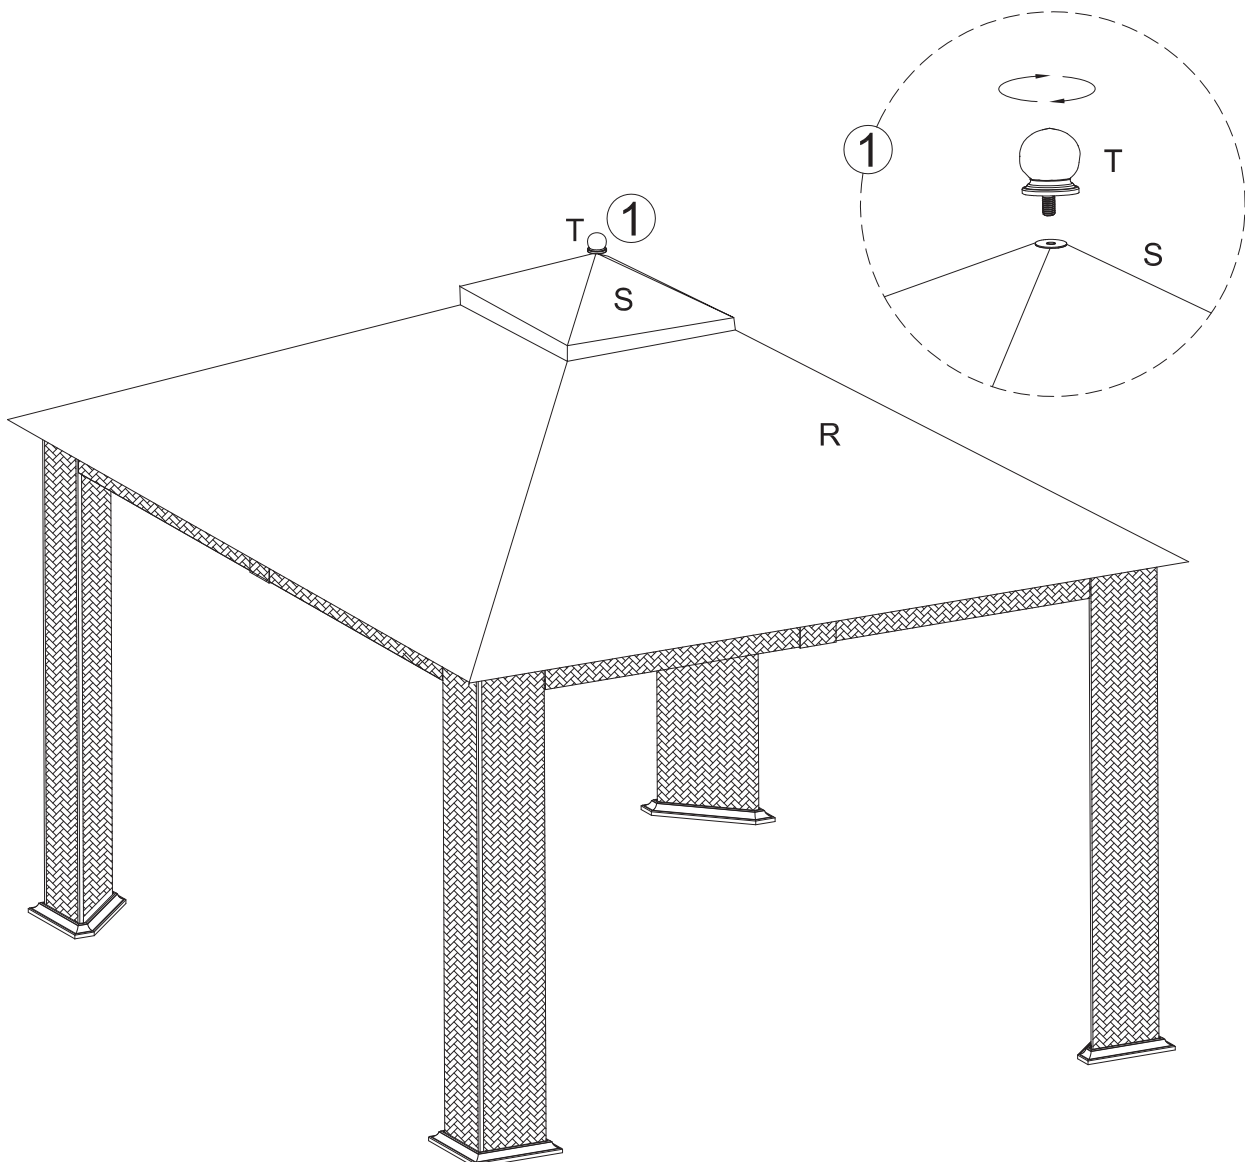 

## Assembly Instructions




 
11. Hang Netting (Q) on the Short Rail (C) and Long Rail (D), then raise Base Cap (B) and secure Stakes (U) into the ground.

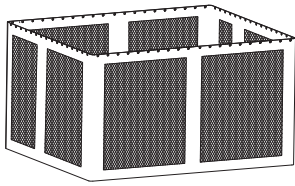

Q x 1



    U x 12

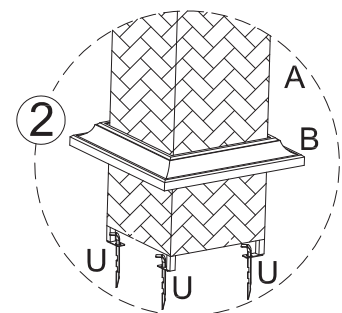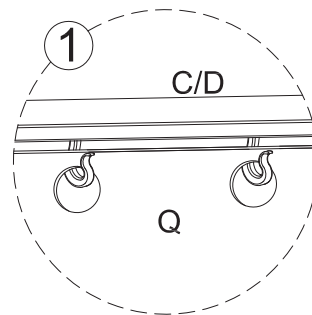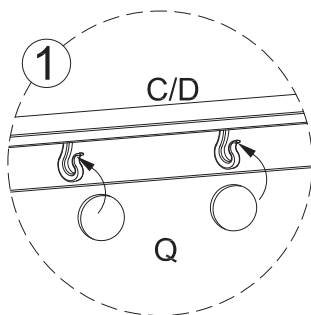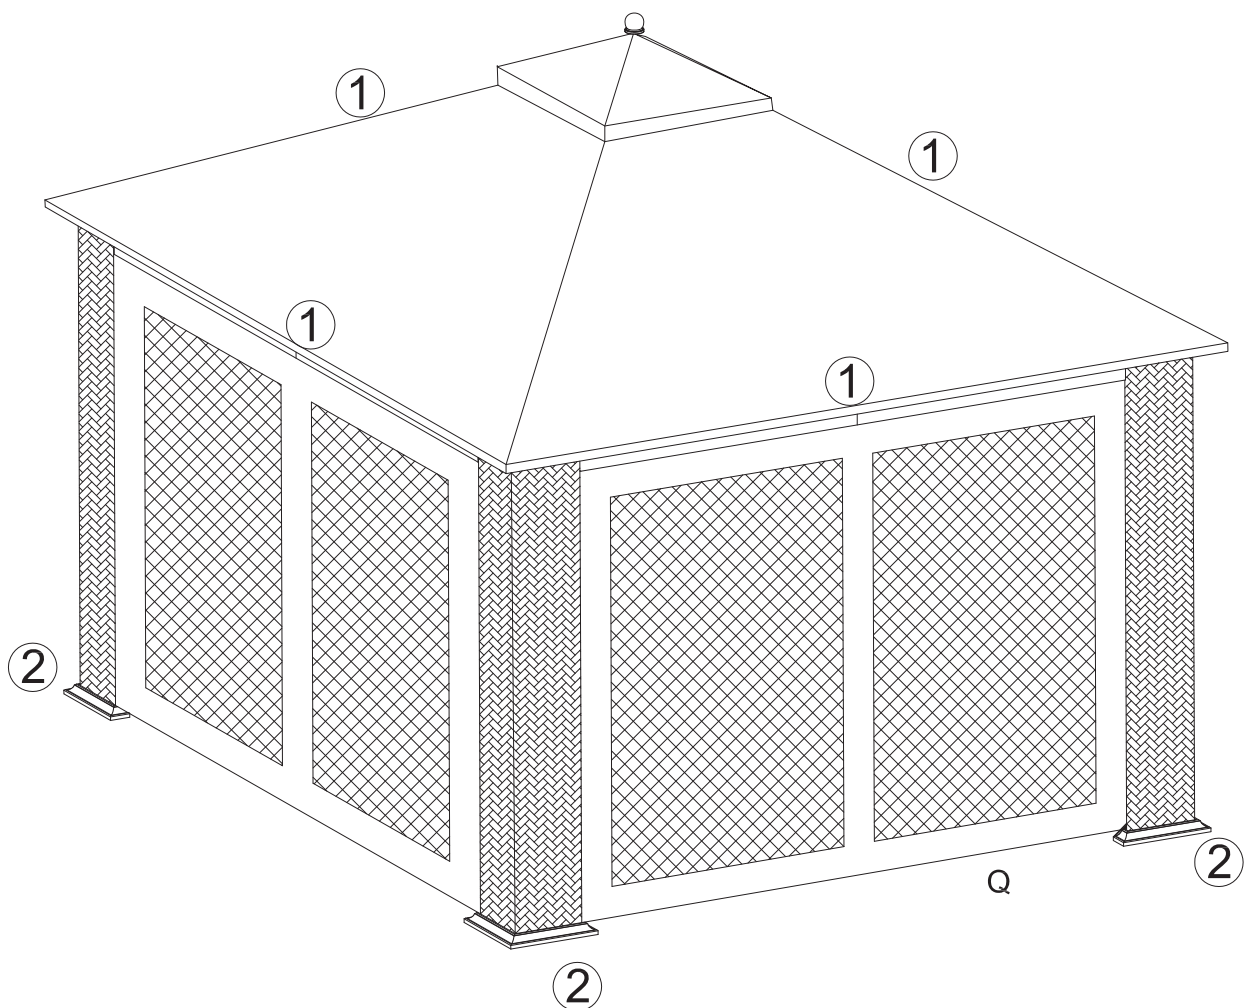



## BOND VAST INDUSTRIAL LIMITED

---



No. 174 Ding Tan Pi Tan Vill Lutsao Hsiang, Chla Yi Hsien, Tai Wan, ROC

FAX: 886-5-3651 522

CUSTOMER SERVICE HOT LINE: 1-800-961-9838

SERVICE HOURS: MONDAY - FRIDAY 9:00AM - 5:00PM (PACIFIC TIME)

E-MAIL: [CUSTOMERSERVICE@BONDVAST.COM](mailto:CUSTOMERSERVICE@BONDVAST.COM)

sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: [customerservice@bondvast.com](mailto:customerservice@bondvast.com) or Call toll-free: 1-800-961-9838

Made in / Hecho en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

[sears.com](http://sears.com)

See our extensive assortment of outdoor living products  
on-line at [www.sears.com](http://www.sears.com) and [www.kmart.com](http://www.kmart.com)