



**REPAIR
PARTS
LIST**

790.89393510

For Parts or Service:

Call

**1-800-4-MY-HOME®
(1-800-469-4663)**

Or Visit

www.sears.com



OVER-RANGE MICROWAVE

In all orders or correspondence, avoid delays and misunderstandings by always giving the complete model number shown on the faceplate located on the left wall inside the microwave cabinet.

All repair parts listed are available for immediate purchase or special order when you visit your nearest Sears Parts & Repair Center, or the Service Department at most Sears stores. To order parts by phone, call the toll-free number listed to the left or visit sears.com.

When requesting service or ordering parts, always provide the following information:

 
- | | |
|----------------|--------------------|
| • Product Type | • Part Number |
| • Model Number | • Part Description |

Sears Brands Management Corporation, Hoffman Estates, IL 60179

Publication number 5995661583

OVEN,CABINET

CAUTION: Use the Kenmore part number to order part, not the illustration number.

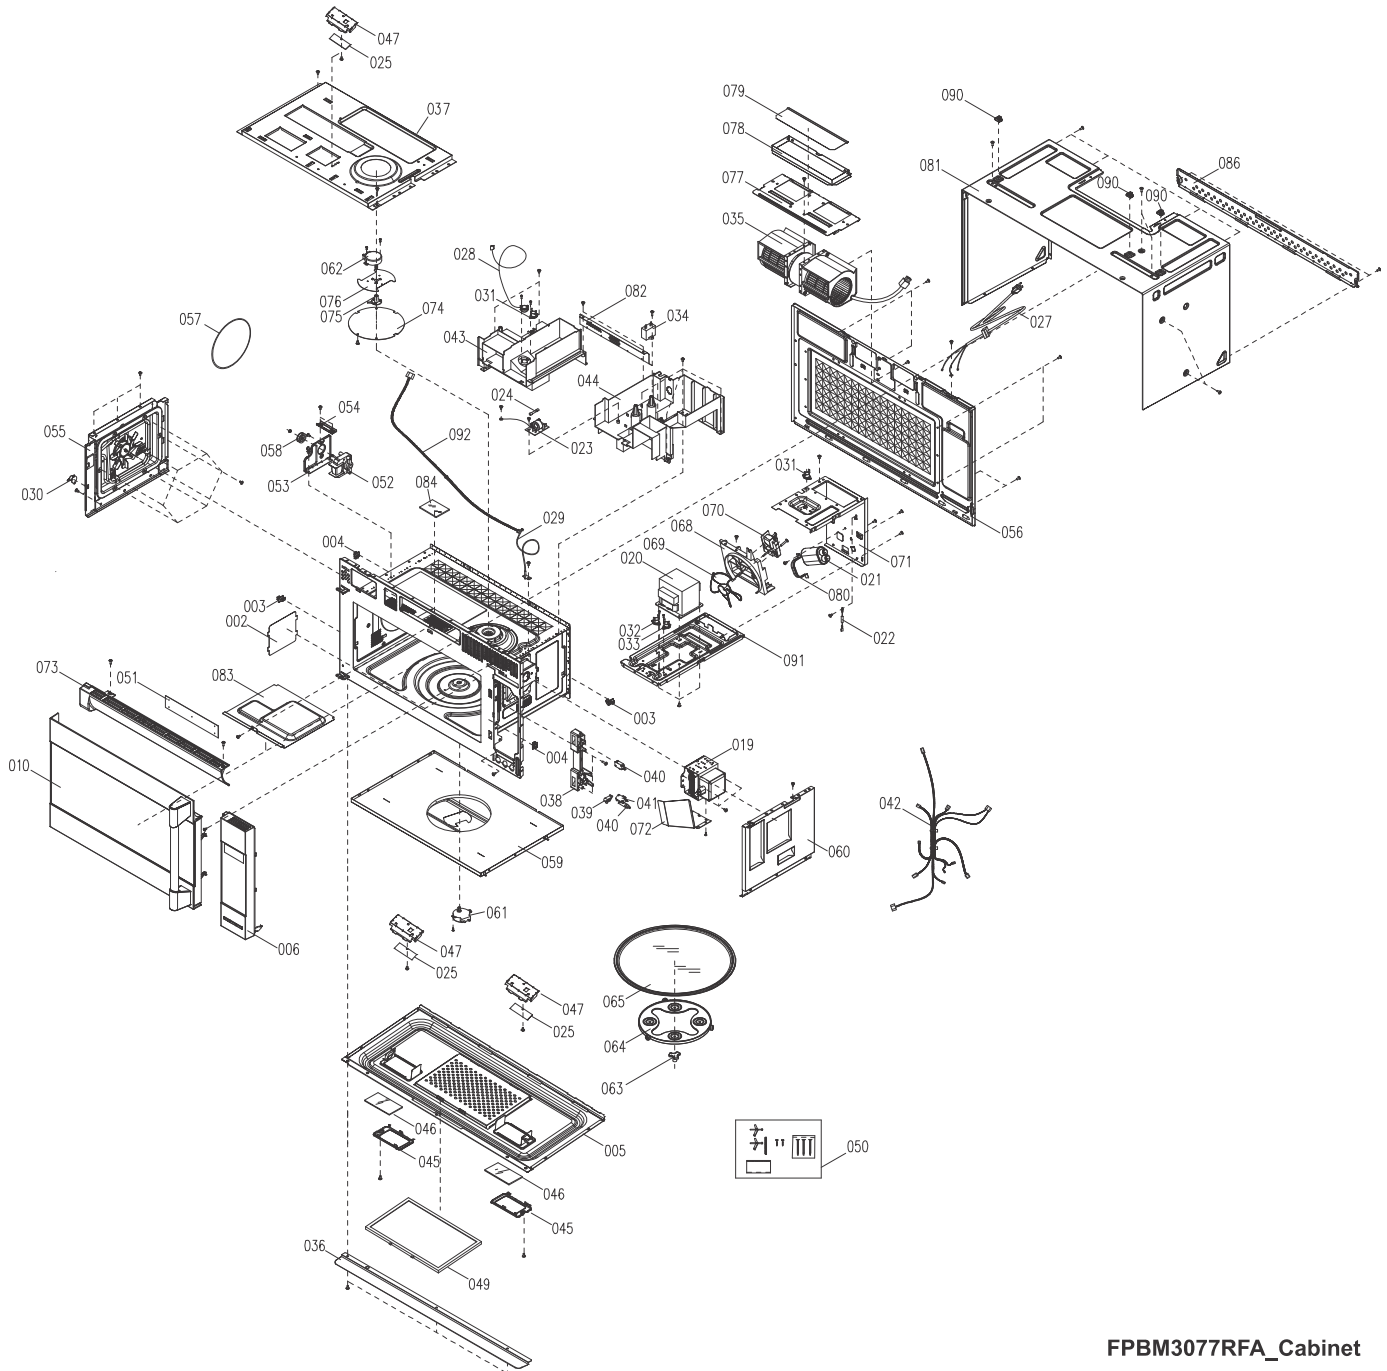


FPBM3077RFA_Cabinet

OVEN,CABINETCAUTION: Use the Kenmore part number to order part, not the illustration number.

POS. NO	PART NO.	DESCRIPTION
002	5304464061	Cover, waveguide
003	5304488341	Support A, shelf, rear
004	5304488342	Support B, shelf, front
005	5304499574	Base, unit chassis
006#	5304502487	Control Assembly, stainless
010#	5304502490	Door Assembly, stainless, w/pcb
019#	5304488355	Magnetron, high voltage
020#	5304488356	Transformer, high voltage
021#	5304488357	Capacitor, high voltage
022#	5304488358	Diode, high voltage
023#	5304499579	Filter, noise, electronic
024#	5304488359	Fuse
025#	5304499540	Lamp Assembly, LED
027#	5304464890	Power Cord, electric
028#	5304481519	Sensor, humidity
029#	5304488361	Thermistor
030#	5304478919	Thermostat, 160/95 *H
031#	5304464073	Thermostat
032#	5304464093	Thermostat, cutout, transformer
033#	5304464094	Thermostat, cutout, vent motor
034#	5304502494	Capacitor, start
035#	5304488362	Fan Assembly, vent, with motor
036	5304502495	Shield, heat, base plate
037#	5304499877	Panel, insulator, upper
038	5304499580	Latch Hook
039	5304464097	Lever, switch
040#	5304464099	Switch, interlock
041#	5304464098	Switch, monitor
042#	5304499581	Wiring Harness, main
043	5304488371	Duct, air guide, left
044	5304488372	Duct, air guide, right
045	5304481505	Frame, lens holder
046	5304464103	Lens, cooktop lamp, glass
047	5304499582	Cover, lamp
049#	5304499583	Filter, grease, washable
050	5304488378	Mounting Kit, with templates
051#	5304488379	Filter, air, charcoal
052#	5304488380	Motor, convection fan
053	5304488381	Bracket, motor mount
054	5304488382	Connector, motor/bracket
055#	5304499599	Convection Fan Assembly
056	5304488384	Panel, cabinet back
057#	5304502502	Belt, convection fan
058#	5304488386	Pulley, fan motor
059#	5304499878	Panel, insulator, bottom
060	5304488388	Panel, insulator, right side
061#	5304464113	Motor, turntable
062#	5304488389	Motor, stirrer fan
063	5304499600	Coupler, turntable/motor
064	5304488390	Support, turntable ring
065	5304463319	Turntable, tray, glass

OVEN,CABINET

 CAUTION: Use the Kenmore part number to order part, not the illustration number.

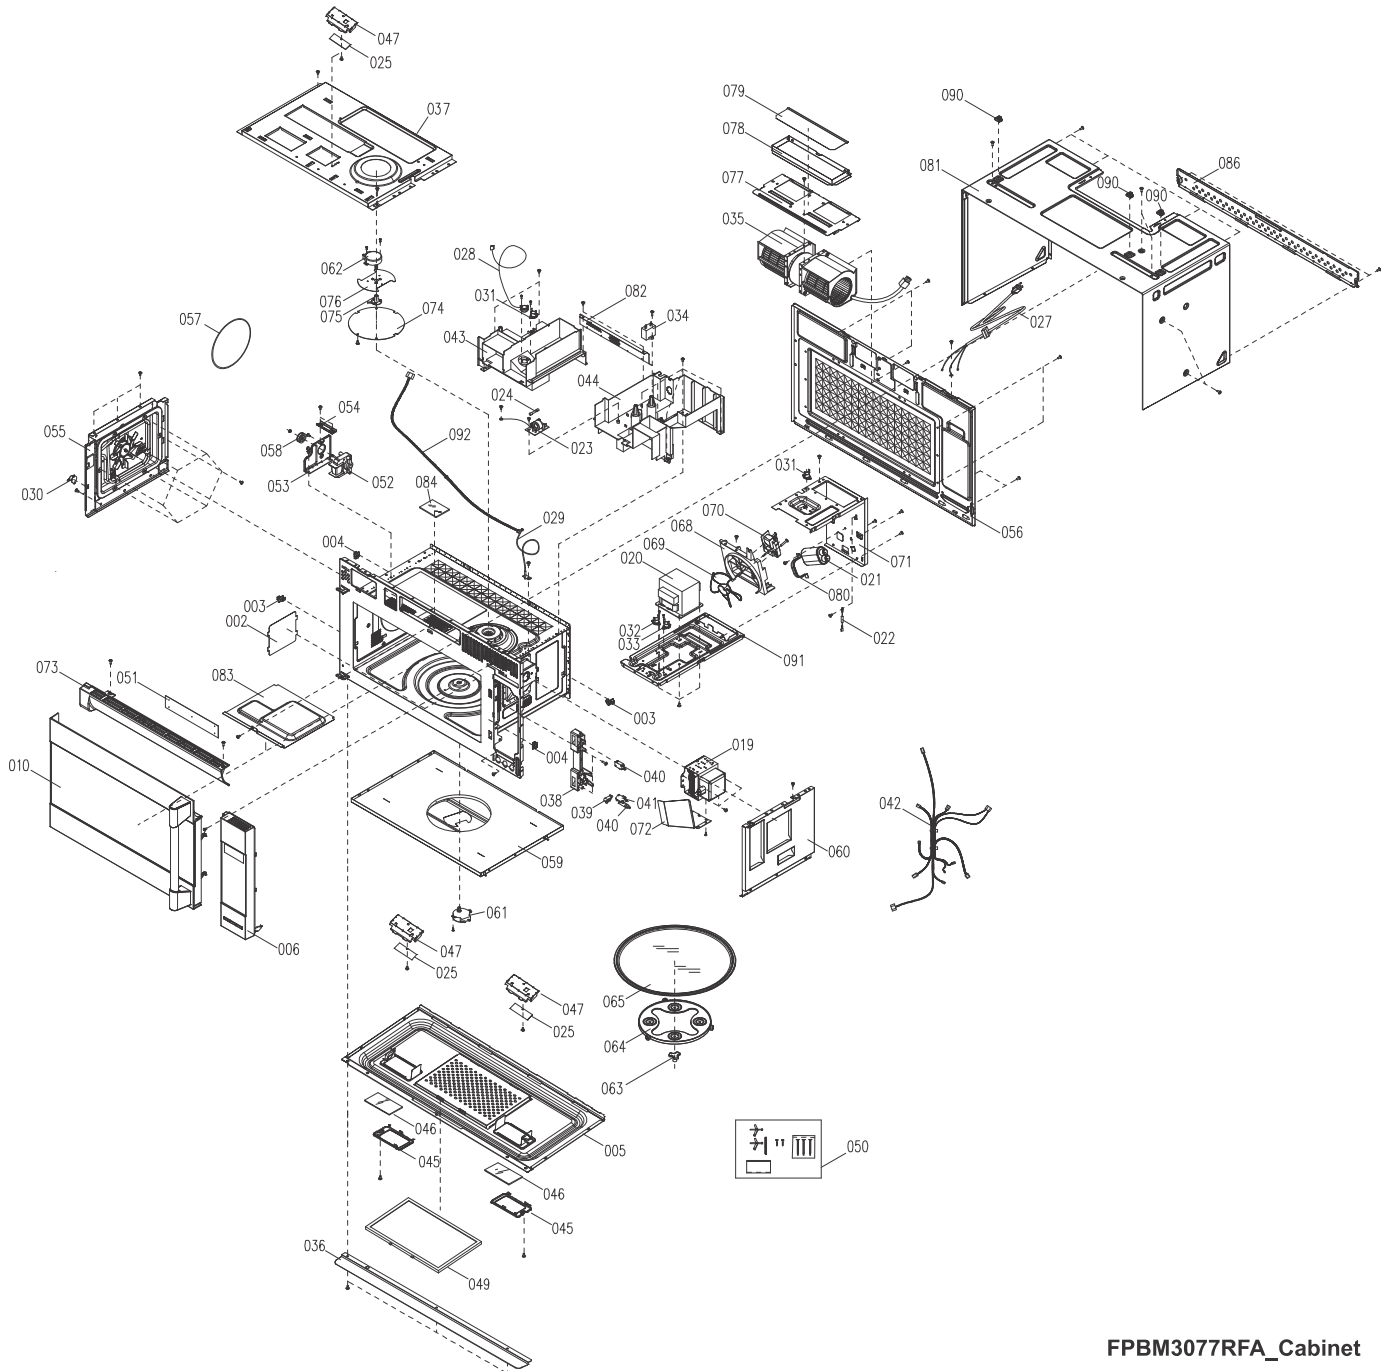

FPBM3077RFA_Cabinet


OVEN,CABINET

CAUTION: Use the Kenmore part number to order part, not the illustration number.

POS. NO	PART NO.	DESCRIPTION
068	5304488393	Duct, cooling fan, housing
069#	5304464257	Fan Blade, cooling fan
070#	5304499602	Motor, blower fan
071	5304488463	Duct, air vent, rear, fan mount
072	5304488464	Deflector, air vent, magnetron
073	5304491516	Grille, exhaust vent, black
074	5304488415	Cover, stirrer fan
075#	5304488416	Shaft, stirrer fan
076#	5304488417	Stirrer Fan
077	5304488418	Cover, vent motor
078	5304464120	Frame, damper housing, exhaust adapter
079	5304464119	Damper, door, exhaust adapter
080	5304488419	Retainer, capacitor strap
081	5304499603	Cabinet, outer casing
082	5304488421	Shield, air duct
083	5304488422	Cover, lamp, oven cavity
084	5304488423	Lens, lamp glass, oven cavity
086	5304488426	Plate, mounting, rear
090	5304502503	Mounting Nut Kit
091	5304488424	Base, transformer
092#	5304488363	Wire, connector, PC board
*	5304499876	Screw Kit, all

CONTROL PANEL,DOOR,MISC.

 CAUTION: Use the Kenmore part number to order part, not the illustration number.

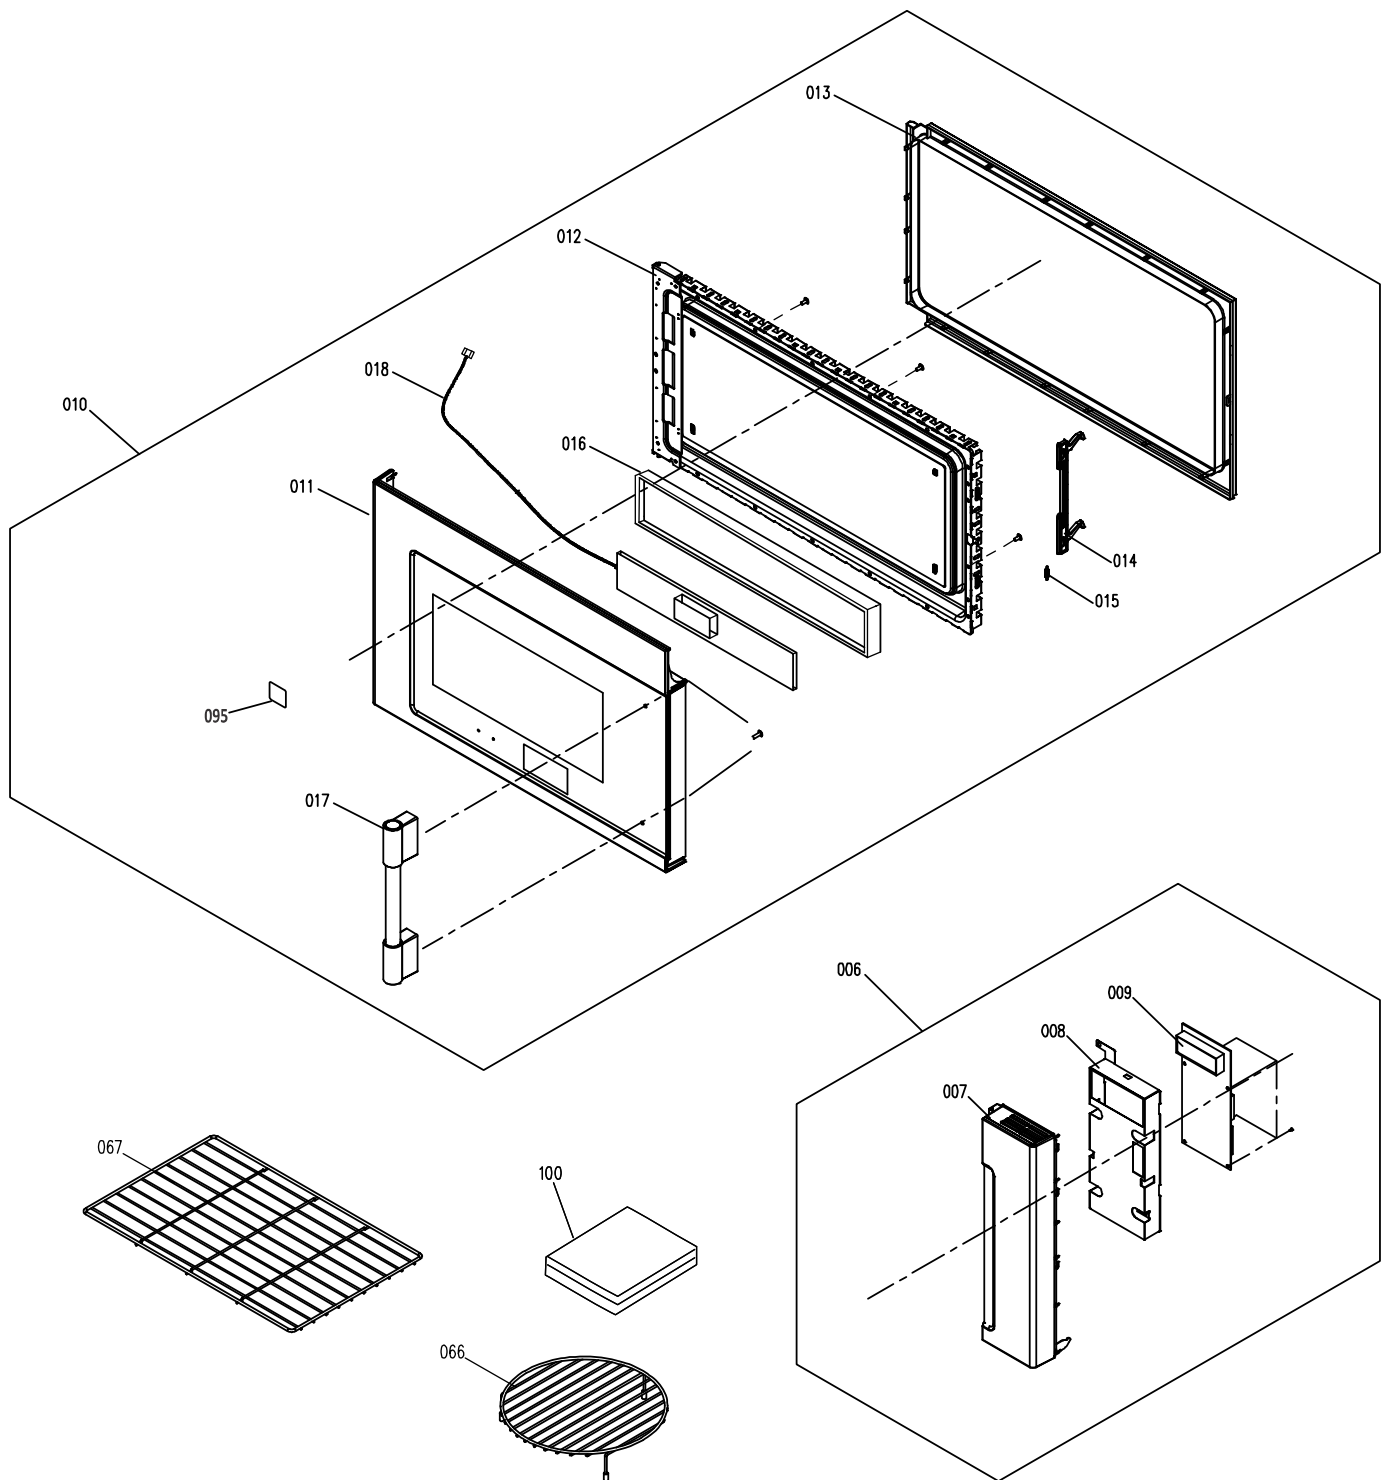


79089393510_Door

CONTROL PANEL,DOOR,MISC.

CAUTION: Use the Kenmore part number to order part, not the illustration number.

POS. NO	PART NO.	DESCRIPTION
006#	5304502487	Control Assembly, stainless
007#	5304502488	Control Panel, w/membrane, SS
008	5304491499	Panel, control mount, bracket
009#	5304502489	PC Board, main, control/power
010#	5304502490	Door Assembly, stainless, w/pcb
011	5304502491	Panel, outer door, stainless
012	5304488350	Panel, inner door
013	5304488351	Frame, choke cover, inner door
014	5304477389	Latch, door
015	5304464069	Spring, door latch
016	5304499873	Frame, display board, cover
017	5304502492	Handle Assembly, door, stainless
018#	5304502493	PC Board, display/input
066	5304499601	Rack, round, wire, 3-leg
067	5304488392	Shelf, wire
095	5304502513	Nameplate, badge, Kenmore Pro
100	316495154	Use & Care Guide
100	316495167	Installation Instructions
100	5995661583	Repair Parts List, w/wiring dia.
100	316495155	Wiring Diagram
100	316902475	Template, installation, top
100	316902912	Template, installation, wall

 WIRING DIAGRAM

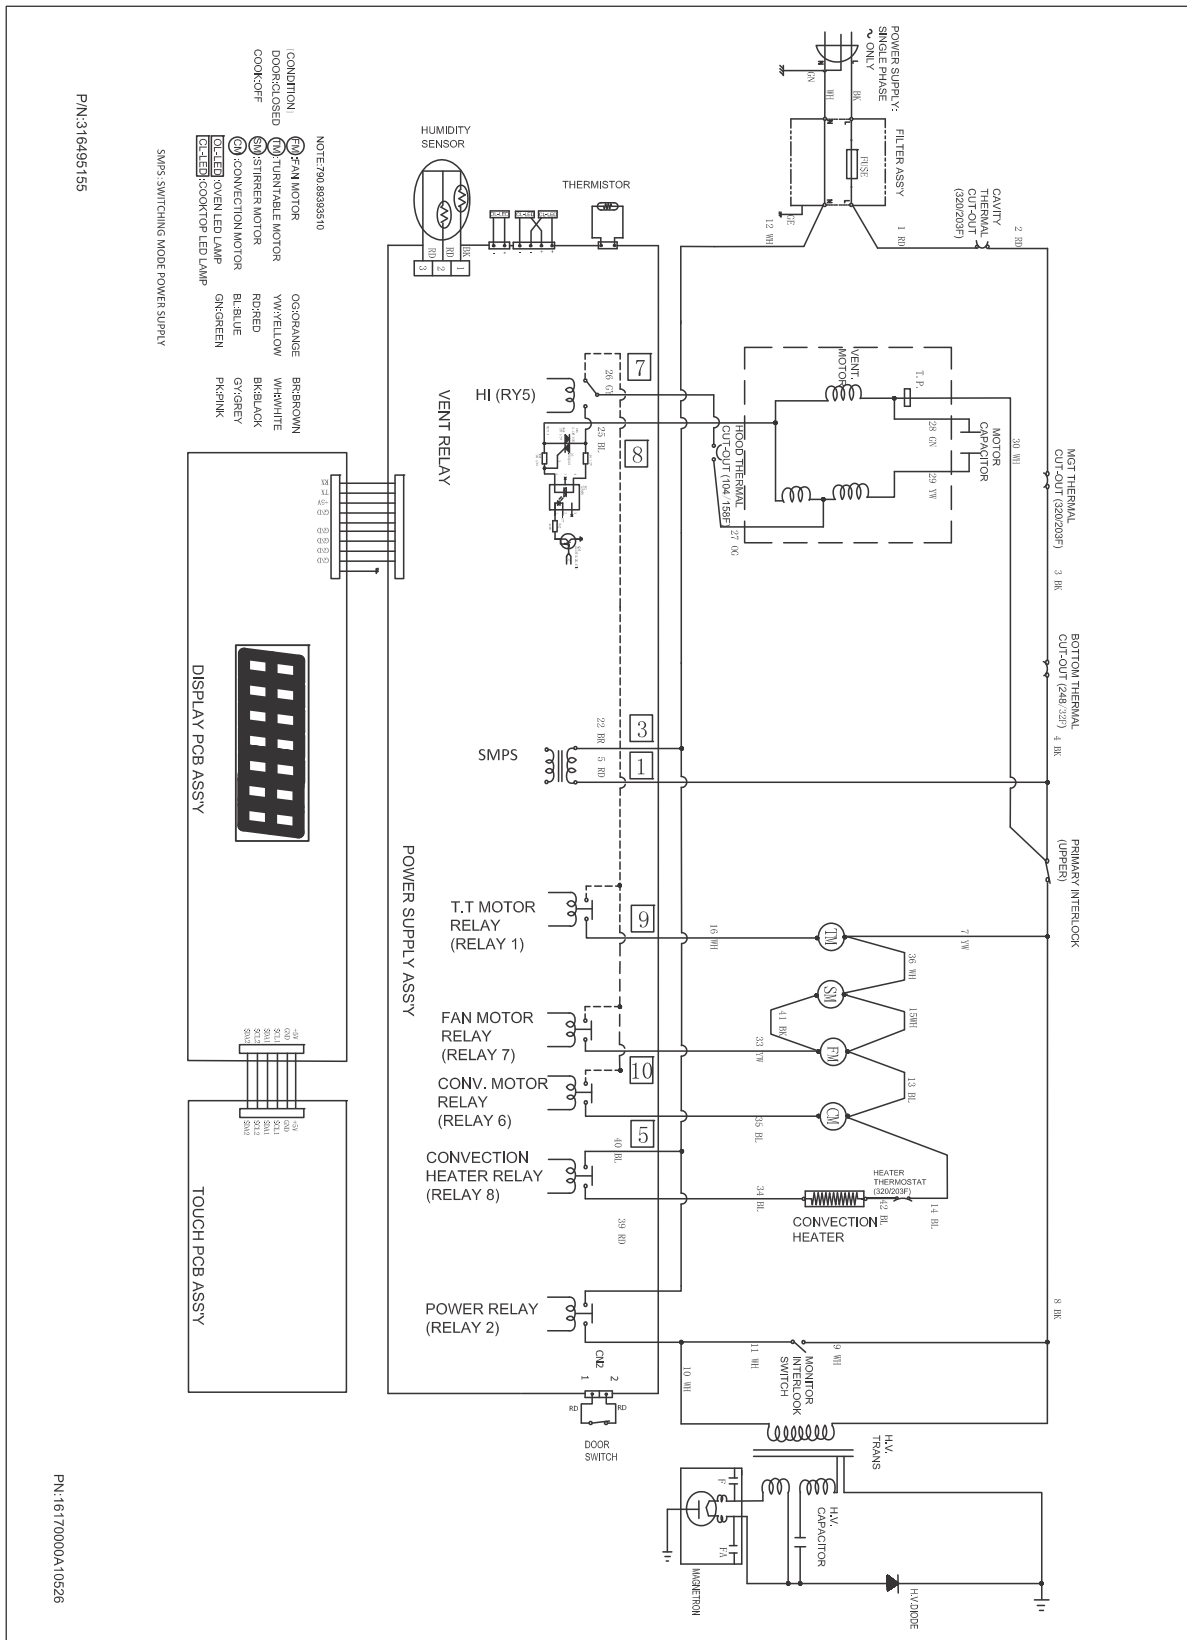

Get it fixed, at your home or ours!

Your Home

For troubleshooting, product manuals and expert advice:



www.managemylife.com

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME® (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com www.sears.ca

Our Home

For repair of "carry-ins" like handheld lawn equipment or home electronics items, call anytime for the location of your nearest

Sears Parts & Repair Service Center

1-800-488-1222 (U.S.A.)

www.sears.com

1-800-469-4663 (Canada)

www.sears.ca

To purchase a protection agreement on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGAR®

(1-888-784-6427)

www.sears.com

Au Canada pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6937)

www.sears.ca

The Sears logo, consisting of the word "sears" in a lowercase, serif font.

® Registered Trademark / TM Trademark of KCD IP, LLC in the United States, or Sears Brands, LLC in other countries

® Marca Registrada / TM Marca de Fábrica de KCD IP, LLC en Estados Unidos, o Sears Brands, LLC in otros países

^{MC} Marque de commerce / ^{MD} Marque déposée de Sears Brands, LLC