

SERVICE & IMPORTANT NOTICE

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarity qualified person in order to avoid a hazard.

Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired or replaced free of charge.

This guarantee is subject to the following terms:

Sunpentown must be notified of the fault.

Proof of purchase must be presented to Sunpentown's nominated representative.

The warranty will be void if the product is modified, misused or repaired by an unauthorized person.

The guarantee after repair or replacement will not be extended beyond the original one-year period.

All replacement parts or units will be new or reconditioned.

Parts or units, which are replaced, become the property of Sunpentown.

The warranty applied for the use of the product in the USA.

Warranty does not include freight charges.


This GUARANTEE is in addition to your Statutory Rights.

SUNPENTOWN INTERNATIONAL INC.
14625 Clark Ave., City of Industry CA 91745
Tel: 626-336-2299 Fax: 626-336-7118
service@sunpentown.com
www.sunpentown.com



Electric Shabu Shabu Pot (2Way)

INSTRUCTION MANUAL

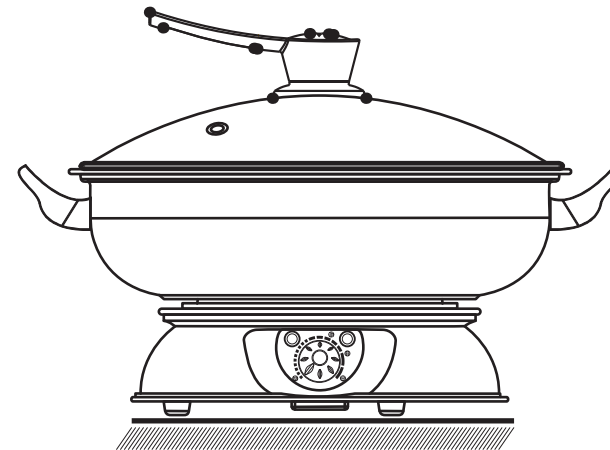

MODEL: SS-303

Please read the instruction in details before use.
Household use only.

1.IMPORTANT SAFEGUARDS.

When using electrical appliances, basic safety precautions should always be followed, including the following.

- 1) Read all instruction.
- 2) Do not touch hot surfaces. Use handles or knobs.
- 3) To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or heating base in water or other liquid.
- 4) Close supervision is necessary when any appliance is used by or near children.
- 5) Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- 6) Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- 7) The use of accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- 8) Do not use outdoors.
- 9) Do not let cord hang over edge of table or counter, or touch hot surface.
- 10) Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11) Always attach plug to appliance first, then plug cord into the wall outlet.
To disconnect, remove plug from wall outlet.
- 12) Do not use appliance for other than intended use.


2.FEATURES:

- 1) It combines the advantage of Chinese cuisine culture with western cuisine culture in the aspects of design and modeling.
- 2) Provided with temperature controller, you can adjust the temperature as you need in cooking.
- 3) The removable pot allows for the steel pot to be separated from the heating base freely for easy cleaning and preparation.

3.TECHNICAL PARAMETERS:

SPECIFICATIONS	
NAME	Electric Shabu Shabu Pot (2Way)
MADEL	SS-303
RATING VOLTAGE	120V~
WATT	1500W

4.PARTS IDENTIFICATION:

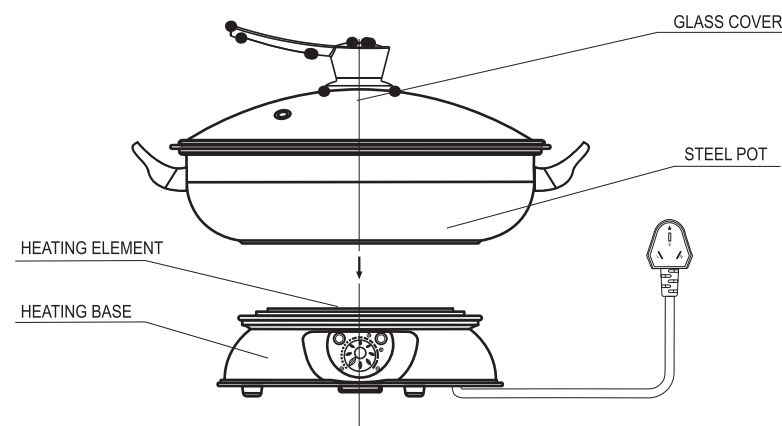

5.OPERATING INSTRUCTIONS:

- 1) Before each use, check to ensure the cooking pot and heating element surfaces are clean and clear of any particles or debris.
- 2) On a level surface, place the pot on the heating base. Rotate the pot to ensure the bottom of the pot is making full contact with the heating element.
- 3) Plug the power plug into the power socket, the power indicator light is on.
- 4) Rotate the temperature controller switch to adjust cooking temperature.
The power and heat indicators lights will turn on.

6.SHORT CORD INSTRUCTIONS

(When the length of the power-supply cord is less than 1.44mm)

- 1) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- 2) Longer detachable power-supply cord or extension cords are available and may be used if care is exercised in their use.
- 3) If a long detachable power-supply cord or extension cord is used.
 - A) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - B) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
 - C) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.