
CLEANING AND MAINTENANCE

Once you have finished cooking, remove plug from electrical outlet. Leave top lid open so plates begin to cool. **Be certain plates have cooled completely before cleaning.**

Never take your Pizzelle Press apart for cleaning. Simply brush crumbs from grooves, and absorb any excess cooking oil by wiping with a dry cloth or paper towel.


You may clean the plates by wiping with a damp cloth, to prevent staining and sticking from batter or oil buildup. If batter adheres to plates, simply pour a little cooking oil onto the cooked batter and let stand approximately 5 minutes, thus allowing batter to soften for easy removal.

DO NOT POUR OIL ONTO PIZZELLE PLATES WHEN PLUGGED IN.

To clean exterior, wipe with a soft dry cloth. Never use an abrasive cleanser or harsh pad. **NEVER IMMERSE CORD, PLUG OR UNIT IN WATER OR OTHER LIQUID.**

STORAGE

Store with cord wrapped securely around base. For compact storage, stand Pizzelle Press upright on hinge end with Cuisinart logo upside down. The Pizzelle Press has been designed with a special latching feature so lid stays closed during storage.

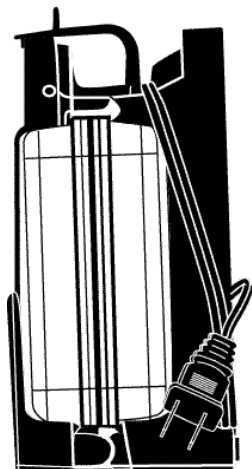

WARRANTY

Limited Three Year Warranty

This warranty is available to consumers only. You are a consumer if you own a Cuisinart™ Pizzelle Press which was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart™ Pizzelle Press will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase.

We suggest you complete and return the enclosed warranty registration card promptly to facilitate verification of the date of original purchase. However, return of the card is not a condition of this warranty.

If your Cuisinart™ Pizzelle Press should prove to be defective within the warranty period, we will repair (or, if we think necessary, replace) it without charge to you. To obtain warranty service, please call our Customer Service Center toll-free at 1-800-726-0190 or write to: Cuisinart, 150 Milford Road, East Windsor, NJ 08520.

To facilitate the speed and accuracy of your return, enclose \$10.00 for shipping and handling. (California residents need only supply a proof of purchase and should call 1-800-726-0190 for shipping instructions.) Please be sure to include your return address, description of the product's defect, product serial number, and any other information pertinent to the return. Please pay by check or money order.

Your Cuisinart™ Pizzelle Press has been manufactured to the strictest specifications and has been designed for use only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by accessories, replacement parts or repair service other than those authorized by Cuisinart.

This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use.

This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so they may not apply to you.