




30" ELECTRIC SLIDE-IN SELF-CLEAN CONVECTION RANGE

MODELS:

664.95223710 (Stainless)


COOKTOP PARTS

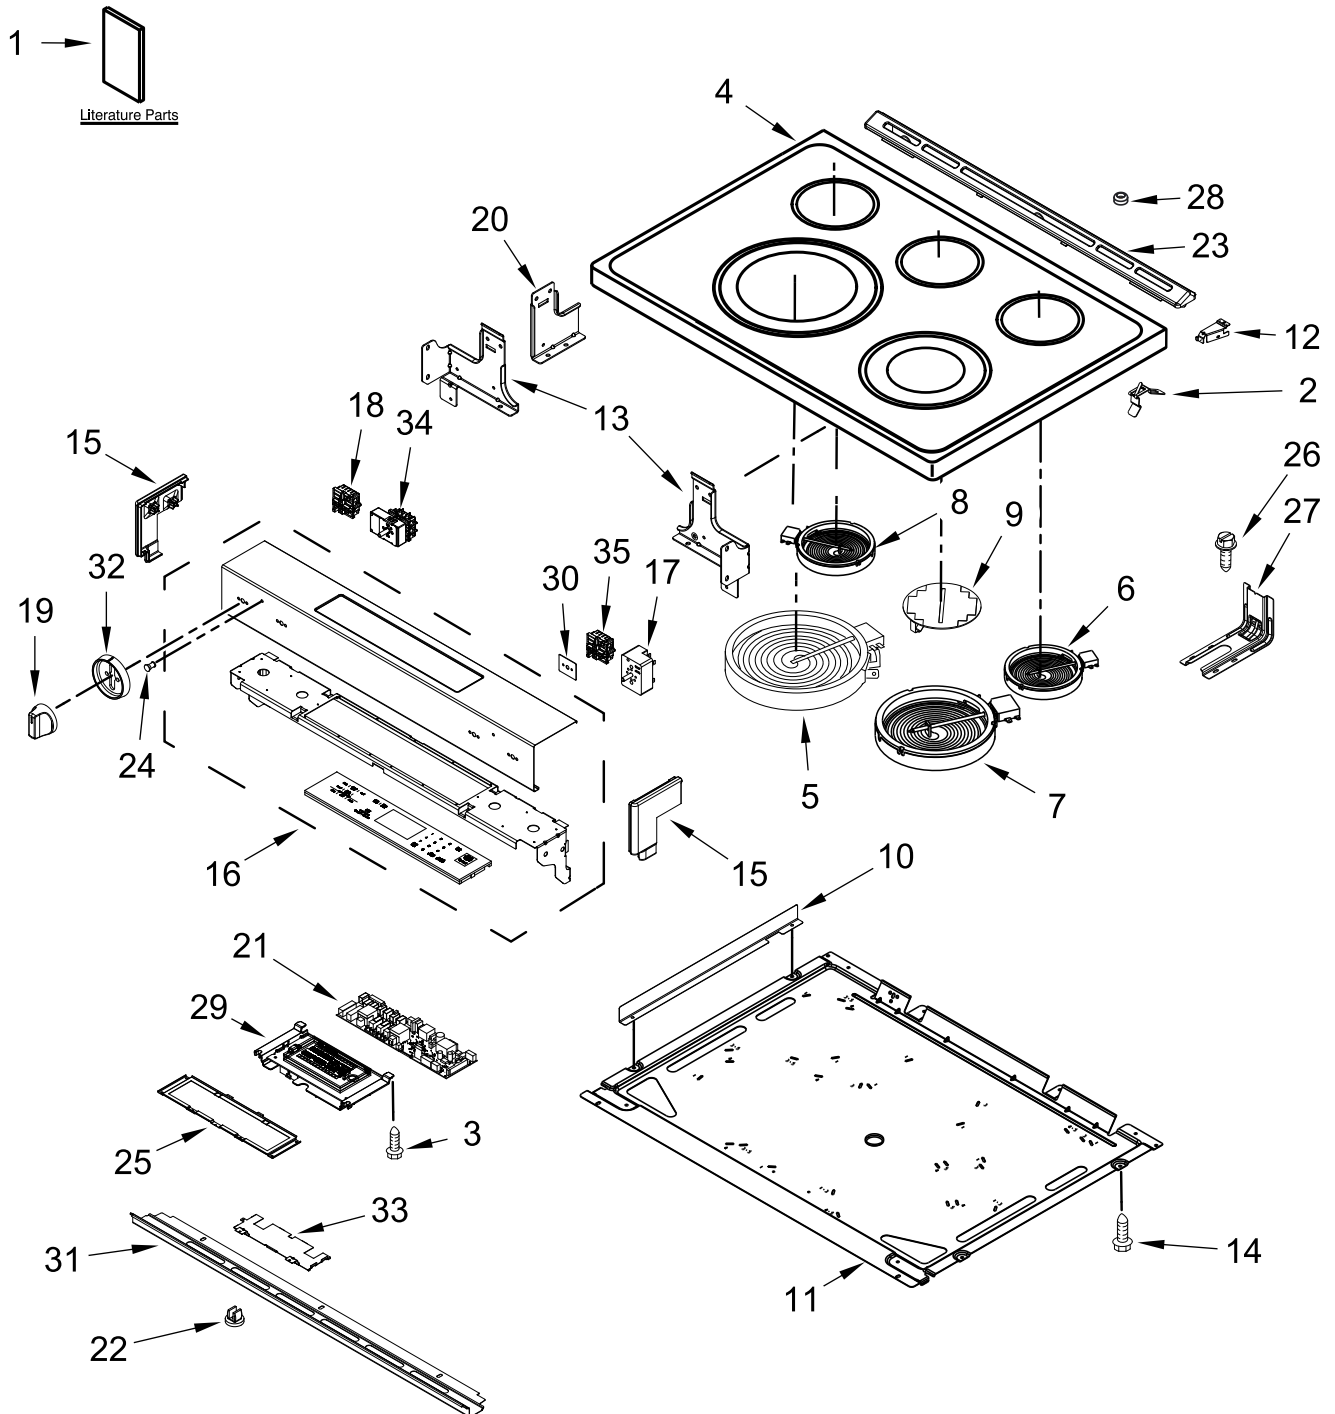

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	15		Endcap	28	W10664705	Bumper
	W11024186	Instructions, Installation		W10555937	Stainless (Left)	29	W10759325	Assembly, Display
				W10555940	Stainless (Right)	30	7201P077-60	Gasket, Infinite Switch
	W11024180	Use and Care Guide	16		Console	31		Console, Lower Panel
	W11024195	Sheet, Tech		W11024520	Stainless		W10555934	Stainless
	W11024199	Wiring Diagram	17	W10578768	Switch, Infinite	32		Bezel
2	W10225448	Spring, Element			(Right Rear)		W10915432	Stainless
3	3196178	Screw	18	W10437094	Switch, Infinite	33	W10558372	Bracket, Control
4		Cooktop			(Right Front and Left Rear)	34	W10437097	Switch, Infinite
	W11041759	Black						(Left Front)
5	W10187839	Element (3000W) (Left Front)	19		Knob	35	W10757531	Keypad, Shield
6	8273994	Element (1200W) (Right Rear)		W10911318	Stainless			FOLLOWING PARTS NOT ILLUSTRATED
7	W10251108	Element (3200W) (Right Front)		W11022665	Stainless		W10908889	Harness, Main
8	W10342780	Element (1300W) (Left Rear)		W10921930	Stainless		W10580265	Harness, Bake/Warm Drawer
9	W10799048	Element, Warm Zone (Center Rear)		W10921931	Stainless		W10575120	Harness, Keypad
10	W10613286	Bracket, Radiant	20	W10598048	Bracket, Console (Center)		W10598170	Harness, Display
11	W10536275	Pan, Radiant	21	W10919897	Control, MRC2		W10580303	Harness, Console
12	W10162253	Brace, Corner (Left)	22	W10645947	Grommet		W10664316	Clip, Harness
	W10162252	Brace, Corner (Right)	23		Vent, Trim Top		W10580249	Harness, Cooktop
				W10636529	Stainless			
13	W10289169	Support, Cooktop (Right)	24	3196068	Lens, Indicator			
	W10289170	Support, Cooktop (Left)	25	W10555923	Bracket, User Interface			
14	3196173	Screw	26	7101P485-60	Screw, Anti-Tip Kit			
			27	W10606241	Bracket, Anti-Tip			


CHASSIS PARTS

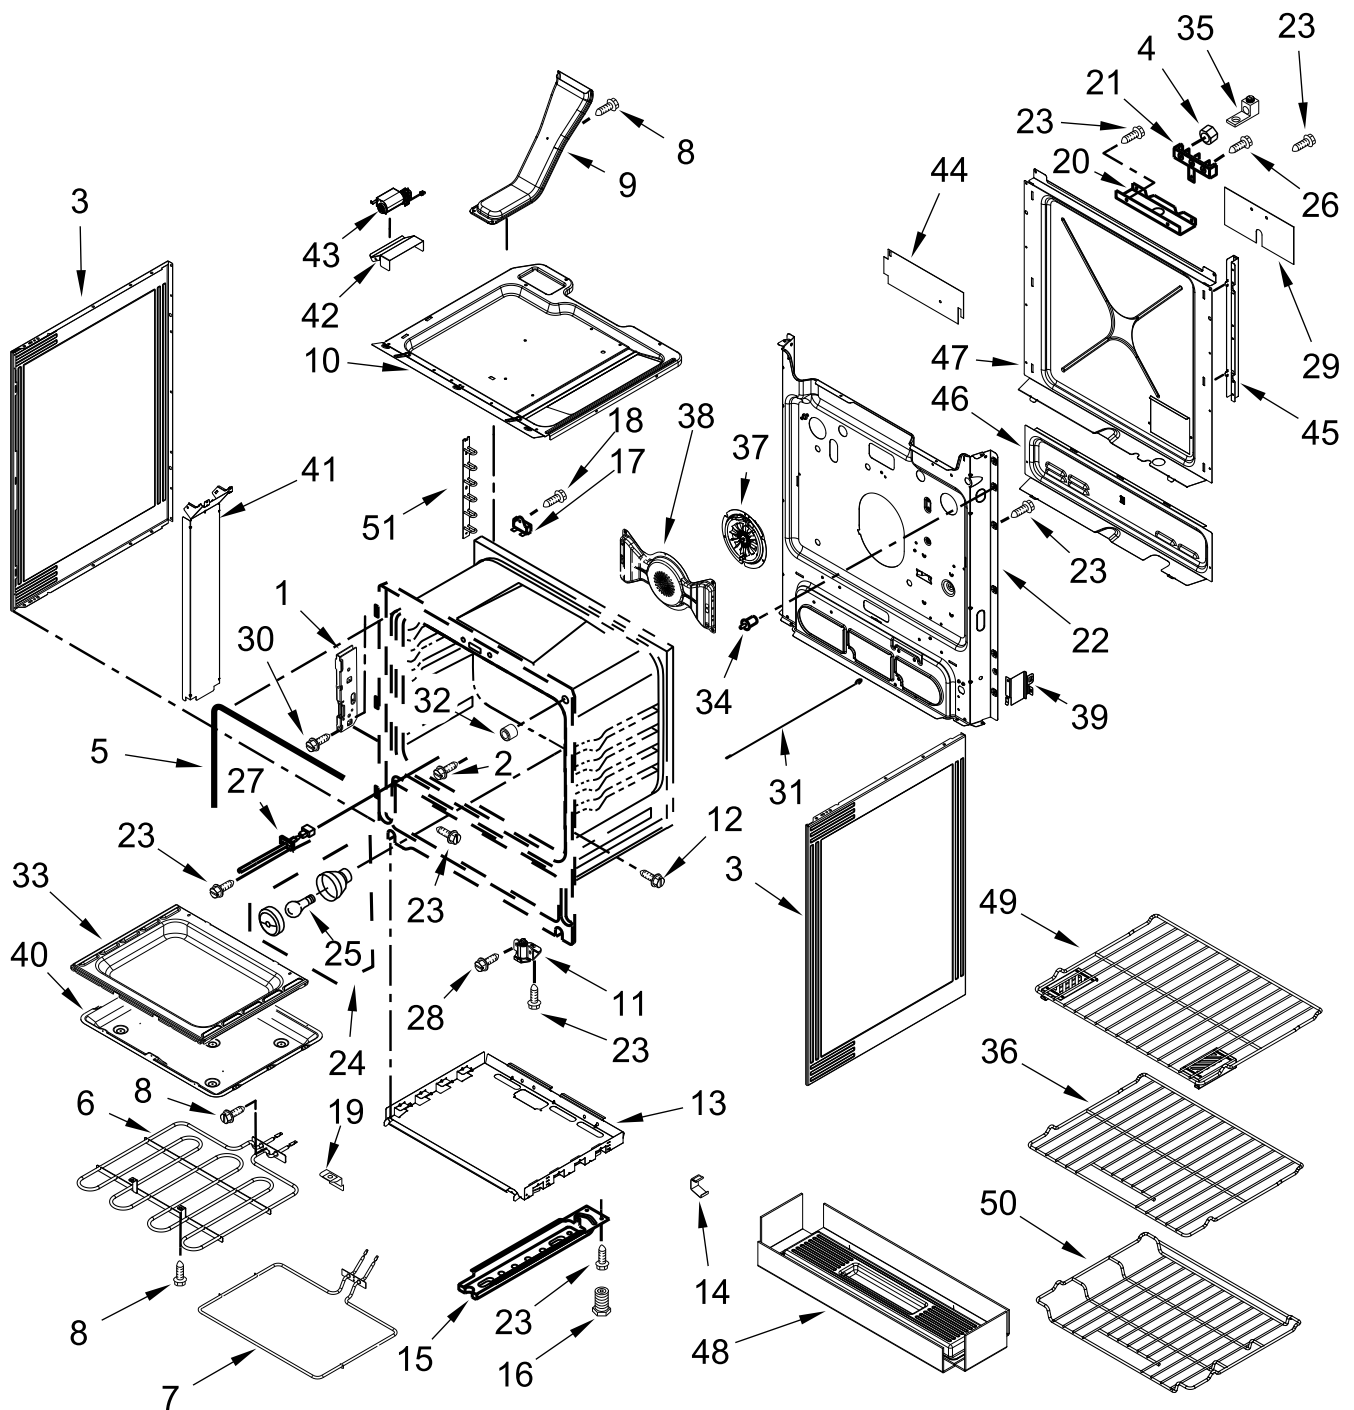

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	22		Back, Main (Not Serviced)	44	W10813366	Shield, Wire
2	3196560	Screw	23	3196178	Screw	45	W10162241	Channel, Rear
3		Panel, Side	24	W10454648	Assembly, Light	46	W10162248	Cover, Wire
	W10162245	Black	25	311255	Bulb, Oven Light	47	W10289172	Cover, Back
4	3400029	Nut	26	3400016	Screw	48	W11033103	Kit, Reservoir (Steam Rack)
5	W10162385	Gasket, Door	27	W10586204	Sensor	49	W10554007	Rack, Steam
6	W10544952	Element, Broil	28	3196169	Screw	50	W10554006	Rack, Maximum Capacity
7	W10774342	Element, Bake	29	W10655441	Shield, Power Cord	51	W10603482	Rack, Ladder
8	W10362924	Screw	30	W10031780	Screw			FOLLOWING PARTS NOT ILLUSTRATED
9	W10613792	Assembly, Flue	31	W10273192	Rod, Door Switch		W10289173	Insulation, Wrap
10	W10289168	Box, Burner SI	32	9758701	Spacer, Door		W10575374	Insulation, Bottom
11	W10341186	Assembly, Front Foot	33	W10774446	Bottom, Oven		4820F015-59	Insulation, Strap
12	W10067840	Screw	34	W10627802	Switch, Door		W10162240	Insulation, Back
13	W10541959	Shield, Bake	35	W10281322	Kit, Bare Wire Adapter Block		7111P017-60	Clamp, Wire
14	W10137382	Clip, Panel	36	W10911366	Rack, Sliding			
15	W10390008	Assembly, Base Rail (Left)	37	W10874472	Assembly, Convection			
	W10390007	Assembly, Base Rail (Right)	38	W10554262	Baffle, Full Convection			
16	W10058460	Foot, Leveling	39	W10273002	Bracket, Oven Support			
17	3196548	Fuse, Thermal	40	W10346147	Pan, Bake			
18	3196172	Screw	41	W10162255	Duct, Cover			
19	W10035900	Support, Oven Bottom	42	W10162254	Duct, Cooling			
20	3186034	Bracket, Service	43	W10877642	Assembly, Cooling Fan			
21	W10245259	Block, Terminal						

DOOR PARTS

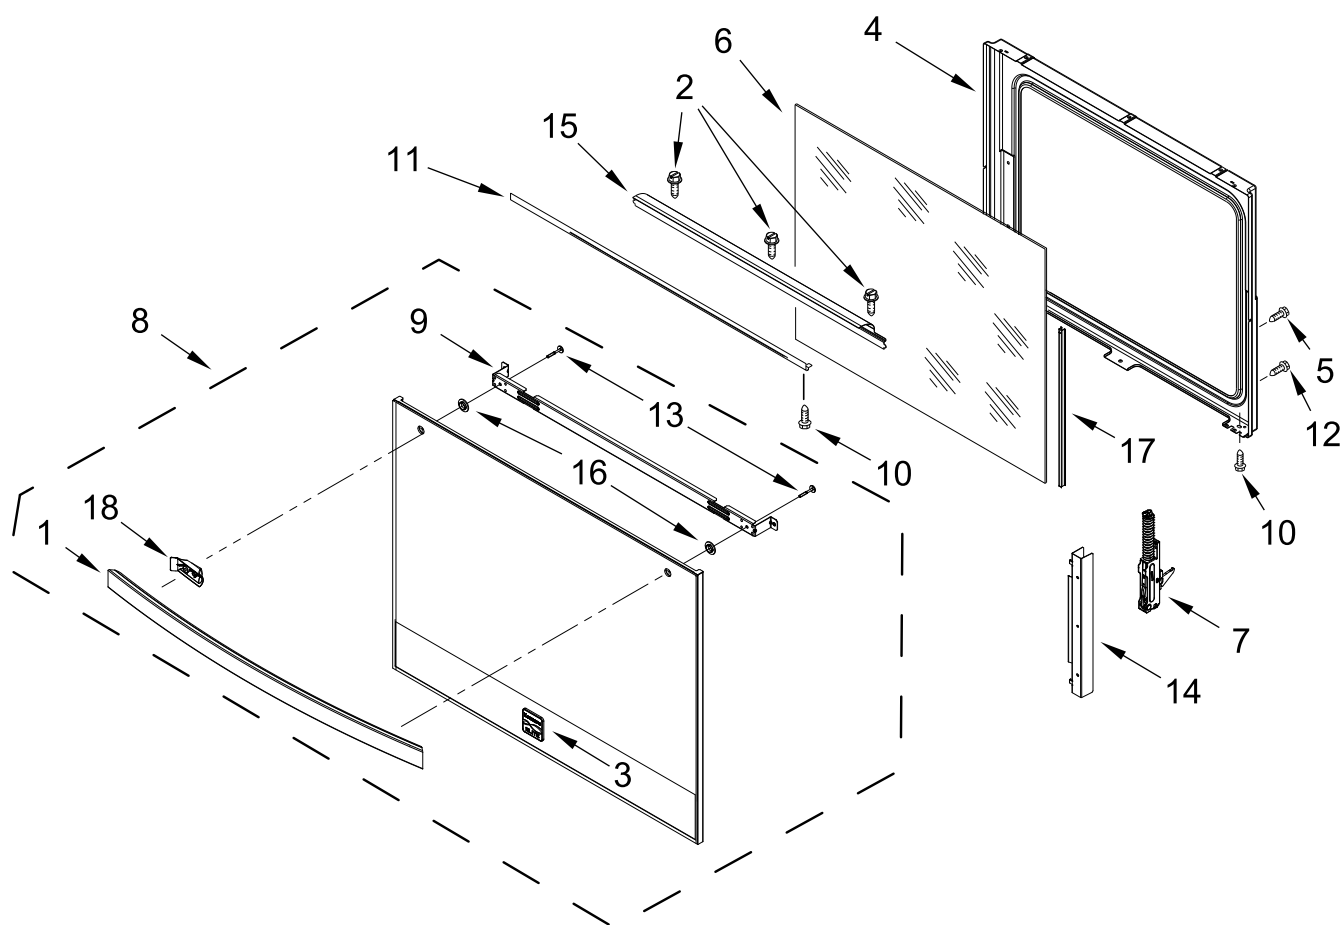


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Door Handle
	W10917609	Stainless
2	9780274	Screw
3		Badge
	W10403224	Stainless
4	W10826568	Liner, Door
5	W10031790	Screw
6	W10813616	Glass, Inner
7	W10885517	Hinge, Slow Close

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8		Assembly, Outer Door
	W10921447	Stainless
9	W10541911	Bracket, Glass Upper Handle
10	W10327235	Screw
11	W10813140	Rail, Horizontal Support
12	W10031780	Screw
13	W10426267	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
14	W10813139	Rail, Vertical Support
15		Scoop, Door
	W10613791	Black
16	W10319024	Washer, Door
17	W10813142	Spacer, Glass
18	W10917611	Handle, Standoff

DRAWER PARTS

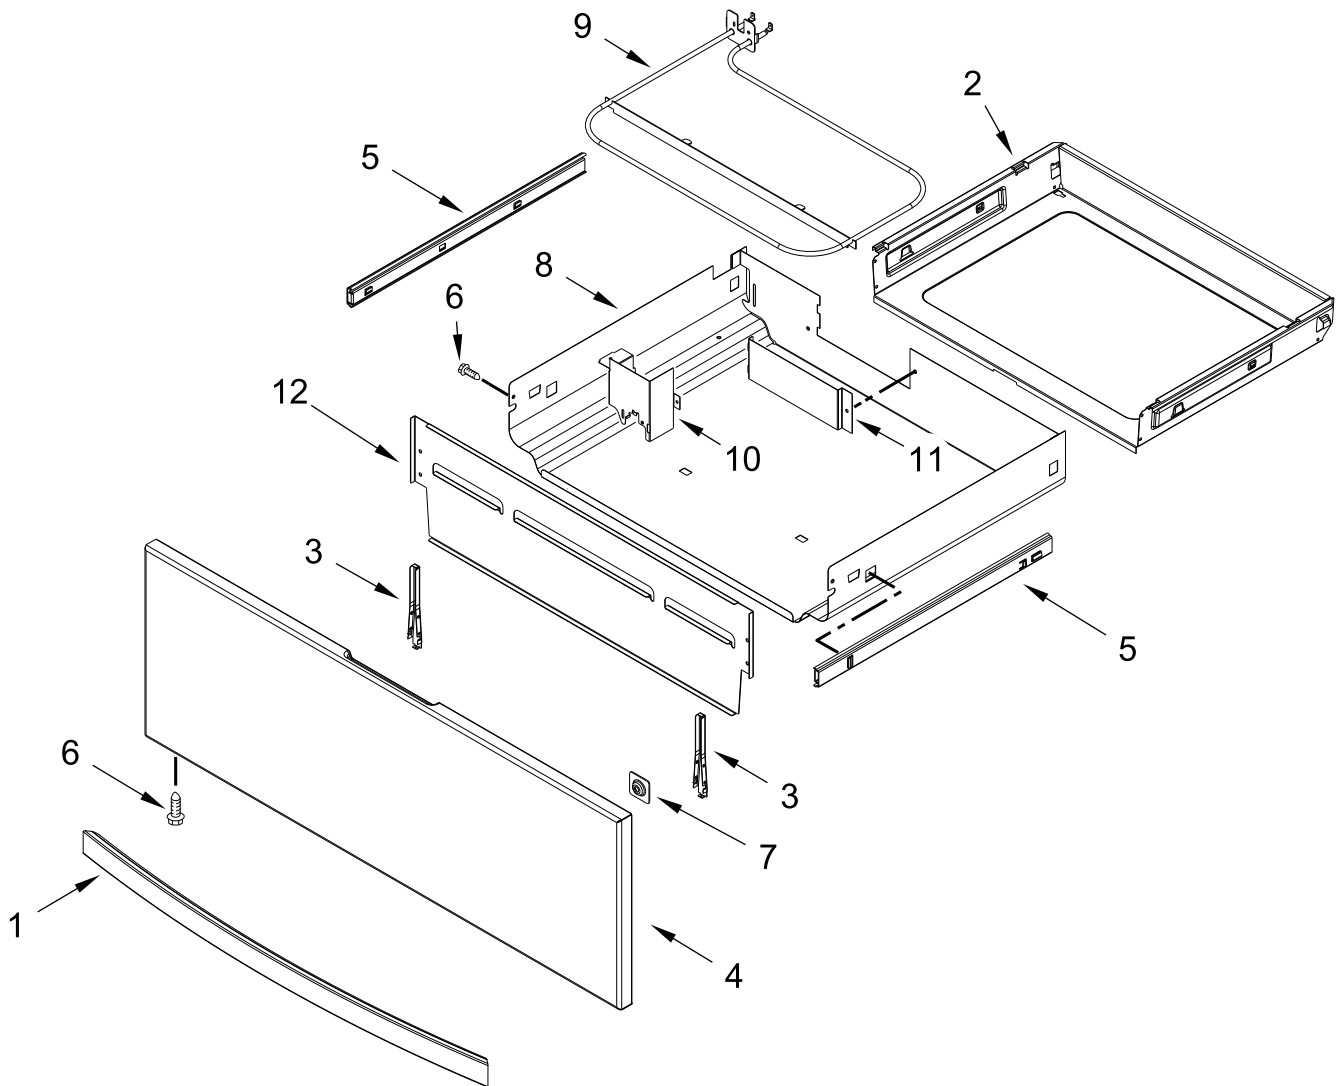

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	5	W10441804	Slide, Drawer (Left)	10	W10634259	Cover, Wire
	W10917609	Stainless		W10441805	Slide, Drawer (Right)	11	W10727084	Cover, Gas Valve
2	W10688022	Drawer, Storage	6	3196169	Screw	12	W10748082	Panel, Inner
3	W10318026	Bracket, Mounting	7	3823F017-45	Spacer, Handle			
4		Panel, Drawer Front	8	W10634260	Enclosure, Warming			
	W10541958	Stainless	9	W10323181	Element, Warm			

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		CLEANERS / POLISHES
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10355010	Cleaner, Kitchen & Appliance
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	W10432019	Alt Cleaning Kit
	W10391473	Pad, Cooktop Cleaning
		MISCELLANEOUS
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	W10432539	Griddle
	W10432545	Kit, Grill
	242905	Kit, Canning Unit
		TRIM KITS
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655449	Black
	W10655448	White
	W10655450	Stainless