
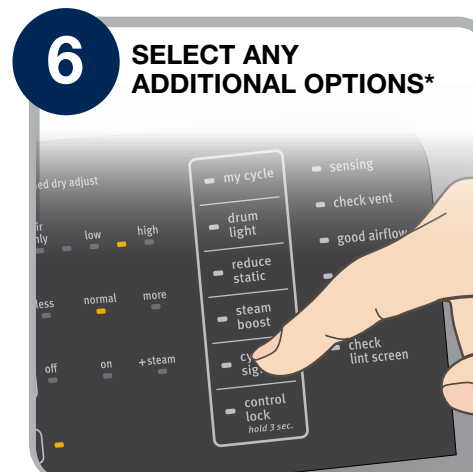
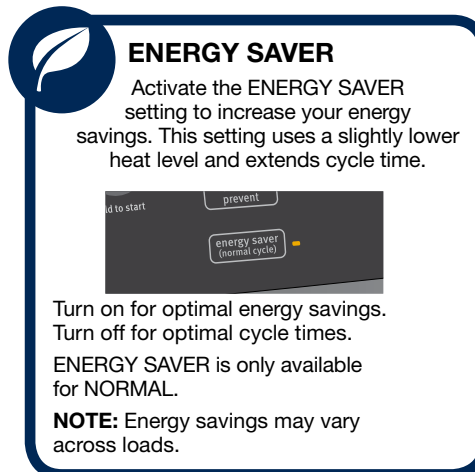


Quick Start Guide Using Your High Efficiency Dryer

Appearance may vary depending on model.

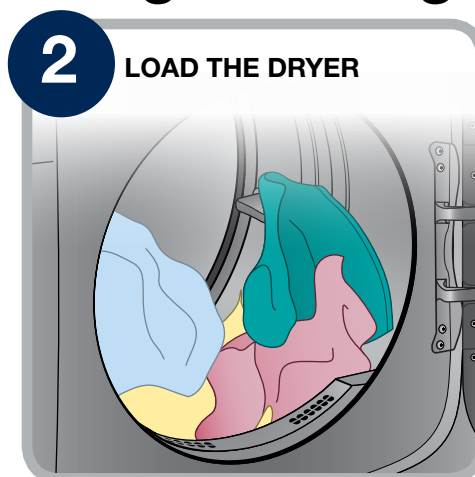


* **NOTE:** See "Cycle Guide" in the Use and Care Guide for more information about cycles, settings, and options. Not all cycles, settings, and options are available with all models. Read your Use and Care Guide before using your dryer.

W10804670A
W10804671A - SP

®/™ ©2015 Maytag. All rights reserved. Used under license in Canada.




07/15
Printed in U.S.A.

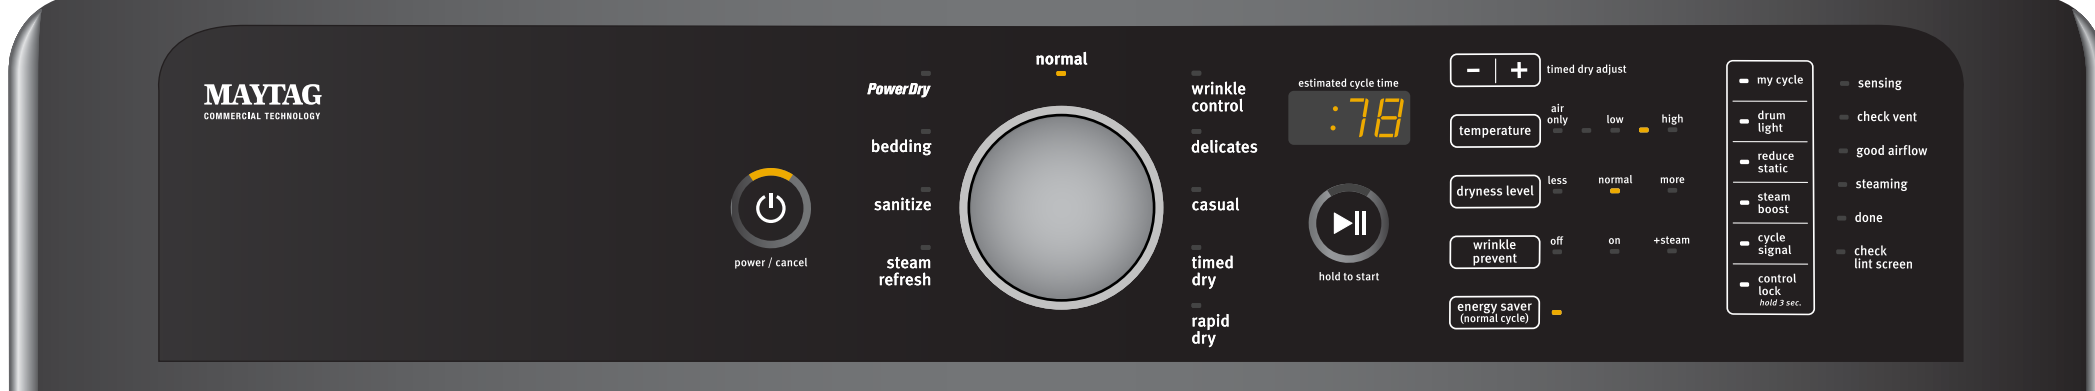

Guide de démarrage rapide

Comment utiliser votre sècheuse haute efficacité

L'aspect peut varier selon le modèle.

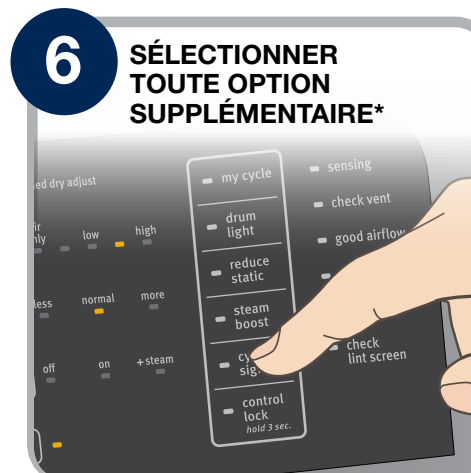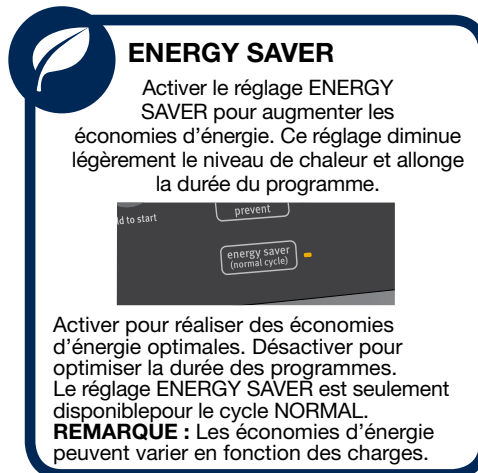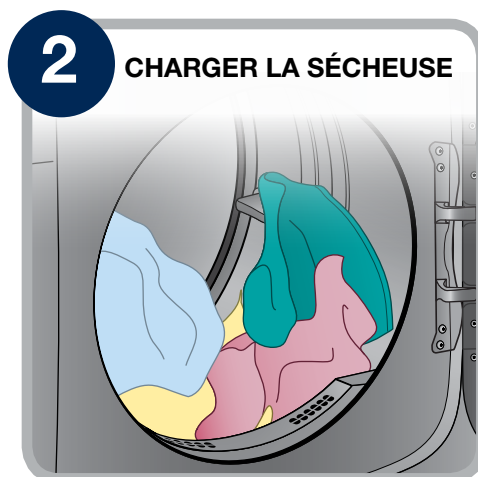

***REMARQUE :** Voir le "Guide des programmes" du Guide d'utilisation et d'entretien pour plus d'informations sur les programmes, les réglages et les options. Certains programmes, réglages et options ne sont pas disponibles sur certains modèles. Lire le Guide d'utilisation et d'entretien avant d'utiliser la sècheuse.

W10804670A
W10804671A - SP

©/TM ©2015 Maytag. Tous droits réservés. Emploi sous licence au Canada.

07/15
Imprimé aux É.-U.