





Congratulations on purchasing a Craftsman Smart Lawn Connect Kit. The **Craftsman Smart Lawn Connect Plug** will easily plug in to the back side of your Craftsman Rider's **Ignition Switch** located on the dashboard.


These instructions apply to **Craftsman Zero Turn** riding mowers (model #247.XXXXX) Please read through entire instruction sequence before beginning installation.



WARNING Before performing any maintenance or repairs and to reduce the risk of injury, disengage PTO, set parking brake, stop engine and remove key to prevent unintended starting.

#### Installation Guide:

1 Using socket wrench, remove (2) bolts between fender and seat with 5/16" socket - extender required, and (1) Torx screw in front with T30 driver from drivers right Fender (see illustration below).

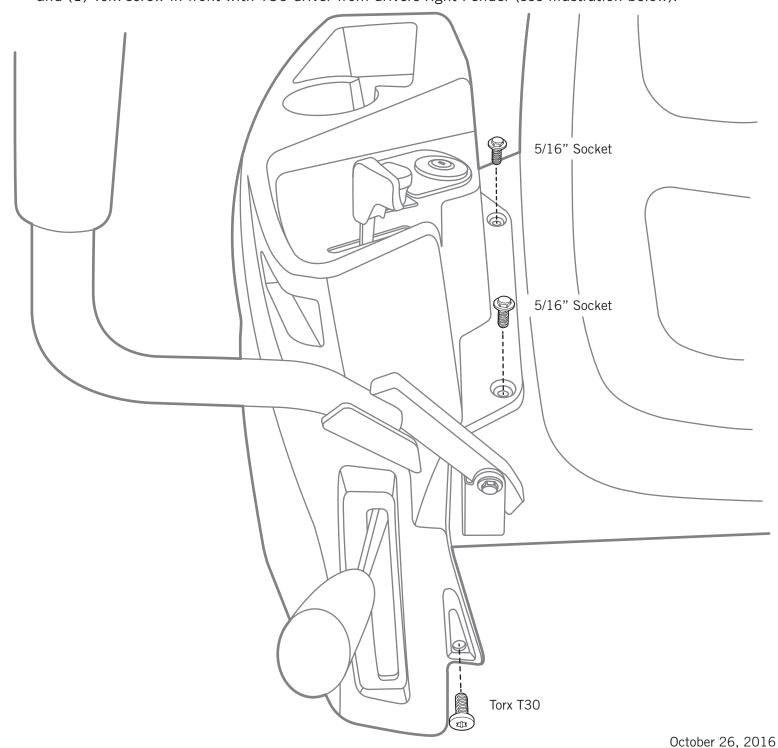








2 Remove final (2) bolts with 3/8" socket and ratchet underneath the Fender in order to disengage it. The Fender can now be tilted upward to gain access to the back side of the **Ignition Switch** and **Wire Harness Connector**. The **Wire Harness Connector** can now be unplugged (see illustration below).

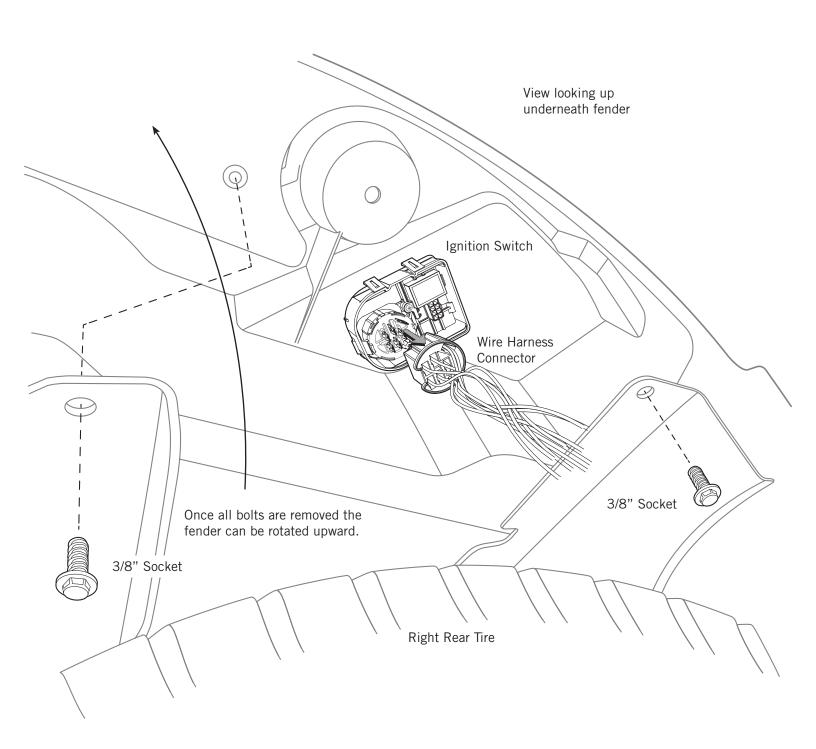









Note prong configuration and install the **Craftsman Smart Lawn Connect Plug** onto the **Ignition Switch**. Then plug the **Wire Harness Connector** into the **Craftsman Smart Lawn Connect Plug** (refer to illustration below).

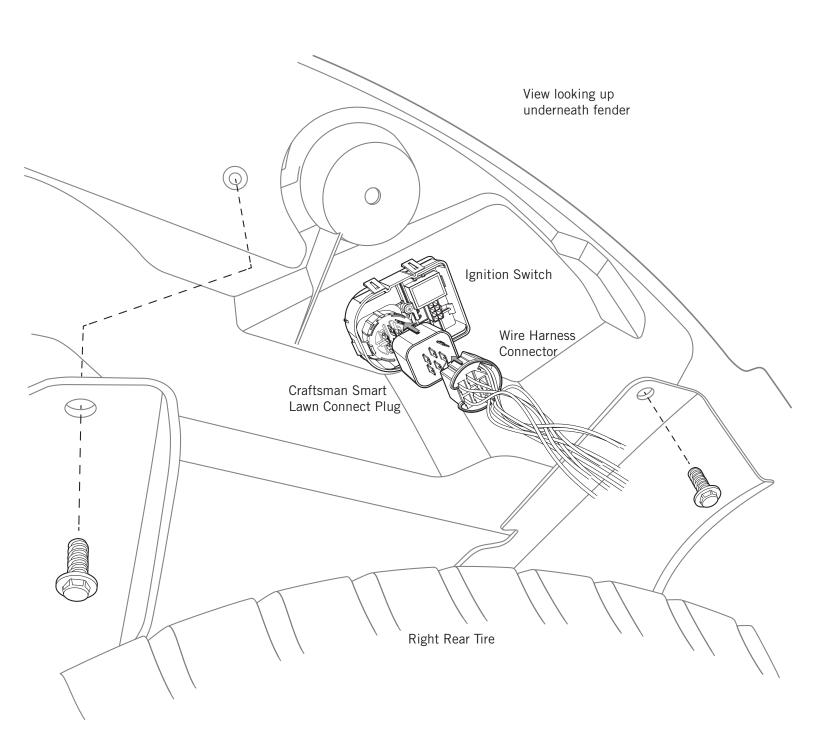








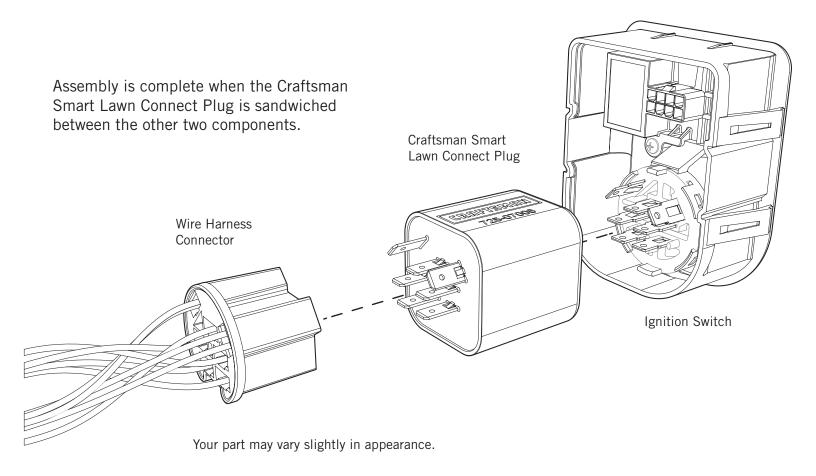

4 When all three components are plugged together this is how the plug assembly looks (refer to illustration below). NOTE: The base of the **Ignition Switch** prongs will be visible in the gap between the **Ignition Switch** and the **Craftsman Smart Lawn Connect Plug**. This is intentional, and allows for proper plug functionality.

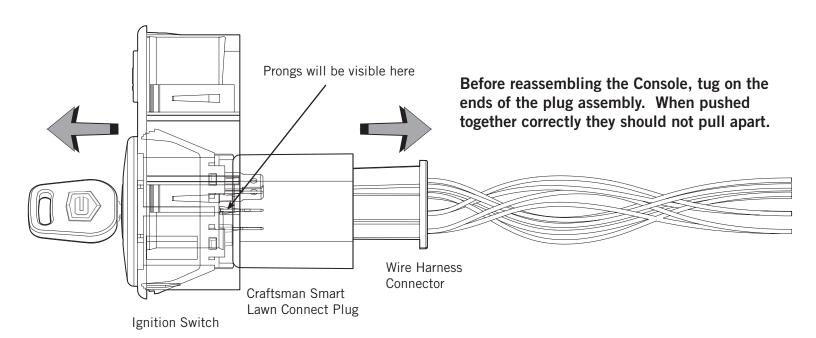








5 Once the Plug assembly is secure, move the fender back into place and secure with (5) bolts (1 in front, 2 between fender and seat, and 2 underneath fender) to complete installation (see illustration below).

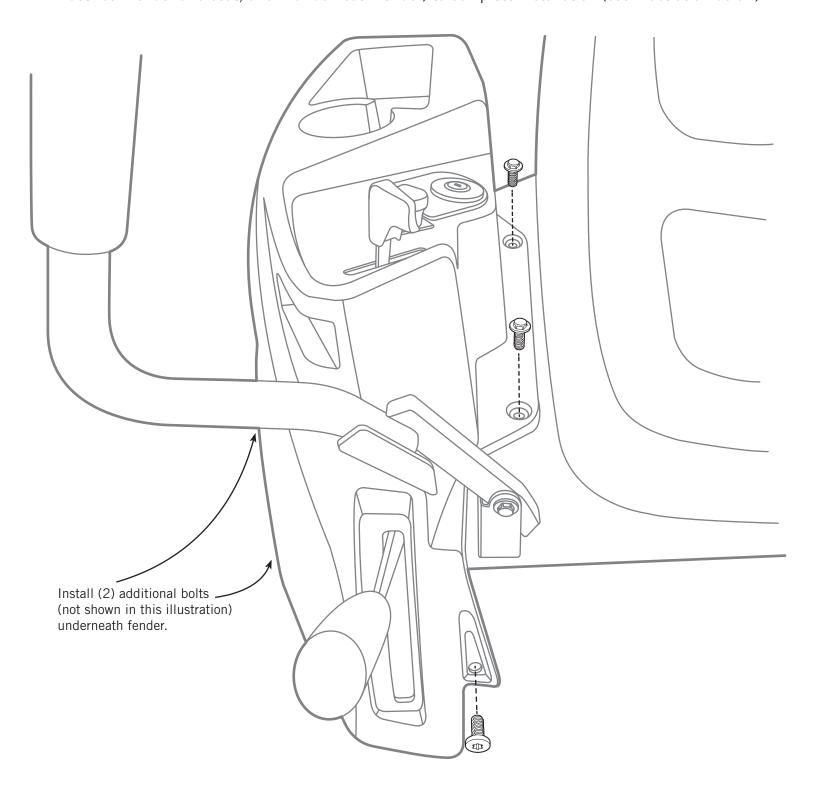

For additional information please refer to: **craftsman.com/connectkit**If you have further questions, call the Craftsman help line at 1.888.

If you have further questions, call the Craftsman help line at  $\,$  **1-888-331-4569** 

Once assembly is complete please download the FREE Craftsman Smart Lawn App to begin using all of the new connectivity features of your Craftsman rider!

Application the Application of the Play Store

Application of t