 




# INSTRUCTIONS & WARRANTY

Model# SXE86011

Printed in China

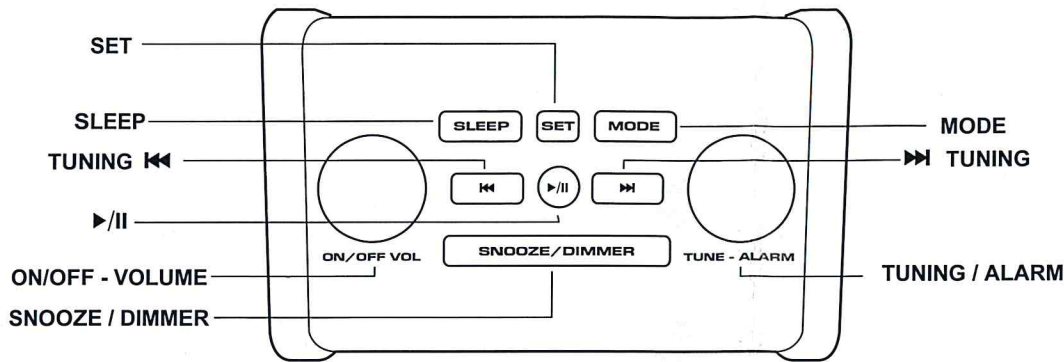

### ONE-YEAR LIMITED WARRANTY

NYL Holdings LLC warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If a defect covered by this warranty occurs during the warranty period, package your clock carefully and send it to:


Att: Repair center / NYL Holdings LLC  
99 West Hawthorne Ave. Suite 202  
Valley Stream, NY 11580

(516) 256-3240

You must include a Proof of Purchase, either the original receipt or a photocopy and a check or money order for USD \$7.95 to cover the cost of shipping and handling. Also include your return address inside the package. NYL Holdings LLC will repair or replace the clock and return it to you. NYL Holdings LLC will not be liable for any loss or damages, including incidental or consequential damages of any kind: from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, these limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.


### GETTING STARTED

Connect the POWER ADAPTER into the back of the clock and plug the other end into a standard electrical outlet.

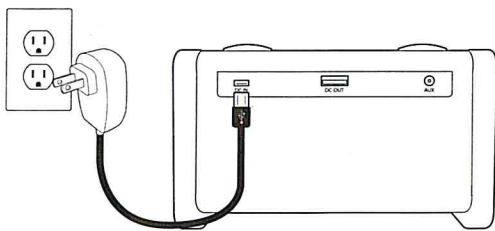

### USB CHARGING PORT

To charge your smartphone, connect your USB charging cord to the USB charging port located on the back of the clock.

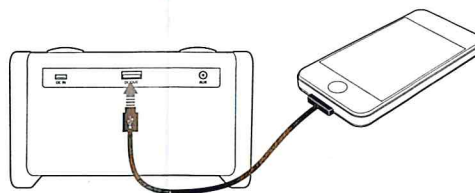

Note: This USB charging port may not support all phones, tablets or devices.

### FCC Remarks

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### HANDS FREE CALLING

Note: To use hands free calling, the bluetooth must be turned and paired to the clock. When there is an incoming call, the clock will announce the phone number of the incoming call.



To ANSWER an incoming call, press the PLAY / PAUSE button once.

Note: To IGNORE an incoming call, press the PLAY / PAUSE twice.


To END a call, press the PLAY / PAUSE button once.



To re-dial, the last outgoing call (made by your phone) press the PLAY / PAUSE button twice.

### DISPLAY DIMMER


Press the DIMMER button to adjust the brightness of the display (4 Levels).

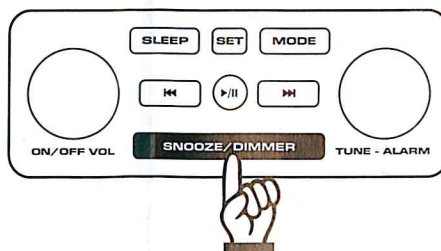


**Note: If no settings are made within 10 seconds, the clock will automatically return to display the normal time. If this happens, you will need to start the setting procedure again from step 1.**

## TIME SETTING

- #1** Press the SET button for 2 seconds, the Hour digits will start to flash.

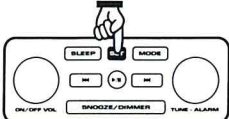


- #2** Adjust the HOUR by turning the TUNING knob until the correct time is reached.

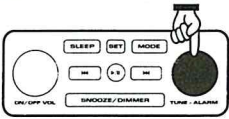


**Note: Be sure to set the hour with the correct AM or PM time period.**


- #3** Press the SET button once, the MINUTE digits will flash.

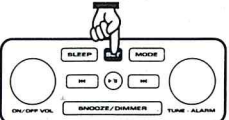

- #4** Adjust the MINUTES by turning the TUNING knob until the correct time is reached.

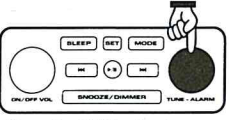


- #5** Press the SET button to save and exit the time setting.

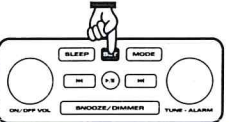

## ALARM TIME SETTING

- #1** Press the ALARM knob once, to display the ALARM time.

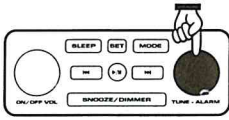

- #2** Press and hold the ALARM knob for 2 seconds, the HOUR digits will flash.

- #3** Adjust the HOUR by turning the ALARM knob until the desired alarm time is reached.

**Note: Be sure to set the hour with the correct AM or PM time period.**

- #4** Press the ALARM knob button once, the MINUTE digits will flash.

- #5** Adjust the Minutes by turning the ALARM knob until the desired alarm time is reached.

- #6** Press the ALARM knob button once.

- #7** Turn the ALARM knob to select ALL or ONE:

**Note: ALL = Alarm Everyday  
ONE = One Time Alarm**

- #8** Press the ALARM knob button once.


- #9** Turn the ALARM knob to select AL0 (BUZZER) or AL2 (MUSIC)

**AL0 = BUZZER  
AL2 = MUSIC(RADIO, BLUETOOTH, AUX)**

- #10** Press the ALARM KNOB to save and exit the alarm setting.

**Note: Alarm will automatically turn on once you exit the alarm setting**

## ALARM ON/ OFF

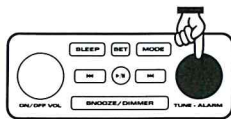


Press the ALARM button once to turn on the alarm, the alarm on indicator will illuminate.

Press the ALARM button one more time to turn off the alarm, the alarm on indicator will no longer be visible.

## USING THE SNOOZE


Press the SNOOZE button on the top of the clock when the alarm is sounding. The alarm will be silenced temporarily, but will resume sounding after 10 minutes.

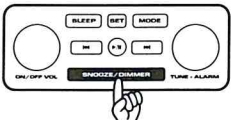


## USING THE RADIO

- #1** Press the MODE button 2 times the radio station frequency will show on the display.


Radio frequency will show for 5 seconds before returning to display the normal time. The radio will turn the music on to the last used radio station.

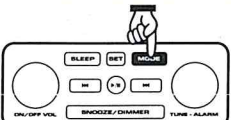

- #2** To tune radio stations, rotate the tuning knob to select a radio station.

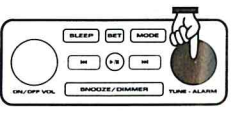


- #3** To turn off the radio, press the SET button once.

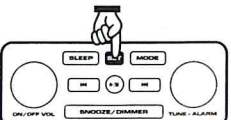

## STORE RADIO STATIONS PRESETS


Press and hold the TUNING >>> or <<< for 2 seconds to automatically search / store up to 40 stations.

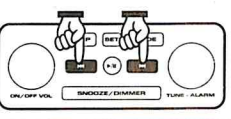

**Note: The clock will automatically search for the stations with the best sound quality and save them as presets.**


## LISTENING TO A PRESET RADIO STATION

Press the >>> or <<< buttons intermittently to select a radio preset (P01 - P40).

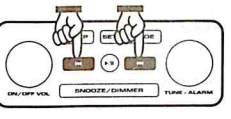

## BLUETOOTH MUSIC

- #1** Press and hold the MODE button, the Bluetooth icon will blink in the lower left corner of the display.

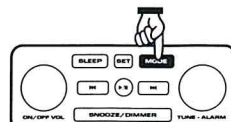


The clock will automatically connect to paired bluetooth devices if the device is turned on, and within range.


- #2** Enable your bluetooth device and connect to device name "SXE86011".

**Note: When your bluetooth device is connected, the bluetooth ON indicator will be solid on the display.**

- #3** Press <<< or >>> to skip or go back a song.

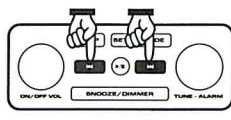

- #4** Press the >||/|| button to play or pause the current song.

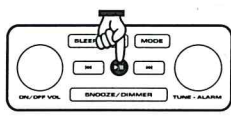


- #5** To turn off the Bluetooth music, press the SET button once.




## AUX LINE-IN MUSIC

You can connect any audio device that is equipped with a standard headphone connector. Simply plug the 3.5mm line-in audio cord (included with your clock) to the AUX port on the back of the clock, and the other end into your audio device.

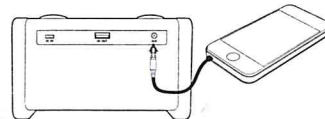


- #1** Press the MODE button repeatedly until AUX icon shows on the display.

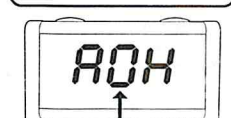

**Note: The AUX will show in place of the TIME digits for 5 seconds**

**Note: The music must be controlled (Play, Pause, Stop, Forward, Back) on your music device.**

- #2** To turn the music OFF, press the SET button once.

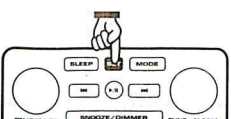

## ADJUSTING THE VOLUME

Adjust the VOLUME for radio or bluetooth by rotating the volume knob.




## SLEEP FUNCTION

**Note: This function allows you to listen to the radio, Bluetooth or AUX line-in while you fall asleep.**

**Note: The radio will turn on to the last used radio settings (station and volume). To adjust these settings, please refer to USING THE RADIO and ADJUSTING THE VOLUME sections of this instruction manual.**

- #1** Press the SLEEP button. The display will show 0. This is the default sleep duration.

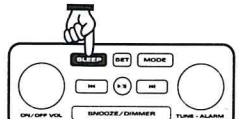

- #2** Press the SLEEP button repeatedly to select the sleep duration: 10, 20, 30, 40, 50, 60, 70, 80, 90, 100, 110, 120 minutes or OFF.



- #3** To cancel the SLEEP function before the end of the set time, Press the SLEEP button until it turns off.