

REMININGTON®

4-IN-1
VACUUM
TRIMMER

Use and Care Guide
VPG-6530

REFRESH YOUR LOOK

Scan the QR code to check out our weekly man-style tip to keep you looking good! or visit RemingtonProducts.com/ManStyle

Join us for special offers, grooming tips and product news.

@RemReadyMan

Facebook.com/RemingtonReady



Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers

Register online at: www.RemingtonProducts.com

IMPORTANT SAFETY
INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING
THIS APPLIANCE.

DANGER

- To reduce the risk of electric shock:
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
 - Do not use while bathing or in the shower.
 - Do not place or drop into water or other liquid.
 - Do not place or store this appliance where it can fall or be pulled into a tub or sink.
 - Except when charging, always unplug this appliance from the electrical outlet immediately after using.
 - Unplug this appliance before cleaning it.

WARNING

- To reduce the risk of burns, fire, electric shock or injury to persons:
- This appliance is for household use only.
 - An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
 - Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.
 - Use this appliance only for its intended use as described in this manual.
 - Do not use the mini shaver on your scalp.
 - Do not use attachments not recommended by Spectrum Brands, Inc.
 - Keep the cord away from heated surfaces.
 - Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.

- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Make sure the cord is disconnected from the groomer stand when storing.
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.

SAVE THESE INSTRUCTIONS

Product Features



- 1. Removable Hair Chamber
- 2. On/Off Switch
- 3. Charging Indicator Light
- 4. Power Port
- 5. Full Size Trimmer
- 6. Detail Trimmer
- 7. Nose/Ear Trimmer
- 8. Foil Shaver
- 9. Adjustable Comb
- 10. 4 Beard/Stubble Combs (1.5mm, 3mm, 6mm, 9mm)
- 11. Storage Bag

Before Using

Before using your Personal Groomer for the first time, charge the unit for 4-6 hours for optimal performance:

What Attachments to Use

	Full Size Trimmer	Nose/Ear Trimmer	Combs	Foil Shaver
Beard	x		x	
Beard line	x			x
Ear		x		
Eyebrow		x	x	
Mustache	x		x	
Nape of neck	x			
Nose		x		
Sideburns	x		x	x

How To Use

- Select attachment that best fits your personal grooming needs.
 - Place attachment atop Groomer Body. Secure by carefully inserting attachment until it clicks into place.
 - To remove attachment, press the head release buttons on the side and pull the attachment away from the body groomer.
 - Slide On/Off Switch upward to power the Personal Groomer.
 - The Adjustable Comb attachment is to be used with the Full Size Trimmer Attachment. To attach, align the Comb side rails with slots of Trimmer head. Secure Comb by sliding downward. (NOTE: a clicking sound means Comb attachment is secure and ready for use).
- NOTE:** The Adjustable Comb Attachment have various length settings. When first becoming familiar with the Personal Groomer, begin with a higher numbered setting. Adjust cutting length, as desired.
- To use the four Beard & Stubble Combs, hook the front edge of the comb to the front teeth of the main trimmer blade. Then push the back of the comb down until it snaps in place.

Cleaning, Care & Maintenance

NOTE: Always clean trimmer attachments regularly to ensure maximum performance and a proper operating life.

DO NOT RINSE TRIMMER HANDLE.

CLEANING ATTACHMENTS WITH WATER

1. Remove attachment.
2. Rinse **ONLY** the attachment under warm running water. Do NOT use hot water as this might cause damage.

CLEANING FOIL SHAVER

(Do NOT rinse nor oil foil shaver attachment as this is permanently lubricated.)

1. Remove attachment by pressing security latches on front of foil shaver.
2. Remove head, shake to remove excess clippings.
3. Replace attachment by gently snapping into place.

OILING BLADES & CAUTIONS

- Rinsing attachments under water (above) requires lubricating the cutting blades 1x monthly. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with fingertip. Wipe away all excess.

CLEANING THE HAIR CHAMBER

1. Pull entire chamber out of groomer body.
2. Open chamber and dispose of hair in waste basket.
3. Rinse chamber under running water.
4. Let chamber dry.
5. Replace entire chamber back into groomer body.



Battery Removal

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the outlet when removing the battery.
- Ensure that the clipper is discharged of all power and disconnected from the outlet.
- Lift or pry the top housing and remove the top housing.
- Unscrew the two screws located on the printed circuit board assembly.
- Lift or pry the clipper halves apart, exposing the battery chamber.
- Take out the battery and printed circuit board assembly from the battery chamber.
- Cut the tabs on both ends of the battery and remove it from the printed circuit board.
- The battery is to be disposed of safely.

NOTE: Always recycle or properly dispose of batteries according to Local and State requirements.

CAUTION: THESE LITHIUM ION BATTERIES MUST BE RECYCLED OR DISPOSED OF IN ACCORDANCE WITH STATE AND LOCAL REGULATIONS.

Do not burn or mutilate, as they may burst or release toxic materials. Do not short-circuit, as this may cause burns.

Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S. or 800-268-0425 in Canada or visit www.RemingtonProducts.com.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648.

Remington Guarantees Satisfaction After 30 Days!

Remington Men's Shave and Groom 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® branded Men's Shave and Groom product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington® and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington® and postmarked no later than 60 days after purchase of the Remington® branded Men's Shave and Groom product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day**.

3. In addition, Remington®, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
 4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
 5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
 6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
 7. Please allow 4-6 weeks to receive your refund by check.
- *Applies to US and Canadian customers' returns only.

100-240 VAC, 50/60 Hz

® Registered Trademark of Spectrum Brands, Inc. (SBI)

Questions or comments: Call 800-736-4648 in the U.S. or 800-268-0425 in Canada or visit **RemingtonProducts.com**.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

Dist. by: Spectrum Brands Canada, Inc.,

131 Saramia Crescent, Vaughan, ON L4K 4P7

© 2013 SBI. 10/13 Job# 2013-7-10-65_RevA

Made in China

T22-0001769

Contains a



Intertek

listed adaptor