

REMINGTON®

VACUUMSTRIM®
TITANIUM
REVOLUTIONARY TRIMMING TECHNOLOGY



*Use and
Care Guide*

HKVAC-2000

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance. When using an electrical appliance, basic safety precautions should always be followed, including the following.

DANGER

To reduce the risk of electric shock:

- Do not use while bathing or in the shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately. Some electrical parts inside the clipper are electrically live, even when the switch is off.
- Always unplug the clipper from the electrical outlet immediately after using.
- Unplug this appliance from the electrical outlet before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended while plugged in. Do not pull, wrap or twist cord around appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended or authorized by Spectrum Brands, Inc.
- Never operate this appliance if it has a damaged cord or plug. If it is not working properly, or if it has been dropped, damaged, or dropped into water, return it to Spectrum Brands, Inc. for repair or replacement.
- Keep cord away from heated surfaces.

- Never drop or insert any object into any opening on this appliance.
- Do not place appliance on any surface while it is operating.
- Do not use this appliance with a damaged or broken cutting unit, as injury may occur. Always make certain blades are aligned properly.
- Always slide power switch to the "off" position when plugging or unplugging from an electric outlet.
- Always store your clipper in a moisture-free environment. Do not store trimmer in temperatures exceeding 140°F (60°C).
- Always slide power switch to the "off" position before removing hair chamber as rotating fan blades are accessible and could pose a hazard.
- This clipper is designed for use with 110-120 Volts AC, 60 HZ electrical outlets. Do not connect the clipper to a higher voltage than indicated, as it may result in personal injury and/or damage to the clipper.
- This appliance does not contain any user-serviceable parts.
- This appliance is for household use only.

KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS


Contents

English1
 Spanish13
 French25


Product Features

Groomer Parts

 - A. Hair clipper
- B. Blade cover
- C. 1/8" guide comb
- D. 1/4" guide comb
- E. 3/8" guide comb
- F. 1/2" guide comb
- G. 3/4" guide comb
- H. 1" guide comb
- I. Left ear guide comb
- J. Right ear guide comb
- K. Styling comb
- L. Scissors
- M. Sectioning clips
- N. Cleaning brush
- O. Instruction book
- P. Storage case
- Q. Grips on chamber (do not squeeze)
- R. On/Off switch
- S. Hair inlet
- T. Fan chamber
- U. Hair chamber

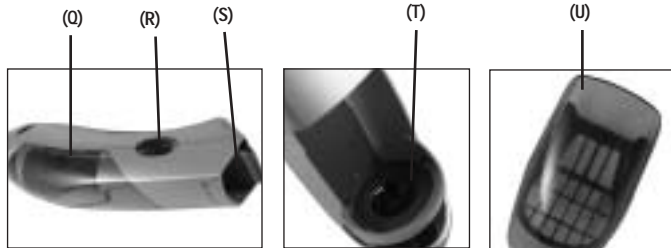

Product Features

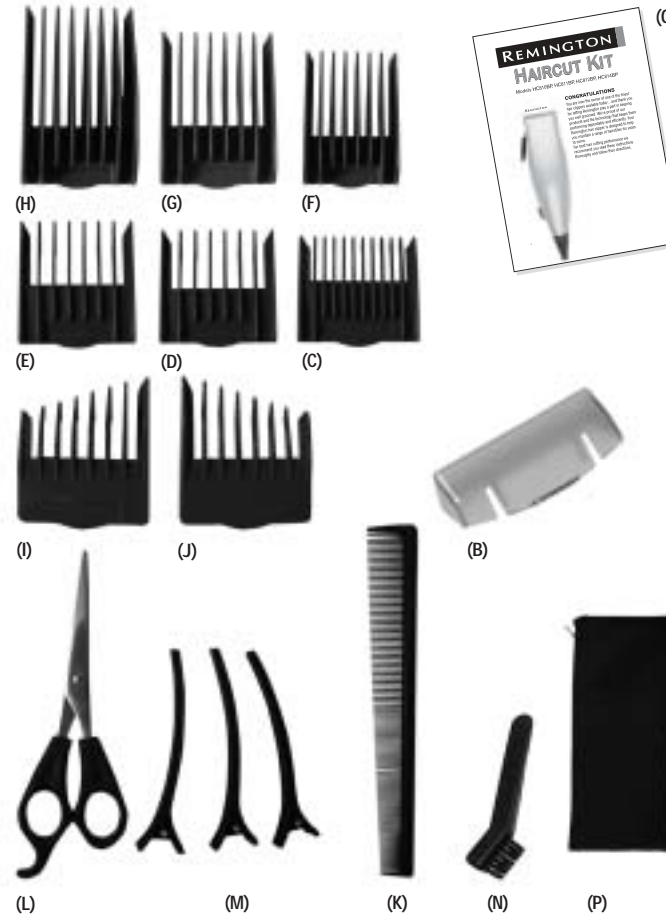 

How to Use

Before Cutting Hair

1. Make sure your hair clipper is operating correctly.
2. The vacuum feature will not function properly if the hair chamber is removed.
3. The person should be seated so that the top of his head is at your eye level.
4. Comb the hair as it is normally styled.
5. Comb out all knots and tangles.
6. Ensure the hair is dry. Hair clippers perform best with dry hair, making it easier to see how much hair is being cut.
7. Hold the hair

clipper in the palm of one hand with your thumb resting firmly on the top of the hair clipper. This grip provides comfortable cutting control.



To Attach Trimming Guides

1. Select the trimming guide that matches the length you want the hair to be after the cut. The trimming guides are numbered and marked with 1/8" (3mm), 1/4" (6mm), 3/8" (9mm), 1/2" (12mm), 3/4" (18mm), and 1" (25mm).
2. Hold the trimming guide with the teeth up. Slide the trimming guide onto the blades until it locks into place.

6

Giving A Comfortable, Even Cut

Allow the clipper to cut through the hair without moving it too quickly. Moving the clipper too quickly may create a pulling sensation.

As the clipper cuts the hair, the vacuum sucks the clippings through the inlet into the hair chamber.

Use short strokes when cutting, and initially use the longest trimming guide. You can always use a closer trimming guide later if you want a closer cut.

How to Give a Haircut

1. Start at the back of the head. Holding the clipper as shown, lightly stroke upwards making sure you are taking off the desired amount of hair. Work your way up to the crown of the head in layers. When completed, comb the area to remove any loose hair and to determine if you need any further cutting.
2. Repeat the same procedure for each side of the head. Make sure the length of the hair is trimmed to the same length on both sides of the head.
3. To trim around the ears, remove the trimming guide and replace with either the left or right ear guide. The shorter guide teeth are designed to be toward the ear. Move the clipper from the front



4. The final trim can be made with the hair clipper or the included scissors.



Make sure to check over the entire head for any uneven areas. For styled hair or giving quick trims, you may prefer using your hair clipper without the trimming guide.



Very Short Styles

1. Using the 1/2" (12mm) trimming guide, hold the comb flat against the head and move the hair clipper from the back of the neck to the crown of the head.
2. Cut in a similar manner from the side to the top of the head. Then cut from the front to the crown of the head.
3. If a "Flat Top" style is desired, then remove the trimming guide and use the barber's comb. Trim a little at a time until the "flat look" is achieved.



Emptying Hair Chamber:

1. Turn off the unit.
2. Hold the the underside of the unit with one hand.
3. Locate the grips on the side of the chamber (fig. 1). Using your thumb and forefinger, lift both sides of the chamber at the same time.
4. Empty the contents into a waste container. (fig. 2)
5. You may have to vigorously shake the chamber or scoop out some of the compacted hair clippings.
6. Be careful not to puncture the screens on the hair chamber while emptying the unit.
7. Once finished emptying, place the chamber back onto the unit and push gently until the chamber clicks into place.

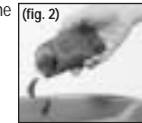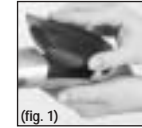

Line Cord Safety Tips

1. To insert plug, grasp it firmly and guide it into outlet.
2. To disconnect the appliance, grasp the plug and remove it from outlet. Do not pull or yank on the cord or appliance. **Do not wrap the cord around the appliance.**

7

Cleaning and Maintenance

Cleaning and Maintaining Your Clipper

Your clipper is fitted with high-quality Titanium coated blades that are permanently lubricated. Cleaning should only be done with a soft brush, such as the brush supplied with the unit.

Clean your clipper regularly to ensure that the units operating life is not prematurely shortened.

- Unplug adapter from wall outlet
- Do not apply pressure or hard objects to the cutters.
- Do not use liquid cleaners on the cutters or harsh or corrosive chemicals on the units main body.

Weekly (or as needed)

Clipper should always be shut off. Remove clipper guard attachment from clipper. Shake or blow out any accumulated hairs.

Main clipper

1. Remove the blades by pushing upward on the cutter teeth. The (hairpocket) underside of the cutter assembly will be exposed.
2. Blow out any loose hair that has accumulated. Brush out any remaining hair from the cutter teeth and hair pocket with the brush provided. Do not rinse the cutter assembly under water or use cleaning fluids, as this could remove the lubrication.

Troubleshooting

Clipper cutters do not move:


- The cutting unit may be dirty and clogged. Clean the unit as directed in Cleaning & Maintenance section.

Vacuum not functioning properly:

- Ensure that the chamber has been emptied and placed back into the unit properly.
- Check for obstructions in the inlet and air flow path.

Fan chamber clogged up:

- Remove the hair chamber.
- Using the cleaning brush that has been provided, gently brush between the protective exhaust vents. If necessary, blow into the fan chamber. Hair clippings should become loose and fall out.

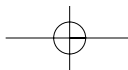

Warranty

Full Five-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Spectrum Brands, Inc., Attention: Consumer Services, 601 Rayovac Drive, Madison, WI 53711. For more information call 800-736-4648 in the US or 800-268-0425 in Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

Performance Guarantee

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

120 VAC 60 Hz

Questions or comments:

Call 800-736-4648 in the US or 800-268-0425 in Canada. or visit www.remington-products.com

Dist. by: Spectrum Brands, Inc., Madison, WI 53711
Dist. by: Rayovac Canada Inc., Mississauga, ON L4W 2T7

 
 
 
REMINGTON and VACUUM TRIM are trademarks of ROVCAL, INC.

©2005 ROVCAL, INC.
07/05 CS28145

T22-17167

Spectrum Brands, Inc.
800-736-4648

MADE IN CHINA



RE

VAC
TI

Ma



REMINGTON®