


CONQUER THE CONDITIONS

2017 SNOW THROWER MAINTENANCE

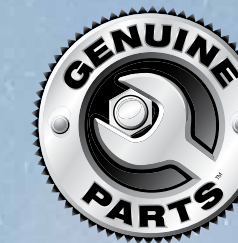

CRAFTSMAN®

ARNOLD®



BELTS

Examine belts each season for any signs of wear



SPARK PLUG

Check yearly and every 25 hours of use



PINS & BOLTS

Be prepared with extra pins and bolts



OILS

Change oil every 50 hours of use



STABILIZER

Keep fuel fresh with stabilizer



SNOW & ICE REPELLENT

Helps prevent Snow & Ice Build-Up



ROLLING SKID SHOES

Prevent damage to driveways and sidewalks



ENGINE KEY

Always keep a spare key



CAB

Protection from the elements while snow throwing



COVER

Protect your snow thrower when not in use



GLOVES

Warmth and comfort



ULTRA CLAVA MASK

Weatherproof protection



QUICK CLAVA MASK

Fleece knit warmth

To keep your snow thrower in top condition year-round, follow these **CARE & MAINTENANCE TIPS**

START OF EACH SEASON:

- Change the oil
- Change the spark plug

FREQUENTLY FOR SUSTAINED PERFORMANCE:

- Check oil level / top off as needed
- Tighten/replace loose or missing hardware
- Clean off unit

CONTINUALLY FOR MAXIMUM PERFORMANCE:

- Check spark plug
- Lube control linkages and pivots
- Lube wheels with auto grease
- Lube gear and auger shafts
- Check chute control cable for slack

BEFORE YEARLY STORAGE:

- Run engine until all fuel is gone



TOP ONLINE SELLERS ▶

Visit Sears.com/snow for complete list of all available snow thrower accessories

DISCOVER MORE @ sears.com/snow