


INTRODUCTION

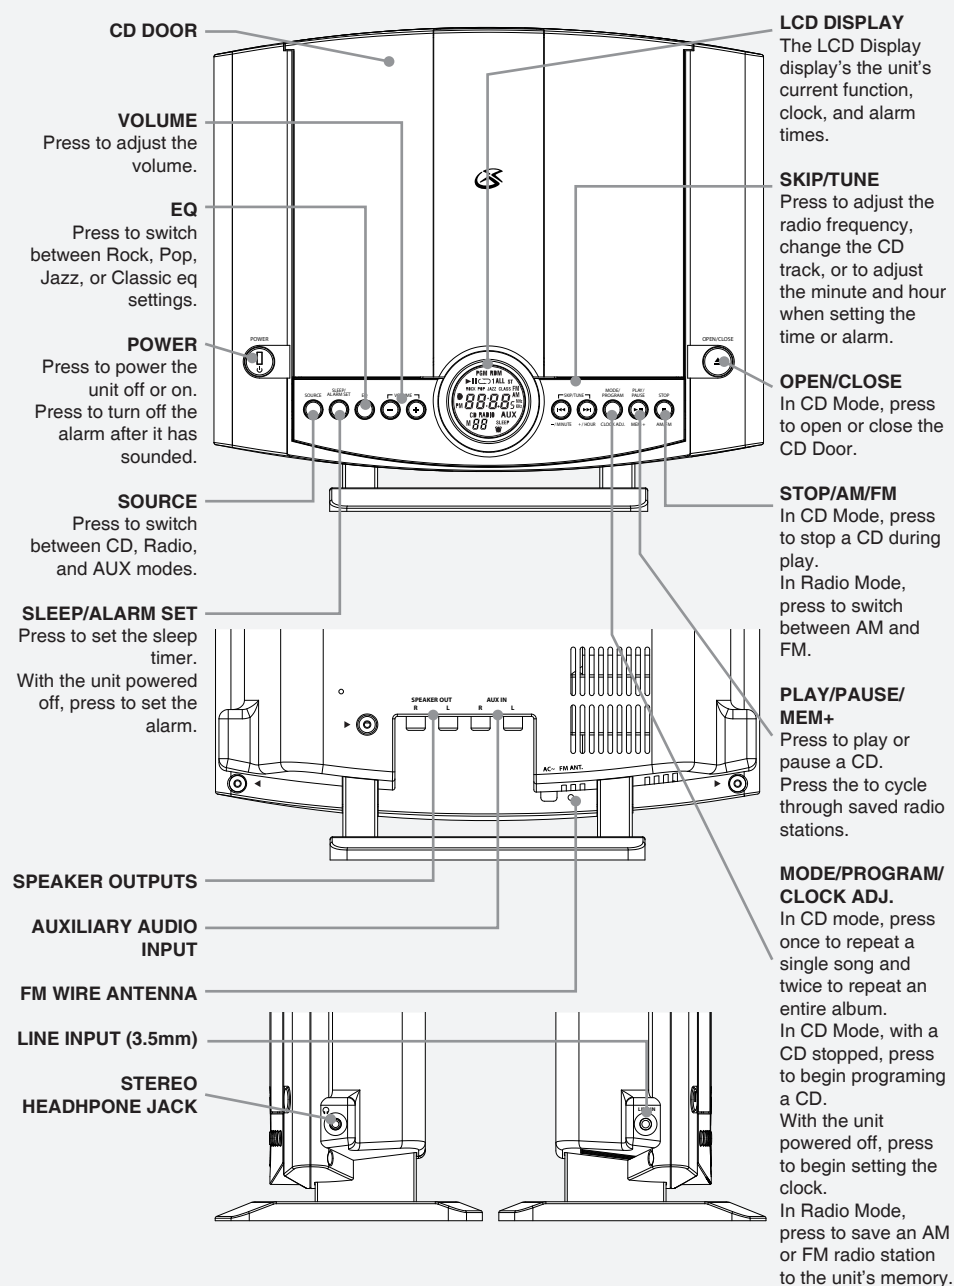

4 GPX | HM3817DTBLK

SOURCE

Press the Source button to switch between CD, Radio, and AUX modes.

POWER

Press to power the unit off or on.
Press to turn off the alarm after it has sounded.

EQ

Press the EQ button to switch between Rock, Pop, Jazz, or Classic eq settings.

TUNE/SKIP/SEARCH

In radio mode, press to tune the AM or FM radio.
In CD mode, press to skip between tracks on a loaded CD. Press and hold to search through an individual track on a loaded CD.

SLEEP/ALARM SET

Press to set the sleep timer.
Press, with the unit powered off, to set the alarm.



DISPLAY

Press to view the clock on the LCD display.

STOP/AM/FM

In CD mode, press to stop a CD during play.
In radio mode, press to switch between AM and FM radio modes.

SNOOZE

After the alarm sounds, press to delay the alarm for and additional 10 minutes.

PLAY/PAUSE/M+

In CD mode, press to play or pause a loaded CD.
In radio mode, press to cycle through saved AM or FM radio stations

VOLUME

Press the Volume buttons to increase or decrease the volume of audio output from the unit.

MUTE

Press the mute button to decrease the volume entirely.

MODE/CLOCK ADJ.

Press, when playing a CD in *CD Mode*, once to repeat a single song and twice to repeat an entire album.
Press, in *CD Mode*, with a CD stopped, to begin programming a CD.
Press, with the unit powered off, to begin setting the clock.
Press, in *Radio Mode*, to save an AM or FM radio station to the unit's memory.

CUSTOMER HELPLINE | 1-888-999-4215

GPX | HM3817DTBLK 5

CLOCK AND ALARM

Setting the Alarm

- Press the **POWER** button to power the unit off.
- Press the **SLEEP/ALARM SET** button. The time will begin to blink.
- Press the **SKIP/TUNE** buttons to adjust the hour and minute.
A PM INDICATOR will appear on the display when the time is set in the PM. Make sure to set the correct AM/PM as desired.
- Press the **SLEEP/ALARM SET** button to set the adjusted alarm time.
An alarm clock icon will appear on the LCD Display when the alarm is set.
- Press the **SOURCE** button to select CD, RADIO, AUX, or BUZZER.
For BUZZER mode, the display will not show any indication.
- To stop the alarm after it has sounded, press the **POWER** button.

Cancelling the Alarm

- Press the **SLEEP/ALARM SET** button twice to cancel the alarm.
The ALARM ICON on the display will disappear.
- To turn the alarm back on, after cancelling, press the **SLEEP/ALARM SET** button two more times.
The ALARM ICON will appear on the display.

Setting the Clock

- Press the **POWER** button to power the unit off.
- Press the **MODE/PROGRAM/CLOCK ADJ.** button, the time will begin to blink.
- Press the **SKIP/TUNE** buttons to adjust the hour and minute.
A PM INDICATOR will appear on the display when the time is set in the PM. Make sure to set the correct AM/PM as desired.
- Press the **MODE/PROGRAM/CLOCK ADJ.** button to set the adjusted time.

Setting the Sleep Timer

- Press the **POWER** button until the unit is turned on.
When the unit is on, the POWER button will not be illuminated red.
- Press the **SLEEP/ALARM SET** button until "SLEEP" appears on the LCD.
- Press the **SLEEP/ALARM SET** button consecutively to adjust the sleep time between 10 and 90 minutes.
- After the allotted time has expired, the unit will power off.

CD & LINE IN

Note: This unit is not compatible with MP3 CDs.

Playing a CD

- If this is your first time playing a CD on this unit, remove the cardboard disc from behind the CD DOOR before attempting to play an actual CD.
- Press the **POWER** button.
 - Press the **SOURCE** button until the unit is in CD mode.
 - Press the **OPEN/CLOSE** button to open the CD DOOR.
 - Insert a CD into the unit.
The loaded CD will begin playing automatically.


Programming a CD

- Follow the steps for "Playing a CD", then press the **STOP** button.
- Press the **MODE/PROGRAM/CLOCK ADJ.** button.
"PGM" and "P-01" will appear on the LCD display, indicating that the unit is in program mode, and it is ready for the first track to be selected.
- Press the **SKIP/TUNE** buttons to cycle through the tracks on the CD.
- Press the **MODE/PROGRAM/CLOCK ADJ.** button to select a track.
"P-01" will change to "P-02".
- Repeat steps 3, 4, and 5 until the desired CD tracks are programmed.
- Press the **PLAY/PAUSE** button to begin playing the programmed tracks.
- To review the programmed tracks, stop the CD, press the **MODE/PROGRAM/CLOCK ADJ.** button repeatedly.

Using the Line Input

Requires a Line Input Cable (included)

- Connect an audio device to the **LINE INPUT** using the included line input cable.
- Press the **SOURCE** button to set the unit to AUX mode, as indicated by the LCD Display.
When the LINE INPUT is connected, the AUXILIARY AUDIO INPUT will not work.
- The audio device will now play through the speakers of the player.

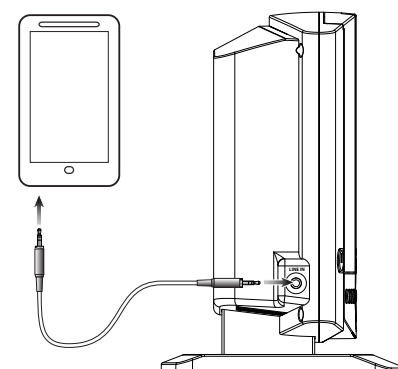

6 GPX | HM3817DTBLK

CUSTOMER HELPLINE | 1-888-999-4215

GPX | HM3817DTBLK 7