

CRAFTSMAN®

Product questions or problems?

1-888-331-4569

Customer Care Hot Line

Get answers to questions, troubleshoot problems,
order parts, or schedule repair service.

Para respuestas a preguntas o problemas, y ordenar
piezas o pedir servicio para la reparación de su equipo.

To help us help you, register your product at www.craftsman.com/registration

Para poderte ayudar mejor, registra tu producto en www.craftsman.com/registration

Join the Craftsman Club today!

CRAFTSMAN® CLUB

www.craftsman.com/signup

Receive exclusive member benefits including special pricing and offers,
project sharing, expert advice, and SHOP YOUR WAY REWARDS!

Como miembro exclusivo, recibe diversos beneficios como ofertas, precios especiales, proyectos
nuevos, consejos de expertos y nuestro programa de puntos SHOP YOUR WAY REWARDS!

® Registered Trademark / ™ Trademark of KCD IP, LLC in the United States, or Sears Brands, LLC in other countries
® Marca Registrada / ™ Marca de Fábrica de KCD IP, LLC en Estados Unidos, o Sears Brands, LLC in otros países

Repair Parts Manual

CRAFTSMAN®

LAWN TRACTOR


19.0 HP,* 42" Mower

Electric Start

Automatic Transmission

Model No.

917.255810

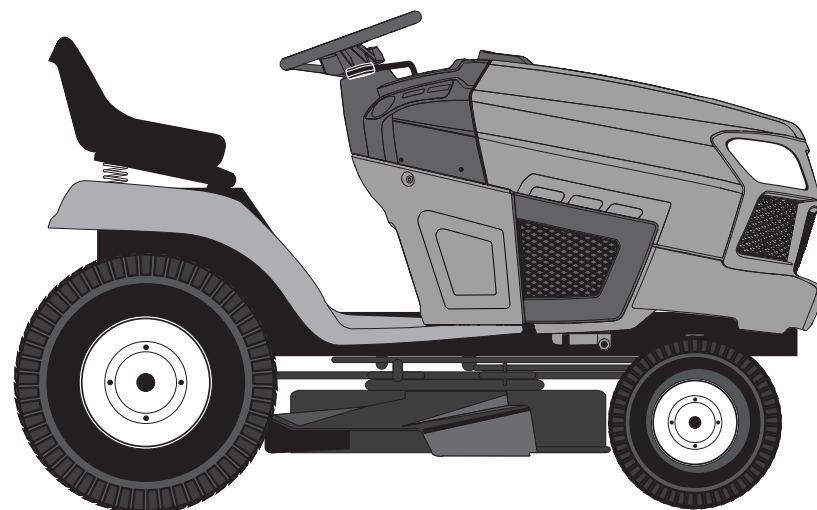

For answers to your questions
about this product, call:

1-888-331-4569

Craftsman Customer Help Line

Sears Brands Management Corporation, Hoffman Estates, IL 60179 U.S.A.
Visit our Craftsman website: www.craftsman.com

* The power rating as declared by the engine manufacturer is the average gross power output at the specified RPM of a typical production engine for the engine model measured using SAE Standards for engine gross power. Please refer to the engine manufacturer for details.

⚠ WARNING: This tractor is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator.

In the state of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester for the muffler is available through your nearest Sears service center (See ENGINE ASSEMBLY section of this manual).

REPAIR PROTECTION AGREEMENTS

Congratulations on making a smart purchase. Your new Craftsman® product is designed and manufactured for years of dependable operation. But like all products, it may require repair from time to time. That's when having a Repair Protection Agreement can save you money and aggravation.

Purchase a Repair Protection Agreement now and protect yourself from unexpected hassle and expense.

Here's what's included in the Agreement:

- **Expert service** by our 12,000 professional repair specialists.
- **Unlimited service and no charge** for parts and labor on all covered repairs.
- **Product replacement** if your covered product can't be fixed.
- **Discount of 25%** from regular price of service and service-related parts not covered by the agreement; also, 25% off regular price of preventive maintenance check.
- **Fast help by phone** – phone support from a Sears representative on products requiring in-home repair, plus convenient repair scheduling.

Once you purchase the Agreement, a simple phone call is all that it takes for you to schedule service. You can call anytime day or night, or schedule a service appointment online.

Sears has over 12,000 professional repair specialists, who have access to over 4.5 million quality parts and accessories. That's the kind of professionalism you can count on to help prolong the life of your new purchase for years to come. Purchase your Repair Protection Agreement today!

Some limitations and exclusions apply.

For prices and additional information call 1-800-827-6655.

SEARS INSTALLATION SERVICE

For Sears professional installation of home appliances, garage door openers, water heaters, and other major home items, in the U.S.A. call 1-800-4-MY-HOME®.

TRACTOR - - MODEL NUMBER 917.255810

BRIGGS & STRATTON ENGINE-MODEL NUMBER 33R877, TYPE NUMBER 0002-G1

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
552	697144	Bushing-Governor Crank	1023	797421	Cover-Rocker
562	691119	Screw (Governor Control Lever)	1024	794644	Pump-Oil
579	691029	Nut (Starter Cable)	1026	692003	Rod-Push (Intake) (Aluminum)
584	794682	Cover-Breather Passage		692011	Rod-Push (Exhaust) (Steel)
601	791850	Hose-Clamp (Green)	1027	795890	Filter-Oil
614	691620	Pin-Cotter (Governor Crank)	1029	691751	Arm-Rocker
616	692012	Crank-Governor	1034	690822	Guide-Push Rod
617	692138	Seal-O Ring (Intake Manifold) (Red)	1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)
633	699813	Seal-Choke/Throttle (Choke Shaft)	1040	698368	Plate-Trim
634	698779	Spring/Seal Assembly	1044	698139	Screw (Flywheel)
635	691909	Boot-Spark Plug	1051	691265	Ring-Retaining
654	690958	Nut (Carburetor)	1058	277675	Operator's Manual
684	697157	Screw (Breather Passage Cover)	1059	698516	Kit-Screw/Washer (Alternator)
691	692407	Seal-Governor Shaft	1090	691293	Retainer-Brush
697	791680	Screw (Drive Cap)	1091	691333	Cap-Limiter
718	690959	Pin-Locating	1095	794152	Gasket Set-Valve
729	691224	Clip-Wire	1119	691183	Screw (Alternator)
741	697128	Gear-Timing	1127	695407	Screw (Float Bowl)
750	790832	Screw (Oil Pump Cover)	1139	796449	Washer (Fuel Pump)
757	793242	Link-Counterweight	1263	697124	Reed-Breather
758	793763	Counterweight	1264	697104	Screw (Breather Reed)
759	697392	Pin-Counterweight	1265	794151	Support-Blower Housing
773	796448	Retainer (Fuel Pump)	1266	691917	Seal-O Ring (Intake Elbow) (Red)
783	693713	Gear-Pinion	1270	793243	Plug-AVS Counterweight
789	698329	Harness-Wiring	1279	691108	Screw (Blower Housing Support)
797	693167	Nut (Brush Retainer)	1329	N/A	Replacement Engine (Not Available at this Printing)
801	691283	Cap-Drive	1330	N/A	Repair Manual (Not Available at this Printing)
802	691286	Cap-End	1332	591991	Washer (Rotating Screen)
830	691095	Stud-Rocker Arm			
842	691031	Seal-O Ring (Dipstick)			
847	790442	Dipstick/Tube Assembly			
850	100106	Sealant-Liquid			
851	692424	Terminal-Spark Plug			
868	690968	Seal-Valve			
877	790544	Wire/Connector-Alternator			
883	692236	Gasket-Exhaust			
914	691108	Screw (Rocker Cover)			
918	791744	Hose-Vacuum (Cut to Required Length)			
943	690589	Seal-O Ring (Oil Pump Cover)			
947	699915	Solenoid-Fuel			
964	799159	Cap-Connector			
965	499613	Cover-Oil Pump			
967	793685	Filter-Pre Cleaner			
968	591644	Cover-Air Cleaner			
975	699502	Bowl-Fuel			
987	698777	Seal-Throttle Shaft			
1005	796084	Fan-Flywheel			
1017	796981	Screen-Oil Pump			
1022	2724755	Gasket-Rocker Cover			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 917.255810


BRIGGS & STRATTON ENGINE-MODEL NUMBER 33R877, TYPE NUMBER 0002-G1

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	591465	Cylinder Assembly	135	698780	Tube-Fuel Transfer
3	391086s	Seal-Oil (Magneto Side)	137	698781	Gasket-Float Bowl
4	592849	Sump-Engine	141	792777	Kit-Choke Shaft
5	591750	Head-Cylinder	187	791805	Line-Fuel (Formed)
7	794114	Gasket-Cylinder Head	187A	791766	Line-Fuel (Cut to Required Length)
9	697109	Gasket-Breather			
11	794683	Tube-Breather	188	691693	Screw (Control Bracket)
12	697110	Gasket-Crankcase	192	691986	Adjuster-Rocker Arm
13	592244	Screw (Cylinder Head)	202	691841	Link-Mechanical Governor
15	690946	Plug-Oil Drain	209	796260	Spring-Governor (Green)
16	591763	Crankshaft	216	691840	Link-Choke
20	795387	Seal-Oil (PTO Side)	217	695409	Spring-Choke Return
22	692125	Screw (Crankcase Cover/Sump)	222	694042	Bracket-Control
23	591759	Flywheel	227	691374	Lever-Governor Control
24	591757	Key-Flywheel (Steel)	232	691842	Spring-Governor Link
25	95858	Piston Assembly (Standard)	238	691843	Cap-Valve
	795877	Piston Assembly (.020" Oversize)	240	691035	Filter-Fuel
26	794126	Ring Set (Standard)	265	691024	Clamp-Casing
	794127	Ring Set (.020" Oversize)	267	794904	Screw (Casing Clamp)
27	698469	Lock-Piston Pin	276	695410	Washer-Sealing
28	795861	Pin-Piston	304	592814	Housing-Blower
29	794571	Rod-Connecting	305	697102	Screw (Blower Housing) (1/4-20x1.21)
32	791118	Screw (Connecting Rod)	305A	793376	Screw (Blower Housing) (1/4-20x.68)
33	591752	Valve-Exhaust			
34	591751	Valve-Intake	305B	795891	Screw (Blower Housing to Intake Elbow) (#10-16x.43)
35	691279	Spring-Valve (Intake)	305C	799370	Screw (Blower Housing) (1/4-20x.90)
36	691279	Spring-Valve (Exhaust)			
37	699882	Guard-Flywheel			
42	499586	Keeper-Valve	306	794953	Shield-Cylinder
43	691968	Slinger-Governor/Oil	307	691693	Screw (Cylinder Shield)
45	690564	Tappet-Valve	309	693551	Motor-Starter
46	793880	Camshaft	310	690323	Screw (Starter Motor)
48	N/A	Short Block (Not Available at this Printing)	311	497608	Brush Set
50	592842	Manifold-Intake	324	796309	Screen/Cup Assembly
51	692137	Gasket-Intake	333	799650	Armature-Magneto
51A	796081	Gasket-Intake	334	691061	Screw (Magneto Armature)
53	591260	Stud (Carburetor)	337	491055s	Plug-Spark
54	691148	Screw (Intake Manifold)	358	796187	Gasket Set-Engine
78	691693	Screw (Flywheel Guard)	377	691639	Key-Woodruff
94	793610	Kit-Idle Mixture	404	691691	Washer (Governor Crank)
95	690718	Screw (Throttle Valve)	415	794129	Plug (Cover/Retainer)
98	695408	Kit-Idle Speed	415A	794903	Plug (Intake Manifold)
104	694918	Pin-Float Hinge	431	799043	Elbow-Intake
105	696136	Valve-Float Needle	445	793569	Filter-Air Cleaner Cartridge
108	695419	Valve-Choke	462	691261	Washer (Starter Cable)
117	796251	Jet-Main (Standard)	474	592831	Alternator
118	791406	Jet-Main (High Altitude)	503	691532	Strap-Starter
121	796184	Kit-Carburetor Overhaul	505	691251	Nut (Governor Control Lever)
125	591736	Carburetor	510	693699	Drive-Starter
127	690727	Plug-Welch	513	692024	Clutch-Drive
130	792747	Valve-Throttle	523	699908	Dipstick
131	792765	Kit-Throttle Shaft	524	691032	Seal-Dipstick Tube
133	694914	Float-Carburetor	525	697184	Tube-Dipstick

SCHEMATIC



SCH11

NOTE
YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

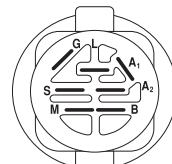


IGNITION SWITCH

POSITION	CIRCUIT	"MAKE"
OFF	M+G+A1	
RUN/OVERRIDE	B+A1	
RUN	B+A1	L+A2
START	B + S + A1	

 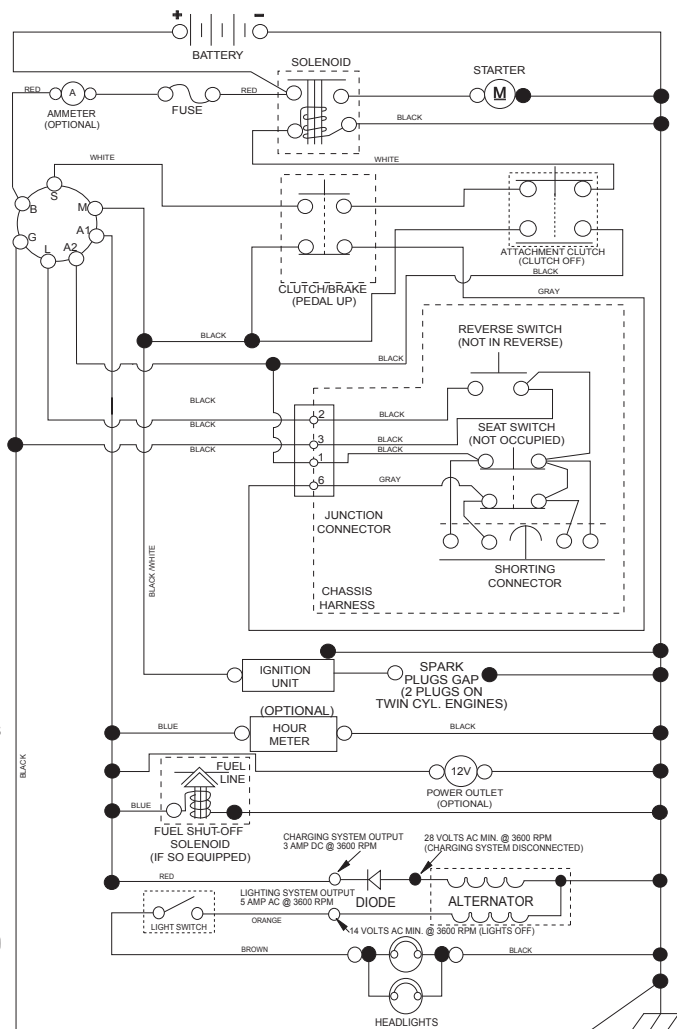

CHASSIS HARNESS CONNECTOR (MATING SIDE)

 

DASH HARNESS CONNECTOR (MATING SIDE)

WIRING INSULATED CLIPS
NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE RE-INSTALLED TO PROPERLY SECURE YOUR WIRING.

● NON-REMOVABLE CONNECTIONS
○ REMOVABLE CONNECTIONS

ELECTRICAL




BRIGGS & STRATTON ENGINE-MODEL NUMBER 33R877, TYPE NUMBER 0002-G1



TRACTOR - - MODEL NUMBER 917.255810
BRIGGS & STRATTON ENGINE-MODEL NUMBER 33R877, TYPE NUMBER 0002-G1

ELECTRICAL


TRACTOR - - MODEL NUMBER 917.255810

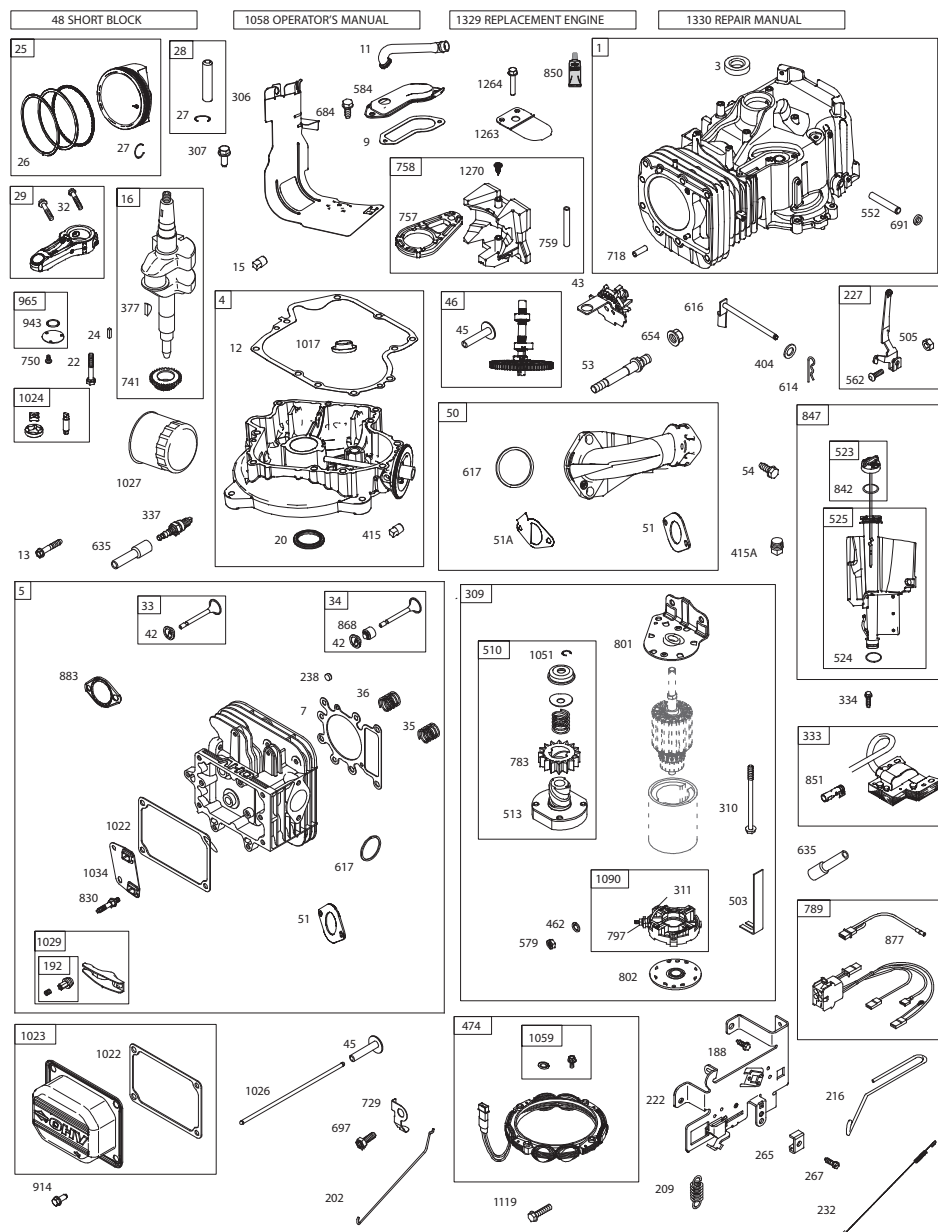

KEY NO.	PART NO.	DESCRIPTION
1	163465	Battery
2	74760412	Bolt Hex Hd 1/4-20 unc x 3/4
8	193228	Box Battery
16	176138	Switch Interlock Push-In
21	400252	Harness Socket Light w/4152J
22	4152J	Bulb Light
25	581498001	Cable Starter
26	175158	Fuse
27	73510400	Nut Keps Hex 1/4-20 unc
28	421686	Cable, Ground
29	401545	Switch, Seat
30	193350	Switch, Ign
33	411932	Key/Chain
34	110712X	Switch Light / Reset
40	581023101	Harness Ign. Dash
43	192507	Solenoid
55	17060512	Screw Thdrol 5/16-18 x 3/4 TYTT
71	581023001	Harness Ign. Chassis
79	175242	Bulbholder Asm. Incan Descent
87	197802	Switch Interlock Clutch Cable
90	435395	Cover Terminal Battery
99	17670412	Screw
102	581023401	Harness Pigtail
105	407568	Switch Reverse
106	174814	Palnut

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm


TRACTOR - - MODEL NUMBER 917.255810
CHASSIS ASSEMBLY

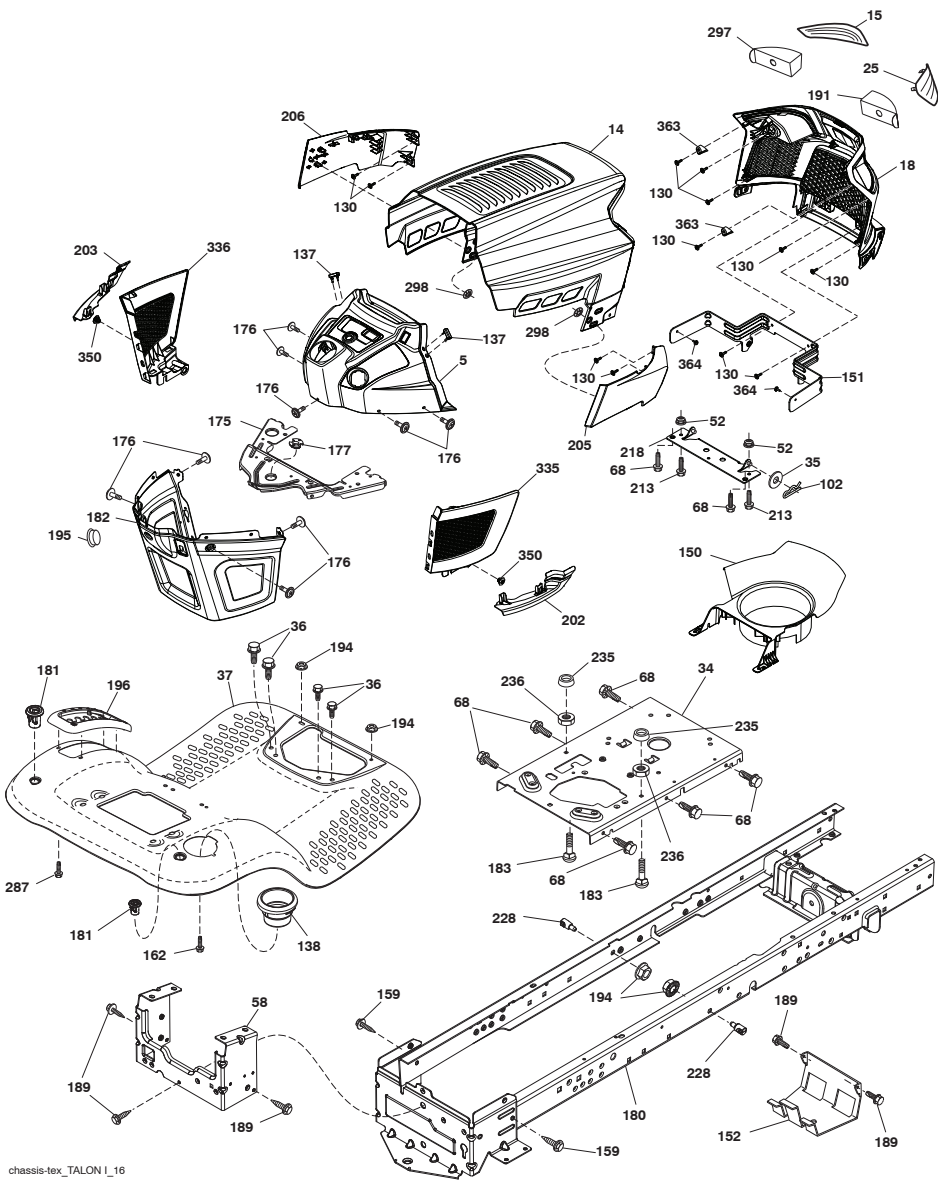

chassis-tex_TALON I_16

TRACTOR - - MODEL NUMBER 917.255810
GENTRANS TRANSAXLE - MODEL NUMBER (RS800 LR) 584973901

RS800 LR

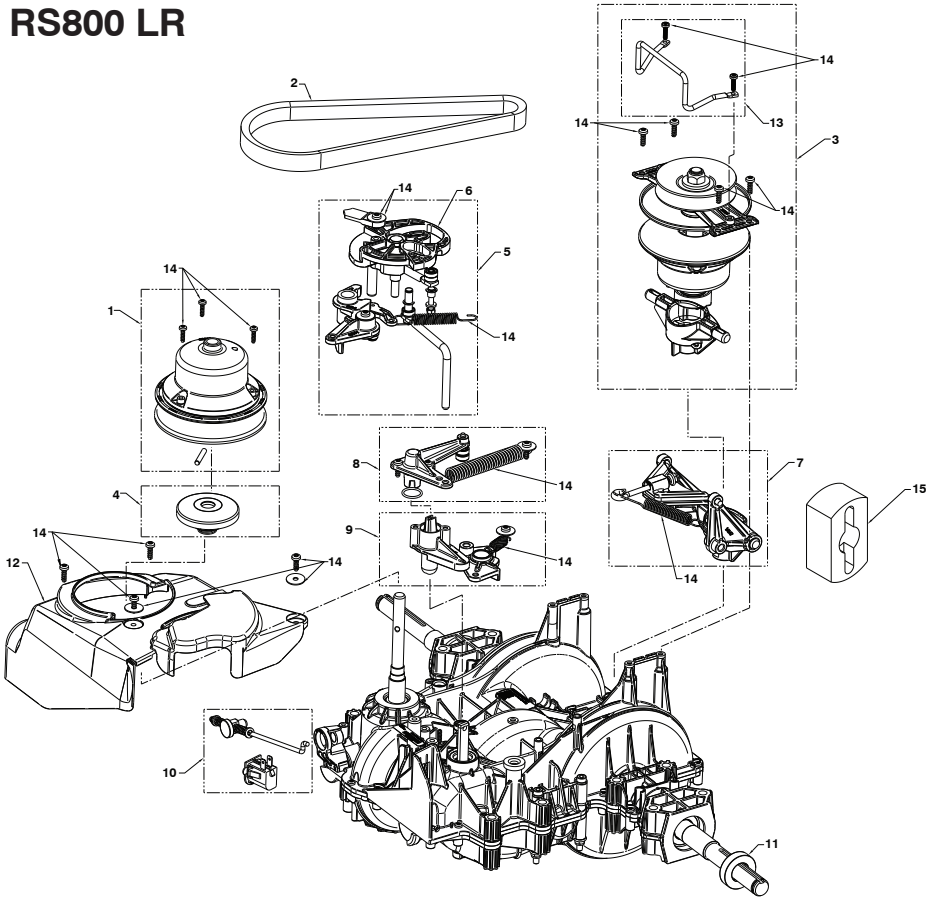


KEY NO.	PART NO.	DESCRIPTION
1	587086701	Driven Kit RS800
2	587086101	Variation Belt
3	587086703	Driver Kit
4	587291101	Inversion Security System
5	587086702	Control Kit RS800 P
6	587086302	Control Cam RS800 P
7	587291201	Variation Kit
8	587291301	Brake Kit
9	587291401	Bypass Kit
10	587291402	Inversion Kit

KEY NO.	PART NO.	DESCRIPTION
11	587086401	Output Seals Kit RS800
12	587291601	Cover RS800 P
13	588508301	Belt Keeper Kit
14	587086901	Hardware Kit RS800
15	587086501	Driven Tool

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

DECALS


TRACTOR - - MODEL NUMBER 917.255810

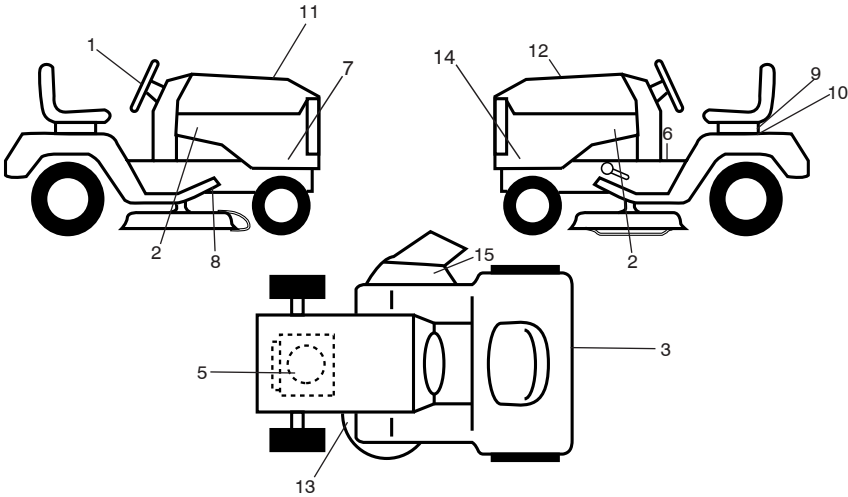

KEY NO.	PART NO.	DESCRIPTION
1	581894601	Decal, Steering
2	585767601	Decal, Hood
3	587390201	Decal, Fender
5	585722401	Decal, Engine HP
6	581578801	Decal, Fender Warning
7	502094401	Decal, Sideskirt RH
8	421534	Decal, V-Belt Schematic Drive
9	434996	Decal, Battery Warning
10	434995	Decal, Battery
11	588160301	Decal, Replacement
12	585571401	Decal, Customer Responsibility

KEY NO.	PART NO.	DESCRIPTION
13	581580001	Decal, Mower V-Belt SCH.
14	502094501	Decal, Sideskirt LH
15	584904601	Decal, Deck/Deflect Warning
--	193226X428	Pad, Footrest LH
--	400981X428	Pad, Footrest RH
--	581724801	Decal, Bypass
--	115793726	Manual Operator's (English/Spanish)
--	115793827	Manual Parts (English/Spanish)
--	588799624	Manual, Quick Start Guide (English/Spanish)

WHEELS & TIRES

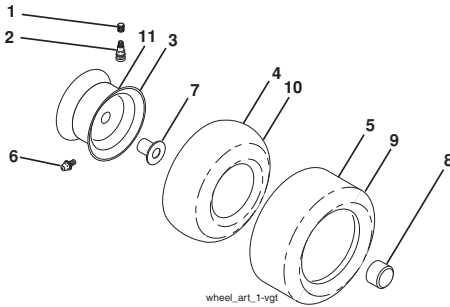

KEY NO.	PART NO.	DESCRIPTION
1	59192	Cap, Valve, Tire
2	65139	Stem, Valve
3	106732X613	Rim Assembly, Front
4	59904	Tube, Front
5	106222X	Tire, Front 15 x 6-6
6	278H	Fitting, Grease
7	9040H	Bearing, Flange
8	104757X428	Cap, Axle (Front Wheel Only)
9	138468	Tire, Rear 20 x 8-8
10	7152J	Tube, Rear
11	106108X613	Rim Assembly, Rear
--	144334	Sealant, Tire (10 oz. Tube)


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 917.255810
CHASSIS ASSEMBLY


KEY NO.	PART NO.	DESCRIPTION
5	580485903	Dash
14	580354403	Hood
15	580485601	Lens LH
18	580485302	Grille
25	580484501	Lens RH
34	580910801	Plate engine
35	19111116	Washer 11/32 x 11/16 x 16 Ga.
36	17060512	Screw 5/16-18 x 3/4
37	414879X615	Fender
52	73680500	Nut Crown lock 5/16-18
58	412280	Drawbar upper
68	17490508	Screw Thdrol 5/16-18 x 1/2
102	4497H	Retainer Spring 1"
130	416358	Screw # 10 x .750 BOS Thread
137	407590	Bumper Dash
138	193224X428	Cupholder
150	580485503	Duct Heat Hood
151	580663302	Bracket Pivot
152	199535	Shield Browning/Debris
159	17000612	Screw Hexwsh Thdrol 3/8-16 x 3/4
162	142432	Screw Hex Wsh Hi-Lo 1/4 x 1/2
175	196304	Crossmember
176	400776	Screw 10-24 x 5/8 Wshd Qdrx
177	195228	Bushing Steering
180	415063	Chassis
181	193102X428	Bushing Mtg. Fender Crgo.
182	586738602	Dash Lower
183	74520520	Bolt 5/16-18 x 1-1/4
189	17000512	Screw 5/16-18 x 3/4
191	580485101	Mylar Headlight RH
194	73900500	Nut Lock Hex Flange 5/16-18
195	401556X428	Plug Hole Dash 12V Adapter
196	414579	Console Asm. Deck Lift
202	580485001	C-Closeout Lwr Trm RH
203	580484801	C-Closeout Lwr Trm LH
205	580843706	Assembly Corner RH
206	580843806	Assembly Corner LH
213	74760512	Bolt hex HD 5/16-18 unc x 3/4
218	580897301	Pivot Hood Assy
228	195161	Stud Fastener
235	406129	Spacer Fender
236	73930500	Nut Center Lock 5/16-18
287	17600406	Screw Hex Washead 1/4-20 x 3/8
297	580484901	Mylar Headlights LH
298	580851001	Nut Push
335	580484602	C-Side Closeout RH
336	580484402	C-Side Closeout LH
350	445143	Clip X-Mass Tree
363	580724501	Cap Talon Grille
364	17060408	Screw
--	404951X428	Plug Dash SRVMNDR

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 917.255810
GROUND DRIVE

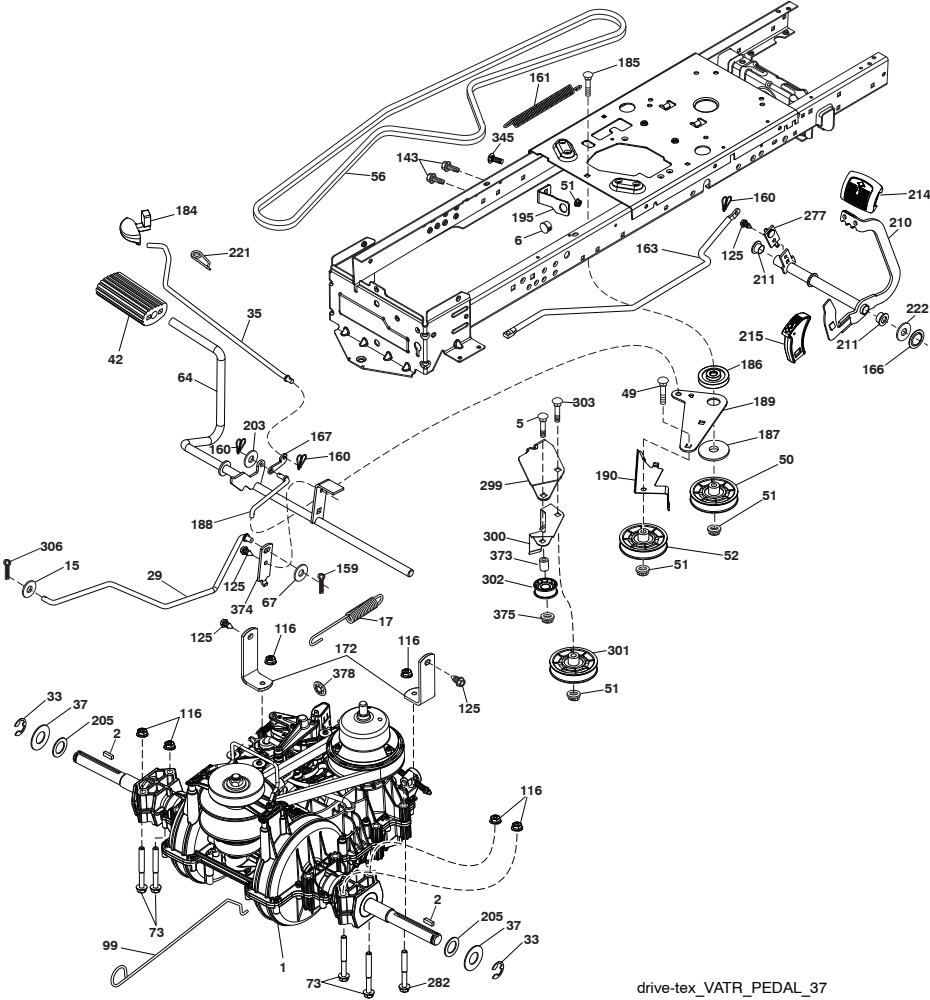


TRACTOR - - MODEL NUMBER 917.255810
SEAT ASSEMBLY

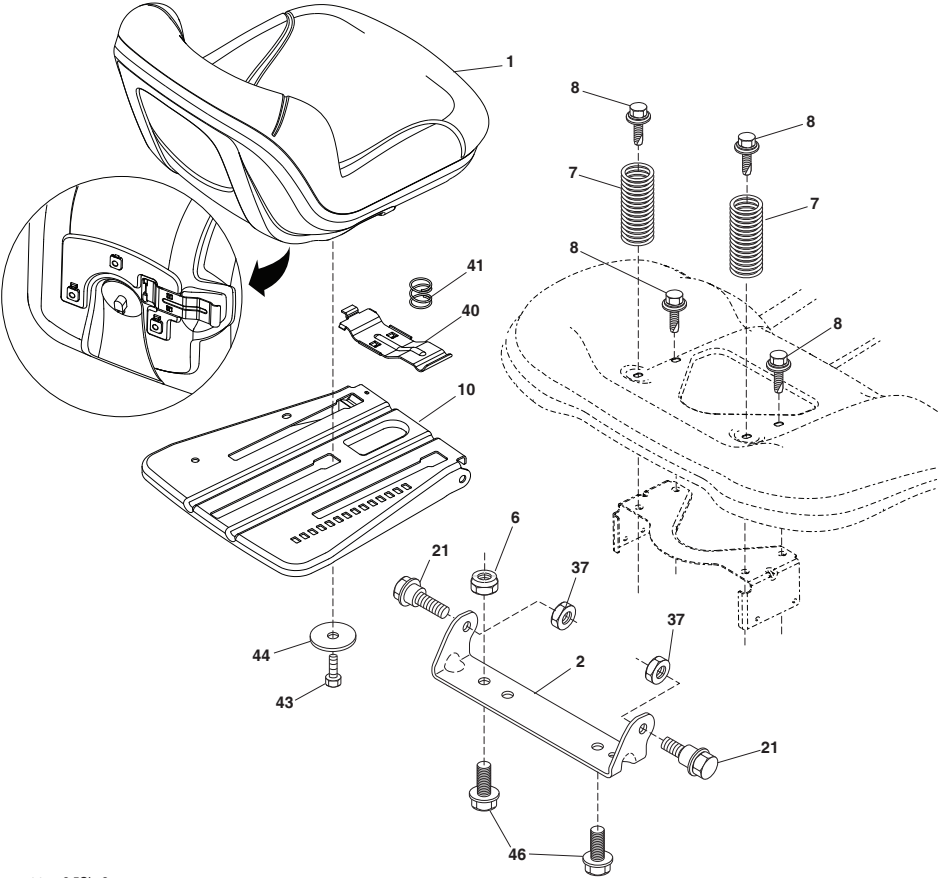

KEY PART NO.	NO.	DESCRIPTION	KEY PART NO.	NO.	DESCRIPTION
1	423644	Seat	41	198200	Spring Latch Seat
2	180166	Bracket Pivot Fender	43	74760612	Bolt 3/8-16 x 3/4
6	73800600	Nut, Lock W/Ins. 3/8-16 unc	44	19133812	Washer 13/32 x 2-3/8 x 12 Ga.
7	587613301	Spring, Seat Cprsn	46	588090401	Bolt 3/8-16 x 1 x 1.25 OD Wshr
8	171877	Bolt 5/16-18 unc x 3/4 w/Sems			
10	196977	Pan, Seat			
21	587907801	Bolt, Shoulder 5/16-18 x 5/8			
37	73800500	Nut, Lock 5/16-18 unc			
40	197661	Handle Slide Seat			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 917.255810
LIFT ASSEMBLY

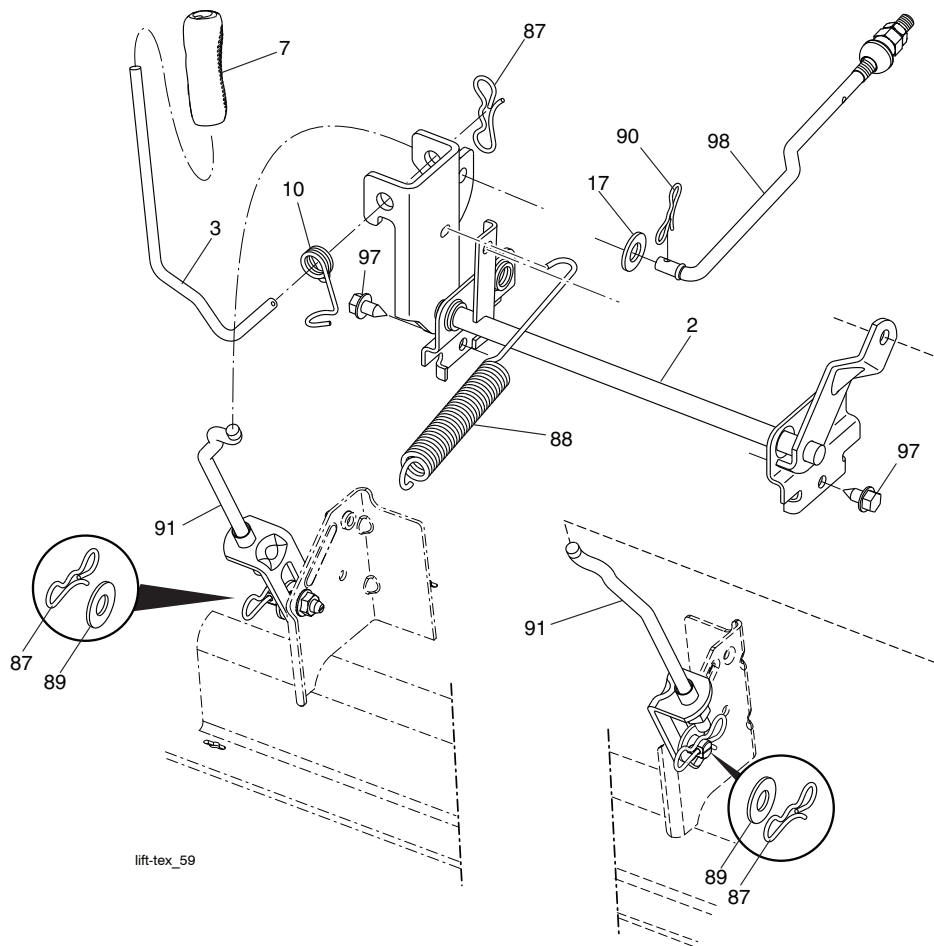

lift-tex_59

KEY NO.	PART NO.	DESCRIPTION
2	422027	Shaft Asm., Cross Lift
3	195231	Lever Asm., Lift RH
7	445060X428	Grip, Lever
10	196314	Spring Torsion
17	19131312	Washer 13/32 x 13/16 x 12 Ga.
87	194209	Pin Cotter 7/16 Bow Tie Lock
88	410710	Spring Lift Assist
89	19191912	Washer Clear Zinc

KEY NO.	PART NO.	DESCRIPTION
90	194208	Pin Cotter 5/16 Bow Tie Lock
91	197984	Link Lift Susp Mower Rear
97	17000612	Screw 3/8-16 x .75
98	420525	Link Front Susp Asm.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm


TRACTOR - - MODEL NUMBER 917.255810
GROUND DRIVE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	-----	Transmission, Gen Trans RS800 LR (584973901) (See transaxle breakdown.)	184	196439X428	Handle Parking Brake
2	123583X	Key Square	185	72110622	Bolt Rdhd 3/8-16 unc x 2-3/4 Gr.5
5	74760636	Bolt Hex HS 3/8-16 unc	186	194321	Spacer Retainer
6	124028X	Bushing Snap	187	19133210	Washer 13/32 x 2 x 10 Ga.
15	19131316	Washer 13/32 x 13/16 x 16 Ga.	188	194323	Link Clutch Ground Drive
17	501487101	Spring Brake	189	194317	Bellcrank Groundrive Nstg/Nstl
29	584823101	Rod Brake	190	194318	Keeper Bellcrank Drive Ground
33	12000001	E-Ring	195	581504601	Brake Bracket
35	583864501	Rod Brake Parking	203	19111116	Washer 11/32 x 11/16 x 16 Ga.
37	188967	WasherHarden.793x1.637x060	205	121748X	Washer 25/32 x 1-5/8 x 16 Ga.
42	8883R	Cover Pedal Blk Round	210	588921001	Weldment Pedal
49	72110614	Bolt Rdhd 3/8-16 unc x 1-3/4 Gr.5	211	120183X	Bearing Nylon
50	194327	Idler.Flat	214	421263	Pedal Forward Pad
51	73900600	Nut Hex Flangelock 3/8-16	215	448254	Cap Pedal Reverse
52	194326	Idler V-Groove Offset	221	403187	Retainer Spring Clip Handle
56	197253	Belt Drive	222	79212010	Washer 21/32 x 1-1/4 10 Ga.
64	448353	Shaft Asm. Pedal Brake	278	580369101	Bolt Cruise Variator
67	19131312	Washer 13/32 x 13/16 x 12 Ga.	282	74490548	Screw Thdrol 5/16-18 x 3
73	74490544	Bolt Hex Flghd 5/16-18 Gr. 5	299	415683	Bracket Mount Idler
99	435935	Rod Bypass	300	415681	Keeper Idler Rear
116	73900500	NutLock Hex Flange 5/16-18 unc	301	415680	Pulley Idler V-Groove
125	17000512	Screw 5/16-18 x 3/4 Smgml Tap/Bl	302	581420501	Pulley Idler Flat 2.0 Od
143	17490508	Screw Thdrol 5/16-18 x 1/2 Tytt	303	72110618	Bolt Rdhd Sgnk 3/8-16 x 2-1/4
159	76020412	Pin Cotter 1/8 x 3/4	306	76020416	Cotter Pin
160	169484	Retainer Clip(M) Dia. 290	345	72110606	Bolt Rdhd Sgnk 3/8-16 x 1 Gr. 5
161	105709X	Spring Return Clutch 6.75	373	581461801	Spacer Idler
163	587847901	Rod Control Pedal	374	581475201	Bracket Brake Arm
166	429164	Nut Push .625	375	73680600	Nut Crownlock 3/8-16 unc
167	405257	Latch Brake Parking	378	584287701	Nut Push 8 mm
172	583974201	Strap Torque LH/RH			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

ENGINE

TRACTOR - - MODEL NUMBER 917.255810

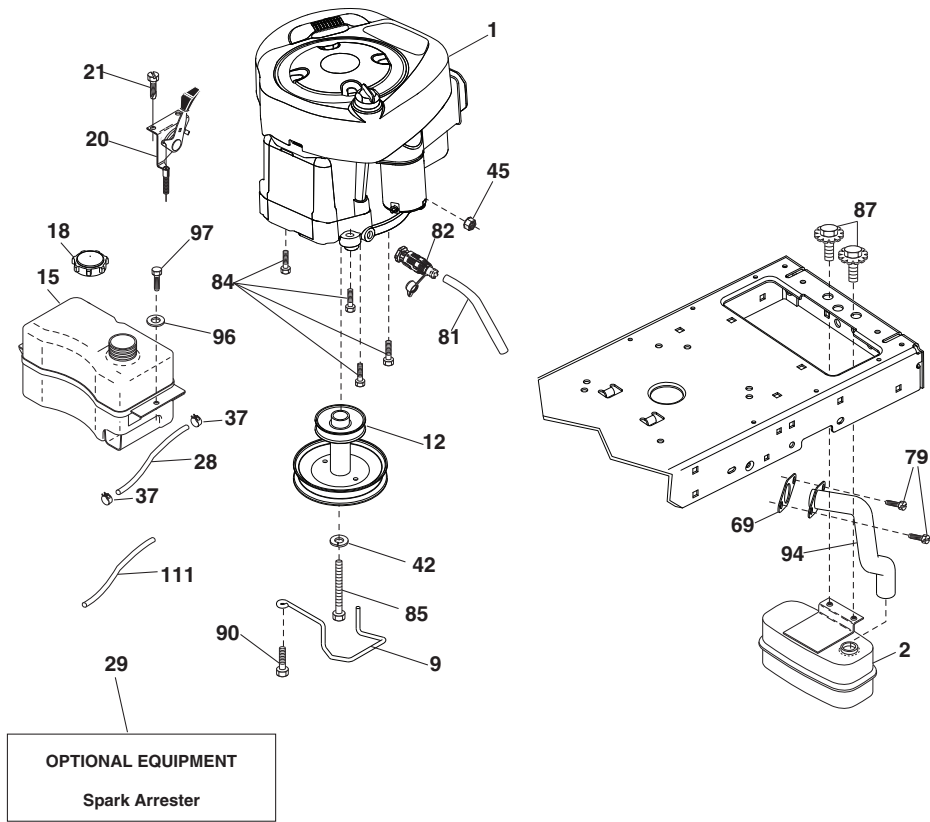

engine-tex_BS_87

MOWER DECK


TRACTOR - - MODEL NUMBER 917.255810

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	196495X615	Mower Housing	63	199477	Arm Brake Mower
2	72140506	Bolt RDHD.SQNK. 5/16-18 unc x 3/4	64	199790	Linkage Brake
6	195186	Arm Suspension	67	198398X667	Handle, Clutch Cable
7	416358	Screw 10 x .750 BOS Thread	68	429636	V-Belt
11	424752	Blade, 3N1 Premium (For bagging or discharge)	69	72140505	Bolt Rdhd Sqnk 5/16-18 x 5/8
12	584309301	Screw Sems 7/16-20 x 1 Hex Hd.	70	199972	Clutch Asm. Manual
13	587256501	Shaft Assembly, Mandrel	111	404784	Bracket, Gauge Wheel LH
14	187281	Housing, Mandrel	112	404785	Bracket, Gauge Wheel RH
15	585323901	Bearing, Mandrel	113	17000510	Screw 5/16-18
19	196539	Bolt, Shoulder	116	4898H	Bolt, Shoulder
20	159770	Baffle, Vortex	117	188606	Wheel, Gauge
21	73680500	Nut, Crownlock 5/16-18 unc	119	19121414	Washer 13/32 x 7/8 x 14 Ga.
23	192557	Bracket, Deflector	122	197258	Keeper Belt Eng. LH
24	105304X	Cap, Sleeve	123	197259	Keeper Belt Eng. RH
25	197026	Spring, Torsion, Deflector	144	199204	Keeper Belt
26	110452X	Nut, Push	145	193197	Pulley, Idler, Flat
27	424469	Shield, Deflector	147	401971	Spring Return
29	131491	Rod, Hinge	152	584243501	Cable Clutch Manual w/Spr.
32	197473	Pulley, Mandrel	188	195161	Stud Fastener
33	400234	Nut, Toplock, Flanged	189	73900500	Nut Lock Hex Flange
34	72110612	Bolt Carr Sh. 3/8-16 x 1-1/2 Gr. 5	192	197260	Bracket Brake Stand LH
36	197379	Pulley Idler	195	17000612	Screw Hexwsh Thdr 3/8-16 x 3/4
37	19131316	Washer 13/32 x 13/16 x 16 Ga.	241	152927	Screw
38	432520	Keeper Belt LH Mandrel	242	415598	Washout Port
40	73900600	Nut, Lock Flg. 3/8-16 unc	--	416405	Quick Connect Coupling
41	584953901	Bolt Hex Wshrd 313-18 x 1.19	--	437732	Replacement Mower, Complete
42	198410	Spring Torsion Brake	--	587253301	Mandrel Assembly (Includes housing (key #14), shaft assembly (key #13), and bearing (key #15) only - pulley/nut/washer and blade bolt/washers not included)
43	197256	Spring Torsion Retainer			
46	137729	Screw Thd Roll 1/4-20 x 5/8			
47	197250	Bracket Clutch Cable			
55	437110	Arm, Idler			
56	199092	Spacer, Retainer			
57	17000616	Screw Hexwsh Thd 3/8-16 x 1			
59	141043	Guard, Tuv Idler (94)			
60	197261	Arm Brake Mower			
62	72110616	Bolt Rdhd Sqnk 3/8-16 unc x 2			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 917.255810

MOWER DECK

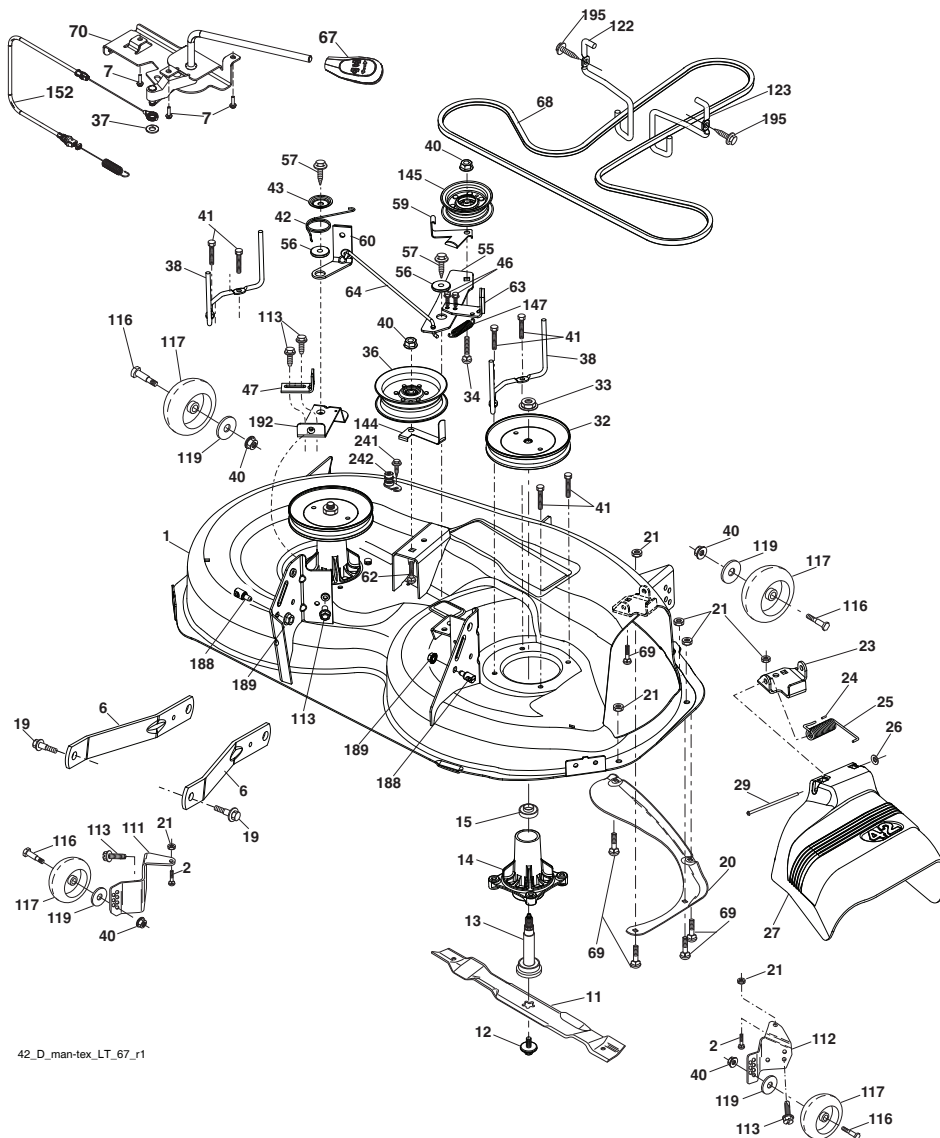

42_D_man-tex_LT_67_r1

TRACTOR - - MODEL NUMBER 917.255810

ENGINE


KEY PART NO.	PART NO.	DESCRIPTION
1	-----	Engine B&S Model No. 33R877-0002-G1 (585366801) (See engine breakdown.)
2	580532301	Muffler
9	584911601	Keeper Belt Engine
12	586729001	Pulley Engine
15	433007	Tank Fuel
18	581176101	Cap Asm. Fuel
20	176636X428	Control Throttle/Choke
21	416358	Screw 10 x .750 BOS Thread
28	401137	Fuel Line
29	137180	Spark Arrestor Kit
37	123487X	Clamp Hose
42	10040700	Washer Lock 7/16
45	73510400	Nut Keps Hex 1/4-20 unc
69	165291	Gasket
79	192334	Screw 5/16-18 x .75
81	148456	Tube, Drain
82	428287	Oil Drain
84	17060620	Screw 3/8-16 x 1-1/4
85	173937	Bolt Hex 7/16-20 x 4 x Gr. 5-1.5
87	171877	Bolt 5/16-18 unc x 3/4 w/Sems
90	17000616	Screw 3/8-16 x 1.0
94	581880901	Exhaust Tube
96	19091416	Washer 9/32 x 7/8 x 16 Ga.
97	17670412	Screw 1/4-20 x 3/4
111	414119	Purge Line

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

Engine Power Rating Information

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J1940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-05). Torque values are derived at 3060 RPM; horsepower values are derived at 3600 RPM. Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net power). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

TRACTOR - - MODEL NUMBER 917.255810
STEERING ASSEMBLY

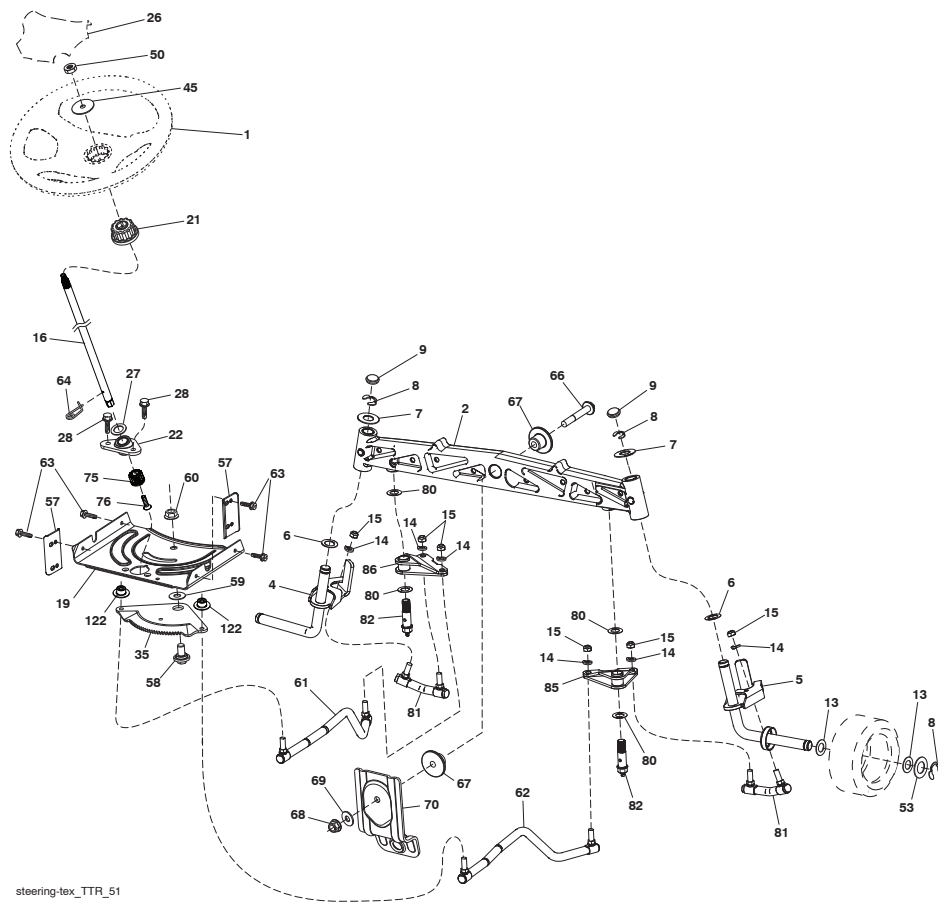

steering-tex_TTR_51

TRACTOR - - MODEL NUMBER 917.255810
STEERING ASSEMBLY

KEY PART NO.	NO.	DESCRIPTION
1	414803X428	Wheel, Steering
2	436870	Axle Asm., Front
4	436873	Spindle Asm., LH
5	436874	Spindle Asm., RH
6	6266H	Washer Thrust
7	121748X	Washer 25/32 x 1-5/8 x 16 Ga.
8	12000029	Ring, Klip #T5304-75
9	184946X667	Cap, Spindle
13	121749X	Washer 25/32 x 1-1/4 x 16 Ga.
14	10040600	Washer, Lock Hvy Hlcl Spr 3/8
15	73540600	Nut, Crown Lock 3/8-24 unf
16	587016002	Shaft Steering
19	194729	Plate Steering
21	586840201	Adapter, Wheel Steering Splnd Alum
22	585029901	Bearing Subasm Shaft Steer Low
26	414852X428	Insert, Wheel Steering
27	19211616	Washer 21/32 x 1 x 16 Ga.
28	17000612	Screw 3/8-16 x 3/4
35	440770	Gear, Sector Plate
45	587016401	Washer 3/8 ID 2-3/8OD 12 Ga.
50	73900600	Nut Lock Flg. 3/8-16 unc
53	188967	Washer Hardened .793 x 1.637 x .060
57	407465	Bracket Upstop
58	194747	Bolt Shoulder Sector Pivot CFM
59	194748	Washer Thrust Sector Steering
60	73971000	Nut Flange Lock 5/8-11
61	436884	Draglink LH
62	436885	Draglink, RH
63	17000512	Screw 5/16-18 x 3/4
64	199849	Retainer Clip Spring Steering
66	71020748	Bolt Hex Fghd 7/16-14 x 3 Serr
67	194737	Bushing PM Front Axle
68	73900700	Nut Lock Flange 7/16-14 Gr. 5
69	199162	Washer 1.5 x .505 x .118
70	585338801	Bracket Deck Susp. Front
75	580683701	Pinion
76	580683601	Screw Head Sock
80	1370H	Washer
81	436887	Link RH
82	442147	Pivot Bolt
85	441873	Pivot RH
86	441872	Pivot LH
122	444962	Cap Gear

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm