

Life. Camera. Action!



ACTIVEON
ACTION CAMERA



www.activeon.com

English
Quick Start Guide

Inside the Package



. Activeon-CX



. Waterproof Housing



. Curved Adhesive Mount



 
. Short Connector



. Screw




. Rechargeable
Battery



. USB Cable

 Learn about your ACTIVEON camera -

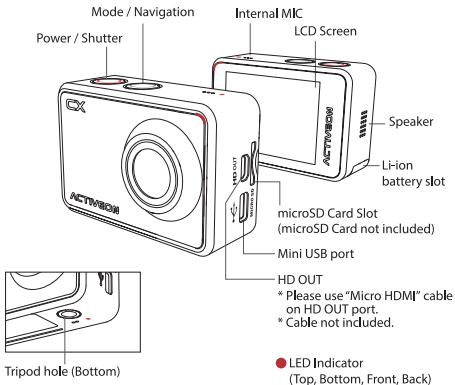

Start using your ACTIVEON camera -

- 1** Insert a microSD Card in microSD Card slot.

* Note 1. Use Class 10 memory cards only.
2. The camera will not record when microSD Card is not inserted.








- 2** Insert ACTIVEON Li-ion Battery

* Note: Please do not use a battery other than ACTIVEON battery.




 





- 3** Press Power/Shutter() and hold for two seconds.
The camera will turn on and LCD screen will display live image.

Changing between modes -







- Press the () button to switch mode.
- Mode changes as
(Video > Photo > Photo burst > Photo timelapse) in turn.

1 Video mode: Recording video	
2 Photo mode: Taking a photo	
3 Photo burst mode : Burst photo shooting (3/1sec , 5/1sec)	
4 Photo timelapse mode : Captures images continuously in set intervals until you stop.	

Graphical description - (1/2)

Mode	Function	Icons	Description
Live screen	Current mode		Video mode
			Photo mode
	Battery		Shows battery capacity status
	FOV		Shows FOV setting status (Super wide, Wide, Medium, Narrow)
	Zoom		Shows current zoom level (None/ x2/x3/x4)
	Effect		Shows current recording effect status (Off, Aqua, Sports, Night)
	Image quality		Shows current recording image quality status (Super Fine, Fine, Normal)
	Filter		Shows current recording filter status. (Off, Black&White, Warm, Negative, Sepia, Red, Green, Blue)
	AF Meters		Shows current recording AE meter status (Spot, Center, Average)

Graphical description - (2/2)

Mode	Function	Icons	Description
Video	Auto stop		Records video until set time. (1min / 5min / 10min / 30min)
	Timelapse		Captures images in set intervals and creates a timelapse video file. (1sec / 3sec / 5sec / 10sec / 30sec / 60sec)
	Looping		Continuously records a video for a set time until you stop. (5min / 20min / 60min / 120min)
Photo	Self Timer		Captures an image after a set time. (5sec / 10sec / 15sec)
	Burst		Photo burst shooting (3/1sec , 5/1sec)
	Timelapse		Captures images continuously in set intervals until you stop. (1sec / 3sec / 5sec / 10sec / 30sec / 60sec)

Connecting to the ACTIVEON App -

- Utilizing WiFi APP function of ACTIVEON, users can control the camera through a smartphone.
- Compatible with iOS and Android OS.
- Before connecting the camera, download 'ACTIVEON' application from smartphone app store.
- Search for 'ACTIVEON' in Apple App Store or Google Play Store.

On your Camera

- 1) Turn on 'WiFi APP' function in ACTIVEON CX.
- 2) The camera screen will display "Waiting for connection".
- 3) If you want to turn off 'WiFi APP', Press (⊙) for 2 seconds and choose "Off".
At that time, you can turn off the "WiFi APP" and exit from the black screen.

On your Smartphone

 
- 1) On your smartphone or tablet, turn the WiFi on and select the network CX0-xxxxxx under WiFi settings.
- 2) Default password is '1234567890'.
- 3) Run 'ACTIVEON' app on your smartphone or tablet.
- 4) Press 'Connect ACTIVEON' on the app, now you can control your ACTIVEON camera.



Changing the Backdoor

Hold the waterproof housing body, and plug in metal frame of back-door into the hinge of housing body. Please move back and forth to check whether back-door is attached properly.

※ When detaching the backdoor, simply pull it out from the hinge of the housing body.

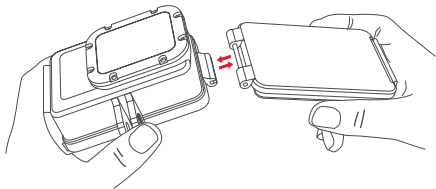

Waterproof Backdoor

 
Completely sealed with waterproof rubber O-ring up to 196ft (60m)

※ Housing is NOT waterproof if the O-ring is not sealed to the backdoor.


Check the Waterproof O-Ring

Before getting into the water with the waterproof housing, please check whether the rubber O-ring is completely sealed to the housing.

※ Warranty does not cover any damage caused by leaks in the housing



Correct Sealing (O)

 


Incorrect Sealing (X)

Mounting Basic Accessories -

- Attach your ACTIVEON accessories to fit various purposes

 Curved Surface Mounting

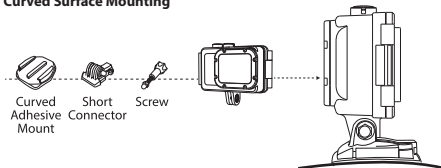

Memory Card -

- Please make sure to use a class 10 microSD Memory card.

Though most Class 10 Memory cards do deliver the needed writing speed, not all of them are fast enough when it comes to deleting the old file and / or creating a new file.

*Note : microSD Card is not included with the camera.