Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

TONE X OPER O QUIET #

Install and charge the battery

Charge the battery provided with this product

· If the handset will not be used for a long time

disconnect and remove the battery to prevent

limitations specified in this manual.

only in accordance with the instructions and

Install the battery as shown below.

Use only supplied battery.

possible leakage.

Install the battery

MNOTES

CS6648-3 CS6648-4 CS6649 CS6649-2 CS6649-3

DECT 6.0 cordless telephone

PORS 7 (19V 8 (RE72 9)

TONE X OPEN O WET#

vtech

Connect the charger and charge the

Once you have installed the battery, the handset

· For best performance, keep the handset in the

telephone base or charger when not in use.

• If you place the handset in the telephone base or the

charger without plugging in the battery, the screen displays **NO BATTERY**.

The battery has

no or very little

handset cannot

enough charge

o be used for a

nort time.

The battery is

charge. The

Charge without

(about 30

minutes).

interruption

To keep the

battery charged

handset charge

when not in use.

place it in the

(about 30

The battery has | Charge without

The battery is fully charged after 11 hours of

LCD display indicates the battery status (see the

Place the handset in the telephone base or

handset charger to charge.

table on next page).

continuous charging.

ØNOTES

The screen

s blank, or

The screen

Low battery

The screen

HANDSET X

displays

displays Put in

charger and []

Abridged user's manual



elephones identified with this logo have reduced noise and interference when used with most T-coil equipped earing aids and cochlear implants. The TIA-1083 Compliant Logo is a rademark of the Telecommunications ndustry Association. Used under

Congratulations

on purchasing your new VTech product. Before using this telephone, please read **Important** safety instructions.

This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form. Please refer to the online User's manual for a full set of installation and operation instructions at www.vtechphones.com

After you install your telephone or power returns

Make sure you set the date and time including the year

announce the correct day of the week for your recorded

1. Use the dialing keys (0-9) to enter the month

2. Use the dialing keys (0-9) to enter the hour

MM), date (DD) and year (YY). Then press

(HH) and minute (MM). Then press ▼ or ▲ to

Press TALK. If you hear a dial tone, the installation

correctly; otherwise the answering system does not

you to set the date and time.

Set date and time

choose AM or PM.

3. Press SELECT to save

If you do not hear a dial tone:

for more information.

Operating range

home or office.

Make sure the installation procedures

described above are properly done.

It may be a wiring problem. If you have

This cordless telephone operates with the

maximum power allowed by the Federal

so, this handset and telephone base can

Communications Commission (FCC), Even

communicate over only a certain distance - which

can vary with the locations of the telephone base

and handset, the weather, and the layout of your

When the handset is out of range, the handset

If there is a call while the handset is out of range,

it may not ring, or if it does ring, the call may not

connect well when you press TALK. Move closer to

the telephone base, then press TALK to answer the

interference. To improve reception, move closer to

displays Out of range or no pwr at base.

If the handset moves out of range during

a telephone conversation, there may be

changed your telephone service to digital

service from a cable company or a VoIP service

rewired to allow all existing telephone jacks to

work. Contact your cable/VoIP service provider

Check for dial tone

is successful


following a power outage, the handset will prompt




What's in the box


Your telephone package contains the following items. Save your sales receipt and original packaging in the event warranty service is



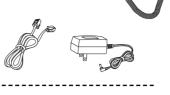

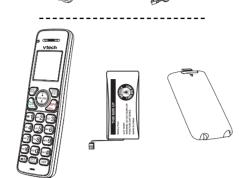

1 set for CS6649: 2 sets for CS6648-2/CS6649-2 3 sets for CS6648-3/CS6649-3 4 sets for CS6648-4

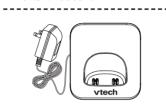

1 set for CS6648-2/CS6649-2 2 sets for CS6648-3/CS6649-3 3 sets for CS6648-4

ing the telephone base/

You can use the telephone base or a cordless

1. Press **MENU** when the phone is not in use.

2. Press ▼ or ▲ until the screen displays the

3. Press **SELECT** to enter that menu.

Configure your telephone

To return to the previous menu, press

To return to idle mode, press and hold

The LCD language is preset to English. You can

select English, French or Spanish to be used in all

1. Press **MENU** when the handset/telephone base

2. Press **▼** or **△** to scroll to **\$Settings**, then press

4. Press ▼ or ▲ to select **†English**, **†Français** or

Make sure you set the date and time including the year

announce the correct day of the week for your recorded

1. Press **MENU** when the handset/telephone base

2. Press ▼ or ▲ to scroll to **\$Set date/time**, then

3. Use the dialing keys (**0-9**) to enter the month

4. Use the dialing keys (0-9) to enter the hour

If you have pulse (rotary) service only, you can

2. Use the dialing keys to enter the number you

switch from pulse to touch-tone dialing temporarily

wish to dial. The telephone sends touch-tone

signals. It automatically returns to pulse dialing

(MM), date (DD) and year (YY). Then press

(HH) and minute (MM). Then press ▼ or ▲ to

correctly; otherwise the answering system does not

Press SELECT to select \$LCD language.

♦Español, then press **SELECT**.

handset to change your telephone settings



dset menu

desired feature menu.

CANCEL

screen displays

SELECT.

⊘NOTE

is not in use.

Set date and time

nessages time stamp

press SELECT.

choose AM or PM.

Temporary tone dialing

During a call, press TONEX.

mode after you end the call.

5. Press SELECT.

during a call.

is not in use.

Telephone base overview



1 - LCD display 2 - IN USE light

- On when the phone is in use, or when the
- answering system is answering a call. On when a handset is being registered.
- · Flashes when there is an incoming call.
- Flashes when handsets are being deregistered Flashes when another telephone on the same line is in use

3 – FLASH

 Answer an incoming call when you receive a call waiting alert.

· Return to the previous menu or idle mode

- without making changes. Press and hold to erase the missed call
- indicator when the phone is not in use. While the phone is ringing, press to silence the base ringer temporarily.
- Review the caller ID log when the telephone is not in use
- Scroll down while in a menu, or in the directory, caller ID log or redial list.
- · Move the cursor to the left when entering
- Decrease the listening volume during a call
- or message playback.
- Review the directory when the phone is not
- Scroll up while in a menu, or in the directory, caller ID log or redial list
- Move the cursor to the right when entering numbers or names

Lift the corded handset, or press ■ WSPEAKER

on the telehpone base, then dial the number.

Press → , ■ or any of the dialing keys on the

Lift the corded handset, or press ■ **/SPEAKER

or any of the dialing keys on the telephone base.

Press **OFF** on the handset or place the handset

. When you are using the corded handset, place

. When you are using the base speakerphone,

When the cordless handset is on a call,

press **◄**)) to switch between the handset

speakerphone and the handset earpiece.

· When the corded handset is on a call, press

■)/SPEAKER on the telephone base to switch

During a call, press **▲/VOLUME** or **▼/VOLUME**

on the handset, or press **▼ VOL** or **VOL △** on

the telephone base to adjust the listening

The mute function allows you to hear the other

2. Press MUTE on the handset again to resume

1. During a call, press **MUTE** on the telephone

2. Press MUTE on the telephone base again to

displays **Microphone** on briefly.

base. The telephone base displays **Muted** and

the conversation. The handset displays

party but the other party cannot hear you.

between the telephone base speakerphone

Telephone operations

number

Answer a call

handset.

End a call

in the handset charger

it on the telephone base

and the corded handset.

press **◄》/SPEAKER**.

Speakerphone

Volume

is turned off.

is turned off.

Microphone on briefly.

• Increase the listening volume during a call or

Transfer a call

While on an outside call, you can transfer the call from a cordless handset to another handset or the

elephone base 1. During a call, press **MENU**.

message playback

or to transfer a call.

phone is not in use.

playing announcement.

delete a character or digit

FIND HANDSET

- ▶/■ /PLAY/STOP

X/DELETE

≫/SKIP

▼ VOL ▲

也/ANS ON/OFF

on or off.

REDIAL/PAUSE

Review the redial list

numbers dialed.

speakerphone

mode, or turn it off.

5 – MUTE

save an entry or setting.

· While in a menu, press to select an item, or

Press to initiate or answer an intercom call,

· Press to page all handsets when the

Press to start or stop message playback

· Press to delete the playing message or

· While reviewing the redial list, directory or

caller ID log, press to delete an individual

· Press once to repeat the playing message.

Press twice to play the previous message.

· Silence the base ringer temporarily while

Adjust the telephone base ringer volume

· Press to turn the built-in answering system

Press repeatedly to view the last 10

while dialing or entering numbers.

Press to make, answer or end a call.

the corded handset and the base

During a call, press to switch between

Press and hold to set and turn on the quiet

options when reviewing a caller ID log entry.

Press repeatedly to display other dialing

Press and hold to insert a dialing pause

Press to skip to the next message.

Mute the microphone during a call.

the phone is ringing

Adjust the listening volume.

memos in the answering system.

Flashes when there are new messages or

MENU/SELECT

· Show a menu.

- Press ▼ or ▲ to scroll to \$Transfer, then press SELECT.
- Your handset shows Transfer to: Press 7 for the telephone base or 1-5 for **HANDSET 1** to

or any dialing key on the telephone base.

HANDSET 5. 4. To answer the call on the destination handset, press TALK, ■) or any dialing key on the handset

Join a call in progress

You can use the telephone base and a cordless handset, or two cordless handsets at a time on an

- When a handset or the telephone base is already on a call, press TALK or ■ on another
- handset to join the call. Press OFF or place the handset in the handset charger to exit the call. The call continues until
- both devices hang up. Lift the corded handset or press ■ SPEAKER

on the telephone base Place the corded handset back to the

telephone base or press **■\\\\SPEAKER** on the telephone base to exit the call. The call continues until both devices hang up.

If you subscribe to call waiting service from your

- telephone service provider, you hear an alert tone when there is an incoming call while you are Press FLASH to put your current call on hold
- Press FLASH to switch back and forth between
- Find handset

Use this feature helps you find misplaced 1. During a call, press **MUTE** on the handset. The handsets handset displays Muted until the mute function

and take the new call.

To start paging:

Call waiting

· Press FIND HANDSET on the telephone base and its screen displays ** Paging **. All idle handsets ring and display ** Paging **.

To stop paging: Press TALK, ■), OFF or any of the dialing keys on the cordless handset.

the MUTE light turns on until the mute function Place the cordless handset to the handset resume the conversation. The telephone base

saving it in the directory.

12 - Corded handset

11 - Speakerphone

9 - MIC

Microphone

andset overview While entering names or numbers, press to vtech

Press to enter space during text editing.

· Switch to tone dialing temporarily during a call.

While reviewing a caller ID log entry, press

repeatedly to add or remove 1 in front of

· Press and hold to set or dial your voicemail

the telephone number before dialing or

1 - Handset earpiece

- 2 LCD display 3 - MENU SELECT
- Show the menu.
- · While in a menu, press to select an item or save an entry or setting.
- Hang up a call.
- · Return to the previous menu or idle mode

- without making changes.

HANDSET 1 to **HANDSET 5**.

. Press INT on the cordless handset when the phone is not in use.

- To answer the intercom call at the telephone
- party presses **OFF**, or places the handset back in the handset charger
- To end the intercom call at the telephone base, press INT or ■ WSPEAKER when using the base speakerphone, or place the corded handset back to the telephone base.

lephone base:

- . To end the intercom call at the telephone
- handset back to the telephone base.

· Delete digits while predialing.

- Silence the handset ringer temporarily while the phone is ringing.
- Press and hold to erase the missed call

indicator when the phone is not in use.

- Press and hold to set and turn on the quiet mode, or turn it off.
- Press repeatedly to display other dialing options when reviewing a caller ID log entry.

· Press to initiate or answer an intercom call,

or to transfer a call.

7 - MUTE/DELETE

- Mute the microphone during a call.
- Silence the handset ringer temporarily while
- the phone is ringing.
- Delete the displayed entry while reviewing the directory, caller ID log or redial list. Delete digits or characters when entering
- numbers or names Delete the playing message or playing

announcement. 8 - Microphone

• Press to make or answer a call.

if you have pulse service.

saving it in the directory.

· During a call, press to switch between the handset speakerphone and the handset

Press to switch to tone dialing during a call

 While reviewing a caller ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or

• Press and hold to set or dial your voicemail

Press to make or answer a call.


- During a call, press to answer an incoming call when you receive a call waiting aler
- 13 REDIAL/PAUSE Review the redial list. Press and hold to insert a dialing pause

while dialing or entering numbers. 14 - CHARGE light

 On when the handset is charging in the handset charger.

Answer an incoming call during an

Charger overview

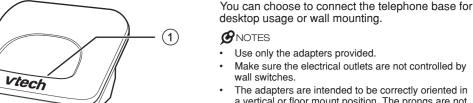

Display icons overview

Handset display icons

1 - Charging pole

0	The battery icon flashes when the battery is low and needs charging.
	The battery icon animates when the battery is charging.
Î	The battery icon becomes solid when the battery is fully charged.
Ø	The handset ringer is off.
∑ ≥	There are new voicemail received from your telephone service provider.
ANS ON	The answering system is turned on.
ECO	The ECO mode activates automatically to reduce power consumption when the handset is within range from the telephone base.
NEW	The entry you are reviewing is new in the caller ID log.
MSG #	The number of current playing message and the total number of messages recorded.

Telephone base display icons

Ø	The telephone base ringer is off. There are new voicemail received from your telephone service provider.	
₩		
NEW	The entry you are reviewing is new in the caller ID log.	
Misce The Control of	The total number of messages recorded when the telephone base is not in use. The number of the playing message.	
	-	


Connect


desktop usage or wall mounting.


- Make sure the electrical outlets are not controlled by
- The adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into

a ceiling, under-the-table or cabinet outlet

If you subscribe to digital subscriber line (DSL) nigh-speed Internet service through your telephone line, make sure you install a DSL filter (not included) between the telephone line cord and telephone wal jack. Contact your DSL service provider for more

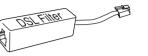

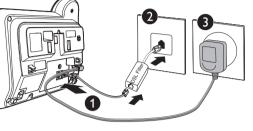

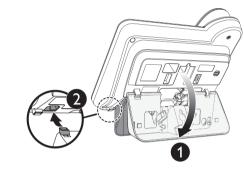

Press ▼ or ▲ to move the cursor to the left or

- Press and hold PAUSE to insert a dialing pause (for entering numbers only).
- Press 0 to add a space (for entering names

- Entries are sorted alphabetically. 1. Press 🖾 on the cordless handset when the phone is not in use, or $\blacktriangle \$ on the telephone
- pase when the telephone base is not in use Press ▼ or ▲ to browse through the directory

or use the dialing keys to start a name search

Press TALK or ■ on the handset.

Lift the corded handset or press **■)/SPEAKER**

1. When the desired entry displays, press

2. Use the dialing keys to edit the number, then press **SELECT**.

3. Use the dialing keys to edit the name, then press **SELECT**.

DELETE. When the screen displays **Delete** contact?, press SELECT. Speed dial

speed dial locations (0 and 2-9) so that you can

Assign a speed dial number 1. Press **MENU** when the phone is not in use.

SELECT. 3. Press ▼ or ▲ to scroll to **\$Speed dial**, then

press **SELECT**.

the desired speed dial location. Press SELECT. The screen displays Copy

 When the phone is not in use, press and hold a dialing key (0 or 2-9) to dial the number stored

Do not $\underline{\text{press and hold}}$ FIND HANDSET for more than

handset, or two cordless handsets. Press 7 for the telephone base or 1-5 for

- 2. To answer the intercom call on the destination
- base, press **◄》/SPEAKER**, **INT**, any dialing key, or lift the corded handset.

To initiate an intercom call at the

- base, press INT, or **)**/SPEAKER when using the base speakerphone, or place the corded
- To end the intercom call on the destination handset, press **OFF**, or place the handset back in the handset charger.

Press FIND HANDSET on the telephone base.

Use the intercom feature for conversations between the telephone base and a cordless

- cordless handset:
- handset, press $\frac{1}{100}$, INT, or any dialing key.

- ohone is not in use To answer the intercom call on the destination

four seconds. It may lead to handset deregistration.

To initiate an intercom call with a

- To end the intercom call on either handset, one

- 1. Press **INT** on the telephone base when the

- intercom call If you receive an incoming outside call during ar ntercom call, you will hear an alert tone.
 - To answer the call, press Talk. The intercom call ends automatically To end the intercom call without answering or canceling the incoming call, press OFF. The

telephone continues to ring. To answer at the telephone base: Press ■ SPEAKER, or place the corded

To answer on a cordless handset:

handset back to the base. The intercom call ends automatically. Then press **◄ **/SPEAKER** or lift up the corded handset to answer the call To end the intercom call without answering or canceling the incoming call, press

Call transfer using intercom Use the intercom feature to transfer an outside call to another cordless handset or the telephone

To transfer a call with a cordless handset: During a call, press INT. 2. To answer the call on the destination handset, press TALK, INT, ■), or any dialing key. The

■)/SPEAKER, or place the corded handset

back to the base. The telephone continues to

outside call is still on hold. You can now have a private intercom conversation. To answer the call at the telephone base, press INT, ■ »/SPEAKER, any dialing key or

on hold. You can now have a private intercom

To transfer a call at the telephone base: During a call, press INT. 2. To answer the call on the destination handset

private intercom conversation.

press , INT, ■), or any dialing key. The

outside call is still on hold. You can now have a

2. Press **▼**, **△** or **REDIAL** repeatedly until the desired entry displays. 3. When the desired entry displays, press TALK or

Directory

make room for the new entry.

on the handset to dial.

Delete a redial list entry

on the telephone base to dial.

Review and dial a redial list entry

base when the phone is not in use.

1. Press **REDIAL** on the handset or the telephone

· While the screen displays the desired number,

The directory can store up to 50 entries, which are

1. Enter the number when the phone is not in use.

shared by all handsets and the telephone base.

Each entry may consist of a telephone number

with up to 30 digits and a name with up to 15

press **DELETE** on the handset or press

X/DELETE on the telephone base.

Dial a directory entry Lift the corded handset or press **◄ **/SPEAKER** · When the desired entry appears:

on the telephone base Edit a directory entry

SELECT.

Delete a directory entry . When the desired entry appears, press

You can copy up to nine directory entries into the

dial these numbers more quickly.

2. Press ▼ or ▲ to scroll to **†Directory**, then press

6. Press ▼ or ▲ to scroll to desired entry, then Dial a speed dial number

4. Press **▼**, **△** or a dialing key (**0** or **2-9**) to choose

press **SELECT**.

in the corresponding speed dial location.

lift the corded handset. The outside call is still · Press MENU on the handset or on the telephone base when the phone is not in

Press **MENU**, then go to Step 3.

Add a directory entry

Press ▼ or ▲ to scroll to \$Add contact, then press **SELECT**. Use the dialing keys to enter the number.

use, then press ▼ or ▲ to scroll to ♦

Directory, then press **SELECT**.

Copy a number from the redial list by pressing **REDIAL** and then press **▼**, **△** or **REDIAL** repeatedly to find the desired number. Press **SELECT** to copy the number.

3. Press **SELECT** to move on to enter the name. 4. Use the dialing keys to enter the name. Additional key presses show other characters


Press SELECT to save. While entering names and numbers, you can:

of that particular key.

 Press DELETE to backspace and erase a digit or characte Press and hold DELETE to erase the entire entry



Mount the telephone base

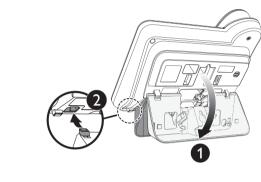

Each handset and the telephone base store the last 10 telephone numbers dialed. When there are already 10 entries, the oldest entry is deleted to Review a directory entry

- SELECT 3. Press ▼ or ▲ to scroll to **\$Speed dial**, then
- 4. Press **▼**, **▲** or a dialing key (**0** or **2-9**) to choose the desired speed dial location, then press **SELECT** to show the speed dial entry. 5. Press **SELECT** again. Then press **▼** or **△** to
- The screen shows Clear SD #X? Press **DELETE**. The screen shows **Clear SD**

scroll to Clear SD and then press SELECT

6. Press **SELECT** to confirm.

press SELECT.

Caller ID

If you subscribe to caller ID service, information about each caller will appear after the first or second ring. If you answer a call before the caller's information appear on the screen, it will not be saved in the caller ID log

The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name.

If the phone number has more than 15 digits, only the last 15 digits appear. If the name has more than 15 characters, only the first 15 characters are shown and saved in the caller ID log.

Review a caller ID log entry 1. Press CID on the cordless handset or the

telephone base when the phone is not in use. 2. Press ▼ or ▲ to browse through the caller ID

Missed call indicator

When there are calls that have not been reviewed in the caller ID log, the screens display XX missed calls.

Each time you review a caller ID log entry marked **NEW** on the handset or **NEW** on the telephone base, the number of missed calls decreases by one When you have reviewed all the missed calls, the missed call indicator no longer displays.

If you do not want to review the missed calls one by one, press and hold CANCEL when not in use to clear the missed call indicator. All the entries are then considered old.

Dial a caller ID log entry When the desired entry displays, press → or ■

on the handset to dial. When the desired entry displays, press

Frequently asked questions

■ **NSPEAKER** or lift the corded handset to dial.

Save a caller ID log entry to the directory 1. When the desired caller ID log entry displays,

2. Use the dialing keys to modify the number, if necessary. Then press SELECT. 3. Use the dialing keys to modify the name, if

Delete caller ID log entries · When the desired caller ID log entry displays, press **DELETE**.

necessary. Then press SELECT

To delete all caller ID log entries: 1. Press **MENU** on the handset or on the

- telephone base when the phone is not in use. 2. Scroll to **†Caller ID log** and then press
- Scroll to **Del all calls** then press SELECT

Sound settings

Key tone

You can turn the key tone on or off for each handset and the telephone base. 1. Press MENU when the handset/telephone base

- 2. Scroll to \$Settings and then press SELECT.
- 3. Scroll to choose **♦Key tone**, then press SELECT
- 4. Press ▼ or ▲ to choose **†Key tone:On** or **†Key** tone:Off, then press SELECT to save.

Ringer tone You can choose from different ringer tones for

each handset and the telephone base. 1. Press **MENU** when the handset/telephone base

- Scroll to **†Ringers** and then press **SELECT**.
- 3. Scroll to choose \$Ringer tone, then press 4. Press ▼ or ▲ to sample each ringer tone, then
- press **SELECT** to save.

If you turn off the ringer volume on a cordless handset, you will not hear ringer tone samples.

ot record

essages.

Telephone base ringer volume Press **▼ VOL** or **▲ VOL** on the telephone base to adjust the ringer volume when the telephone base is not in use. When you set the ringer volume to zero, the base

ringer is off. The telephone base announces, "Base ringer is off," and displays Ringer off and

Handset ringer volume You can adjust the handset ringer volume level, or

then press **SELECT** to save.

Temporary ringer silencing

To silence the handset ringer:

base and it displays

Quiet mode

QUIET#.

displays **Ringer muted** and \searrow .

To silence the telephone base ringer:

· Press MUTE or CANCEL on the telephone

You can turn on quiet mode for a period of time

(1-12 hours). During this period, all tones (except

paging tone) and call screening are muted.

ephone base is not in use.

To turn the quiet mode off:

To set and turn the quiet mode on:

2. Use the dialing keys to enter the desired

duration (1-12), then press SELECT.

1. Press and hold QUIET# when the handset/

While the quiet mode is on, press and hold

1. Press MENU when the handset/telephone base

2. Scroll to **†Ringers** and then press **SELECT**

3. Press ▼ or ▲ to sample each volume level,

When the ringer volume is set to off, the handset still

rings when you press FIND HANDSET at the telephone

When the telephone is ringing, you can temporarily

silence the ringer without disconnecting the call.

The next call rings normally at the preset volume.

Press MUTE or CANCEL on the handset and it

turn the ringer off.

is not in use.

Make sure the answering system is on. When the nswering system is on ANS ON should display on the handset and the telephone base.

machine memory is full it does not record new nessages until some old messages are deleted. If you subscribe to voicemail service, change the number of rings so that your answering system answers before your voicemail service answers

When the answering

To determine how many rings activate your voicema service, contact your elephone service provide Make sure you have set The answering system does the date and time. See not announce Configure your telephone the correct day of the week

for recorded messages time stamp. The messages If a caller leaves a very long on the answering | message, part of it may be system are

lost when the answering incomplete. system disconnects the call after the preset recording If the memory on the answering system becomes full during a message, the answering system stops

telephone base for about I accidentally IN USE light turns on and set my LCD language to Spanish or French, and I don't know how to change it back

to English.

the call. While the handset is not in use, press MENU and then enter **\(\frac{\colon}{364#} \) to change the** handset LCD language back to English.

recording and disconnects

What does this limited warranty cover? The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement should expect the repair or replacement to take

What is not covered by this limited warranty?

 Product that has been subjected to misuse accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or

alteration or modification by anyone other than an authorized service représentative of VTech: 3. Product to the extent that the problem

caused by use with non-VTech accessories;

About the built-in answering system and voicemail service

For message recording, your telephone has a built-in answering system, and it also supports voicemail service offered by your telephone service provider (subscription is required, and fee may apply)

The main differences between them are:

Category	Built-in answering system	Voicemail from telephone service
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service provider.
	You messages will not be deleted automatically. You have to delete your message manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.
Method to retrieve messages	When you received new messages, the handset and the telephone base both display XX new messages, and the \[\shim \] /\shim /\shim AY/STOP light on the telephone base flashes.	When you receive new messages, the handset and the telephone base display and New voicemail.
	To retrieve messages, usually there are two ways: • Press ►/■/ PLAY/STOP on the telephone base; or • Access remotely with an access code.	To retrieve messages, you need an access number and/or a password provided by your telephone service provider.

Set your built-in answering system

up to 99 messages. Each message can be up to three minutes in length. The total storage capacity for the announcement, messages and memos is approximately 14 minutes. The actual recording time depends on individual message

Your answering system allows you to set your announcement, to save and delete messages activate call screening, to set number of rings before pick up, to access remotely, and to control the recording time

Turn the answering system on or off The answering system must be turned on to answer and record messages

 Press **b/ANS ON/OFF** to turn the built-in answering system on or off.

1. Press **MENU** when the handset/telephone base

2. Press ▼ or ▲ to scroll to **\$Answering sys**, then

press SELECT Press ▼ or ▲ to scroll to ♣Answer on/off, then press SELECT

 Press ▼ or ▲ to scroll to ♣Answer: On or ♣ Answer: Off, then press SELECT.

Default announcement The telephone is preset with a greeting that answers calls with, "Hello. Please leave a

message after the tone." You can use this preset announcement, or replace it with your own. Record your own announcement

The announcement can be up to 90 seconds in 1. Press **MENU** when the phone is not in use.

- 2. Press **▼** or **△** to scroll to **♦**Answering sys, then press SELECT twice. 3. The system announces, "To play, press 2. To
- record, press 7." Press 7 to record. 4. The system announces, "Record after the tone.
- Press 5 when you are done." After the tone. speak towards the microphone. 5. Press 5 when done.

Play your announcement . Press **MENU** when the phone is not in use

2. Press **▼** or **△** to scroll to **♦**Answering sys, then press **SELECT** twice

imitations: Implied warranties, including those of

fitness for a particular purpose and merchantability

as proof of purchase.

(an unwritten warranty that the Product is fit for

ordinary use) are limited to one year from the

3. The system announces, "To play, press 2. To record, press 7." Press 2 to play the current

Options during playback: Press **▼/VOLUME** or **▲/VOLUME** on the

The answering system can record and store Press 5 to stop playback. Delete your announcement 1. Press **MENU** when the phone is not in use. 2. Press ▼ or ▲ to scroll to **\$Answering sys**, then

When your announcement is deleted, calls are answered

with the default announcement.

3. The system announces, "To play, press 2. To

record, press 7." Press 3 or DELETE to delete

cordless handset, or **▼ VOL** or **VOL ▲** on the

telephone base to adjust the listening volume.

Set number of rings

press **SELECT** twice.

your recorded announcement.

You can set the answering system to answer an incoming call after two, three, four, five or six rings; or toll saver. If you choose toll saver, the answering system answers a call after two rings if you have new messages, or after four rings when there are no new messages. This enables you to check for new messages and avoid paying unnecessary long distance charges when you are calling from outside your local area. 1. Press **MENU** when the phone is not in use.

- 2. Press ▼ or ▲ to scroll to **\$Answering sys**, then press SELECT
- 3. Press ♥ or ▲ to scroll to \$Ans sys setup, then press SELECT
- Scroll to **†# of rings**, then press **SELECT**.
- 5. Press **▼** or **△** to select **♦2**, **♦3**, **♦4**, **♦5**, **♦6** or **♦Toll saver**, and then press **SELECT**.

Set recording time You can set the recording time allowed for each

incoming message 1. Press **MENU** when the phone is not in use.

- 2. Press **▼** or **△** to scroll to **♦**Answering sys, then press SELECT
- press SELECT Scroll to **Recording time**, then press
- or **\$1 minute**, and then press **SELECT**.

Jsing your built-in answering

New message indication

When there are new answering system messages the handset and the telephone base display XX new messages, and the ▶/■/PLAY/STOP light on the telephone base flashes.

Frequency Crystal controlled PLL synthesizer

3. Press ♥ or ▲ to scroll to ♦Ans sys setup, then

To delete all messages with the telephone 5. Press **▼** or **△** to select **♦3 minutes**, **♦2 minutes** 1. Press X/DELETE twice when the phone is not

> To delete all old messages with a handset: 1. Press **MENU** when the phone is not in use.

If the message alert tone is turned on, the

Message playback

Options during playback:

playback volume.

Options during playback:

message playback volume.

to hear the previous message

· Press OFF to stop the playback.

Delete all old messages

Press 6 to skip to the next message.

telephone base beeps every 10 seconds when

there are messages that have not been reviewed.

To play messages at the telephone base:

1. Press **MENU** when the phone is not in use.

Press ▼ VOL or VOL ▲ to adjust the message

Press **MREPEAT** twice to hear the previous

message. The system advances to the next

To play messages with a cordless handset:

Press ▼/VOLUME or ▲/VOLUME to adjust the

· Press 4 to repeat the message. Press 4 twice

message. The system advances to the next

You can only delete old (reviewed) messages.

them. You cannot retrieve deleted messages

You cannot delete new messages until you review

Press 3 or DELETE to delete the playing

1. Press **MENU** when the phone is not in use.

Press SELECT to select ₱Play messages.

Press SELECT to select ₱Play messages.

Press ►/SKIP to skip to the next message.

Press REPEAT to repeat the message.

• Press X/DELETE to delete the playing

• Press STOP or 5 to stop the playback.

Press ►/■/PLAY when the phone is not in use.

2. Press ▼ or ▲ to scroll to **\$Answering sys**, then

3. Press ▼ or ▲ to scroll to **†Delete all old**, and then press **SELECT** twice.

Remote access

2

3

33

5

*5

*7

8

appropriate setting.

Stop.

End the call.

4. Hang up or press 8 to end the call.

Hear a list of remote commands.

Record a new announcement.

Skip to the next message

Turn the answering system on or off.

(during playback).

A two-digit security code is required to access the answering system remotely from any touch-tone telephone. The preset code is 19. You can use this oreset code, or set your own

- 1. Dial your telephone number from any touch-
- tone telephone 2. When the system plays your announcement
- enter the two-digit security code. 3. Enter one of the following remote command

ונו	le following remote commands.	When you received a voicemail, the handset	
1	Description	and the telephone base display and New voicemail. To retrieve, you typically dial an acc number provided by your telephone service provider, and then enter a security code. Contayour telephone service provider for instructions	
	Play all messages.		
	Play only new messages.		
	Delete the current message (during playback).	how to configure the voicemail settings and lister to messages.	
	Delete all old messages.	Ø NOTE	
	Repeat the current message (during playback).	After you have listened to all new voicemail	

Fees may apply

Retrieve voicemail

messages, the indicators on the handset and the telephone base turn off automatically

Turn off the new voicemail indicator If you have retrieved your voicemail while away from home, and the telephone still displays the new voicemail indicators, use this feature to turn off the indicators.

This feature turns off the indicators only, it does not delete your voicemail messages.

You can add new handsets (CS6609, purchased separately) to your telephone system. Your telephone base supports a maximum of five

For more details, refer to the user's manual that comes with your CS6609 new handset

Taking care of your telephone Your cordless telephone contains sophisticated

General product care

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

Cleaning your telephone

should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

VTech Communications, Inc. A member of THE VTECH GROUP OF COMPANIES.

VTech is a registered trademark of VTech Holdings Limited. Specifications are subject to change without notice © 2015 VTech Communications Inc. All rights reserved. 01/15. CS6649-X_ACIB V11.0 Document order number: 91-007067-040-100

Designed to fit your home.

1. Press **MENU** when the handset/telephone base Scroll to \$Settings, then press SELECT. 3. Scroll to **CIr voicemail** #, then press **SELECT** 4. Press **SELECT** again to confirm. Expand your telephone system

Below are the questions most frequently asked about the cordless telephone. If you cannot find the answer to your question, visit our website at www.vtechphones.com or call 1 (800) 595-9511 for customer service.

My telephone does not work at all.	Make sure the telephone base is installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use.
The display shows No line . I cannot hear the dial tone.	Disconnect the telephone line cord from your telephone and connect it to another telephone. If there is no dial tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord.
	If changing the telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact your telephone service provider.
	You may be using a new cable or VoIP service, the existing telephone jacks in your home may no longer work. Contact your service provider for solutions.

The handset is deregistered

from the telephone base. To

FIND HANDSET on the

four seconds until the

it shows Registering...

Press QUIET# on the

handset. The handset

shows **Registering...**

and cordless handset

show **Registered**, and

you hear a beep when

the registration process

takes about 60 seconds

f registration fails, the

handset displays Failed.

Repeat steps 1 to 2 again.

completes. This process

Both the telephone base

register it back:

Press and hold

The display

register HS and

alternately. The

handset does not

shows **To**

work at all.

imited warranty

How long is the limited warranty period? The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty;

2. Product that has been damaged due to repair,

experienced is caused by signal conditions, network reliability, or cable or antenna systems: 4. Product to the extent that the problem is

the United States of America and Canada.

whichever is longer.

This limited warranty does not cover:

for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express

this limited warranty.

Other limitations

 Product whose warranty/quality stickers. modifications to this limited warranty and you product serial number plates or electronic should not rely on any such modification serial numbers have been removed, altered or State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have . Product purchased, used, serviced, or shipped other rights, which vary from state to state or or repair from outside the United States of province to province.

nstitutional purposes (including but not limited to Products used for rental purpo 7. Product returned without a valid proof of purchase (see item 2 below); or

America or Canada, or used for commercial or

date of purchase. Some states/provinces do not 8. Charges for installation or set up, adjustment of allow limitations on how long an implied warranty customer controls, and installation or repair of lasts, so the above limitation may not apply to systems outside the unit. you. In no event shall VTech be liable for any How do you get warranty service? ndirect, special, incidental, consequential, or To obtain warranty service in the USA, please visit similar damages (including, but not limited to lost our website at www.vtechphones.com or call profits or revenue, inability to use the Product or 1 (800) 595-9511. In Canada, go to other associated equipment, the cost of substitute www.vtechcanada.com or call 1 (800) 267-7377. equipment, and claims by third parties) resulting from the use of this Product. Some states/ **NOTE:** Before calling for service, please review provinces do not allow the exclusion or limitation of the user's manual - a check of the Product's incidental or consequential damages, so the above controls and features may save you a service call. imitation or exclusion may not apply to you Except as provided by applicable law, you assume Please retain your original sales receipt the risk of loss or damage during transit and transportation and are responsible for delivery or

handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by

warranty service? Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and

What must you return with the Product to get

2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and 3. Provide your name, complete and correct mailing address, and telephone number.

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties warranties. No one is authorized to make

Technical specifications

1921.536-1928.448 MHz elephone base: 1921.536-1928.448 MHz Channels 5 Nominal Maximum power allowed by FCC and effective IC. Actual operating range may vary requirement 2.4V Ni-MH batterv Telephone base 6V DC @ 400mA 6V AC @ 300mA Directory:

50 memory locations

50 memory locations

Caller ID log:

up to 30 digits and 15 characters

up to 24 digits and 15 characters

according to environmental conditions at

You can use your answering system and voicemail service together by setting your answering system to answer before voicemail service answers as described below. To learn how to program your

Ising the built-in answering

system and voicemail service

If you are on a call, or if the answering system s busy recording a message and you receive another call, the second caller can leave a voicemail message.

voicemail settings, contact your telephone service

Set your answering system to answer calls at least two rings earlier than your voicemail is set to answer. For example, if your voicemail answers after six rings, set your answering system to answer after four rings. Some voicemail providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the

etrieve voicemail from telephone

Voicemail is a feature available from most telephone service providers. It may be included with your telephone service, or may be optional.

electronic parts, so it must be treated with care. Avoid rough treatment

Avoid water

Electrical storms

Electrical storms can sometimes cause power

Your telephone has a durable plastic casing that