 


# ENGLISH

Thank you for purchasing this BulBotz™ Alarm Clock.  
Please read this instruction manual carefully before use and keep it for future reference.  
Please remove all packaging materials before giving to children.

## INSTALLING / REPLACING BATTERIES

Required 2 x AAA batteries (included)

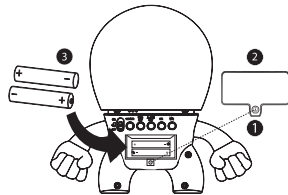

1. Remove screw from battery hatch
2. Remove battery hatch from back of clock
3. Insert 2 x AAA batteries (included).
4. Re-attach battery hatch removed in step 2.
5. Insert screw to secure battery hatch removed in step 1.

## BATTERY CAUTION

 
Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.  
Do not mix old and new batteries.  
Only batteries of the same or equivalent type as recommended are to be used.  
Non-rechargeable batteries are not to be recharged.  
Rechargeable batteries are to be removed from the toy before being charged.  
Rechargeable batteries are only to be charged under adult supervision.  
Batteries are to be inserted with the correct polarity.  
The supply terminals are not to be short-circuited.  
Exhausted batteries are to be removed from toy.  
Remove batteries when not in use or discharged.  
Do not dispose of batteries in fire, batteries may explode or leak.  
Always dispose of used batteries in a safe place out of the reach of children.

## CAUTION


RISK OF ELECTRIC SHOCK DO NOT OPEN!

CAUTION: To reduce risk of electric shock, do not remove cover. No user serviceable parts inside refer servicing to qualified service personnel

## OVERVIEW OF FEATURES

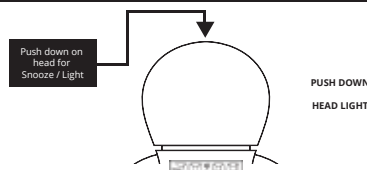

## BACK OF ALARM CLOCK

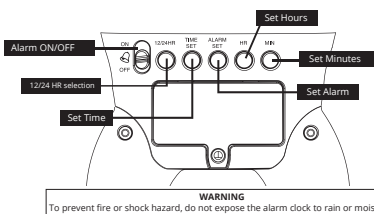 

## SET UP

### SETTING THE TIME

**Hour**  
Press and hold TIME SET, whilst pressing HOUR to set the hour.

**Minute**  
Press and hold TIME SET, whilst pressing MINUTE to set the minute.

**Changing to 12/24 HR**  
Press 12/24HR to change between 12HR or 24HR time format.

### SETTING THE ALARM

**Hour**  
Press and hold ALARM SET, whilst pressing HOUR to set the hours.

**Minute**  
Press and hold ALARM SET, whilst pressing MINUTE to set the minute.

### TURNING ALARM ON/OFF

 
**To turn the alarm ON**  
Slide switch to ON position, alarm is active. LCD display will show the bell and snooze symbol  
When the alarm time is reached, a "BEEP BEEP" sound and head lights up will continue for 1 minute

**To turn the alarm OFF**  
Slide switch to OFF position. The alarm is disabled, the bell and snooze symbols will disappear

**Snooze**  
When the "BEEP BEEP" sounds, press the head (SNOOZE/LIGHT) once.  
The alarm will stop and enter snooze mode. The alarm will sound again after 5 minutes.

**Backlight**  
In any mode, press the head (SNOOZE/LIGHT) once, the display and head will light up for 5 seconds.

## LCD DISPLAY

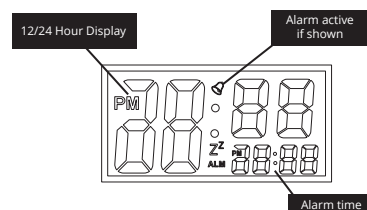

## GUARANTEE

This guarantee is made under the terms and conditions set out below.  
These are in addition to the consumer statutory rights and do not otherwise affect them.  
Your guarantee covers material defects and manufacturing defects. It does not cover the following:

- The battery
- Damage resulting from normal wear and tear
- Damage resulting from lack of care
- Tampering or damage caused by an unauthorised dealer

Your clock is guaranteed for a period of 2 years from the date of purchase.