
## **INSTRUCTION MANUAL**

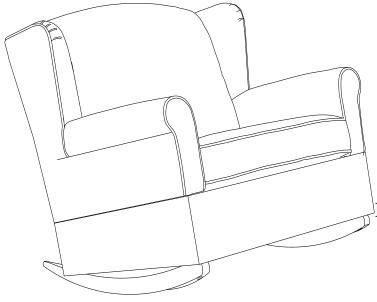

### CHAIR AND A HALF ROCKER



### **Model No:**

DA6735-GR (Gray) DA6735-T (Taupe) DA6735-J (Java)

### **UPC CODE:**

0-65857-16821-1 (Gray) 0-65857-16822-8 (Taupe) 0-65857-16823-5 (Java)

### **NOTE:**

THIS INSTRUCTION BOOKLET
CONTAINS <u>IMPORTANT</u> SAFETY
INFORMATION. PLEASE READ AND
KEEP FOR FUTURE REFERENCE.

Lot number:
(TAKEN FROM CARTON)
Date of purchase:
//

### DO <u>NOT</u> RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980 E-Mail: das@dorel.com Fax #: 514-353-7819

#### **CUSTOMER SERVICE**

If you are missing parts or have any questions about this product, contact our customer service representative first!

### **CALL 1-800-295-1980**

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

Customer Service Department No. 413 12345 Albert-Hudon Boulevard, Suite 100 Montreal, Quebec Canada H1G 3L1

E-MAIL: das@dorel.com

## **NOTES**

- \* Ensure all parts and components are present before beginning assembly.
- \* Assemble on a clean, smooth surface to prevent damage to product finish.
- \* **DO NOT** use power tools.
- \* CAUTION: Adult assembly required.
- \* Assembly and handling will require two people.
- \* Estimated assembly time: 20 minutes.

### CARE AND CLEANING

Dust regularly with a soft, dry cloth to prevent soil build up. Keep away from heat to avoid glazing, melting or scorching. Use a professional cleaning service to clean the fabric.

#### **MAINTENANCE**

Check bolts/screws periodically and tighten them if necessary.

#### LIMITED WARRANTY

Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. Any wearing, tearing or fading of the fabric is not covered under the warranty. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.



WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

### **HARDWARE LIST**

1	2	3
Ø5/16" X 45mm	Ø22 X 1.5mm	Ø12.5 X 1.2mm
BOLT	FLAT WASHER	SPRING WASHER
2 PCS	11 PCS	11 PCS
	5	
Ø5/16" X 63mm	M5 X	60mm
BOLT	ALLE	N KEY
9 PCS	1 ]	PC


### **PARTS LIST**

A	В	C
SEAT BASE	CHAIR BACK	LEFT ARM
1 PC	1 PC	1 PC
D	E	F
RIGHT ARM	SEAT CUSHION	LEG
1 PC	1 PC	2 PCS

### **STEP 1:**

Attach left arm (C) to chair back (B) by inserting the metal bracket on chair back (B) into the metal glide on left arm (C). Push the chair back (B) with a downward force to secure it into place. Pull back the fabric lining underneath chair back (B). Secure left arm (C) to chair back (B) with flat washer (2), spring washer (3) and bolt (1). Use Allen key (5) to tighten the bolt.

Repeat this step to attach right arm (D) to chair back (B).

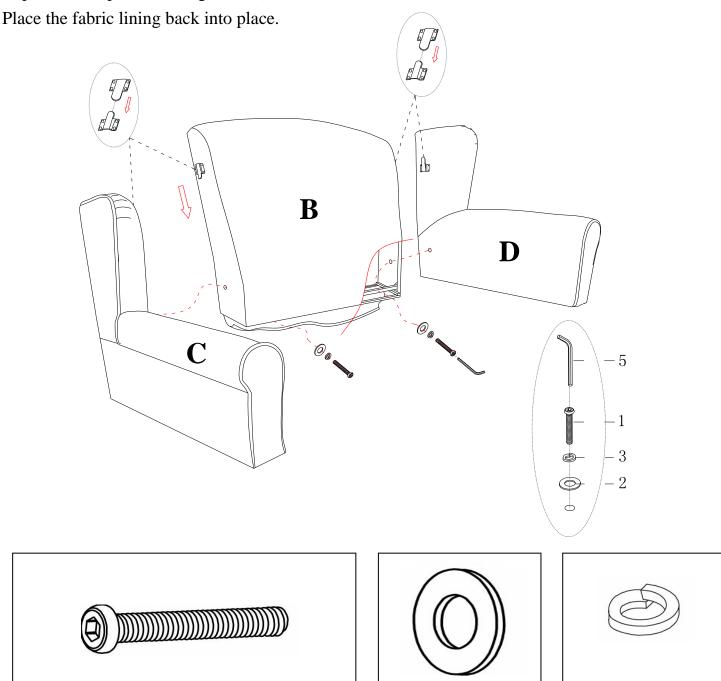


### **STEP 2:**

With the help of another person, gently place the unit onto seat base (A) and pull back the fabric lining underneath seat base (A).

Secure left arm (C), right arm (D) and chair back (B) to seat base (A) wiht flat washers (2), spring washers (3) and bolts (4). Use Allen key (5) to tighten the bolts.


Place the fabric lining back into place.

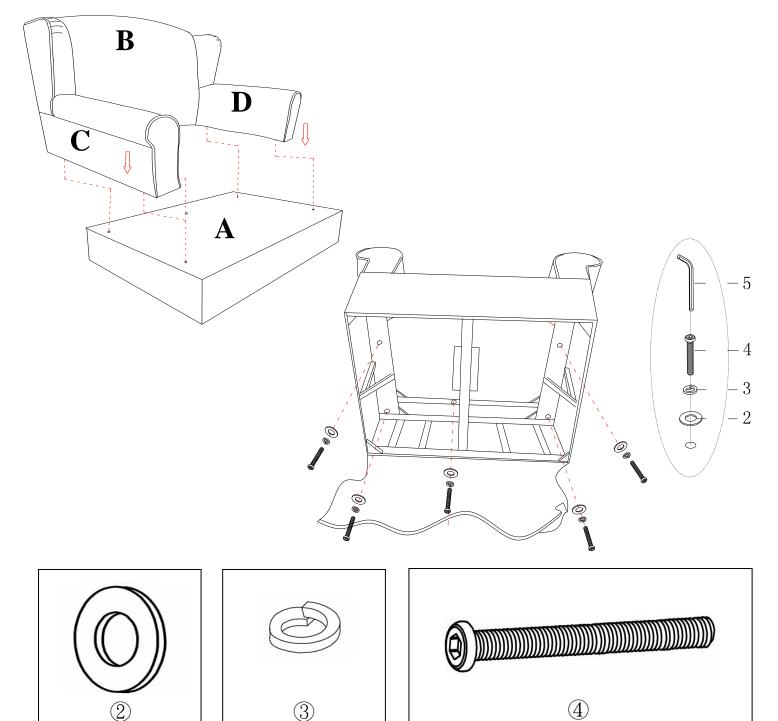

### **STEP 3:**


With the help of another person, gently turn the unit upside down. Attach the legs (F) to seat base (A) with flat washers (2), spring washers (3) and bolts (4). Use Allen key (5) to tighten the bolts.

Turn the rocker upright.

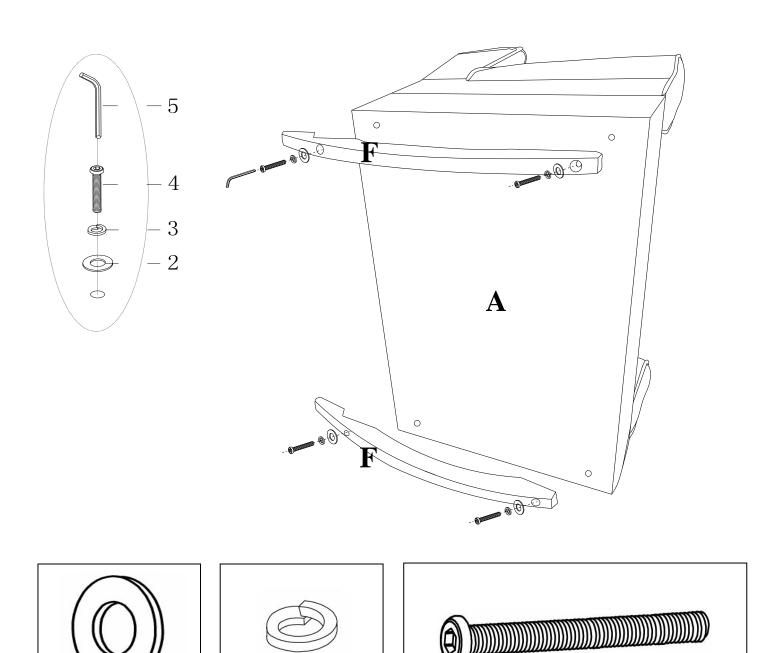

### **STEP 4:**

Place seat cushion (E) on the rocker.

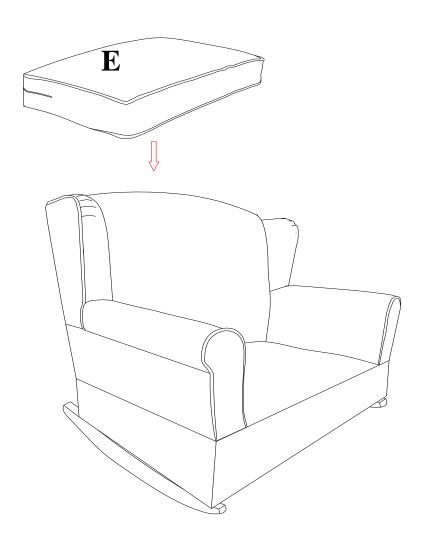


1

**CAUTION:** This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

Dust regularly with a soft, dry cloth to prevent soil build up. Keep away from heat to avoid glazing, melting or scorching.

Use a professional cleaning service to clean the fabric.

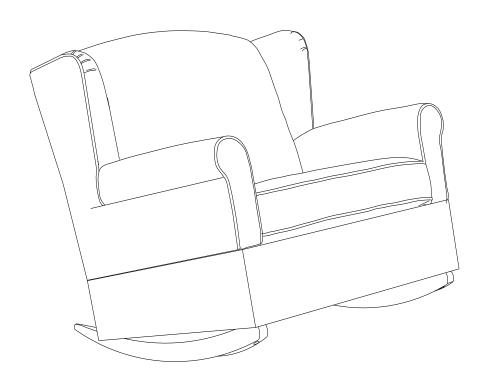

Congratulations! You've finished assembling your chair and a half rocker.

### DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980 E-Mail: das@dorel.com Fax #: 514-353-7819

## **Customer Service**

### PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

	Service Phone Number 1-800-295-1980 Service Fax Number 514-353-7819 Email: das@dorel.com
Request Date:	
Request Date.	
Name:	
Shipping Address:	
Street & Number:	
City & State: Zip Code:	
Day Time Phone Number: (including area code)	
Date & Place of Purchase:	
	Part(s) description and quantity (Please be sure to list model number or SKN number):