INSTRUCTION MANUAL


REAL TREE CAMOUFLAGE ROCKER RECLINER

Model No:

DA6314RT5

UPC CODE:

0-65857-16272-1

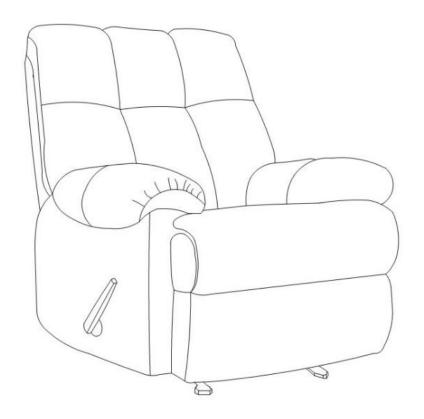

NOTE:

THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

I	ot number
(TAKEN FRO	M CARTON)

Date	of	purc	hase:
		1	

/ /



DO <u>NOT</u> RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980 E-Mail: das@dorel.com Fax #: 514-353-7819

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!

CALL 1-800-295-1980

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

Customer Service Department No. 413 12345 Albert-Hudon Boulevard, Suite 100 Montreal, Quebec Canada H1G 3L1

E-MAIL: das@dorel.com



WARNING

DO NOT leave children unattended on or beside the recliner.

DO NOT use your recliner as a step stool.

DO NOT sit on the edge of the seat, armrests or on the backrest as this could make the recliner tip over.

NOTES:

- * Ensure that all parts and components are located before beginning assemble.
- * Assemble on soft surfaces to prevent damage to the product finish.
- * Read all instructions before use of the recliner.
- * **Do not** use the unit if it is damaged or broken.
- * Caution: Adult assembly required.
- * Assembly will require 2 people.
- * Estimated assembly time: 5 minutes.

CARE AND CLEANING

Dust regularly with a soft, dry cloth to prevent soil build up. Keep away from heat to avoid glazing, melting or scorching. Use a professional cleaning service to clean the fabric.

MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

LIMITED WARRANTY


Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. Any wearing, tearing or fading of the fabric is not covered under the warranty. This warranty gives you specific legal rights and other rights which vary from State to State.



WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

REALTREE CAMOUFLAGE ROCKER RECLINER DA6314RT5

PARTS LIST

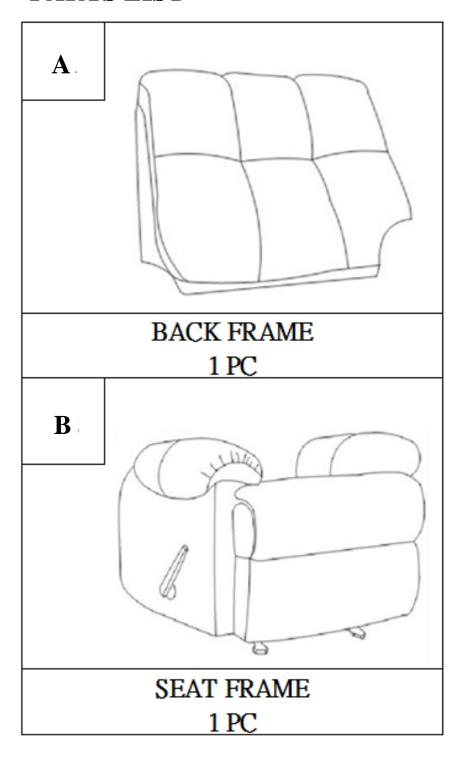


REAL TREE CAMOUFLAGE ROCKER RECLINER DA6314RT5

STEP 1:

Attach back frame (A) to seat frame (B) by sliding the brackets on the back frame (A) into the brackets on the seat frame (B).

Place the flap into position using the Velcro strips once the back frame (A) has been locked into place.

NOTE: Both sides should be inserted in the base at the same time. If the back gets off balance and only one side is inserted, you will need to pull the back out and restart. This step is best performed with 2 people.

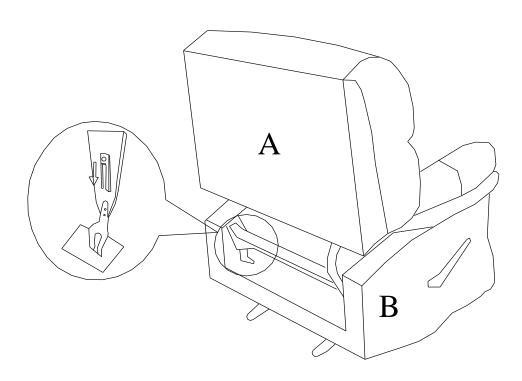

REALTREE CAMOUFLAGE ROCKER RECLINER DA6314RT5

! CAUTION: This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

Dust regularly with a soft, dry cloth to prevent soil build up. Keep away from heat to avoid glazing, melting or scorching. Use a professional cleaning service to clean the fabric.



Intended Maximum Weight= 225 lbs

That's it! You've finished assembling your rocker recliner.

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980 E-Mail: das@dorel.com Fax #: 514-353-7819

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

	Service Phone Number 1-800-295-1980	Email: das@dorel.com
Customer S	Service Fax Number 514-353-7819	
Request Date:		
Name:		
Shipping Address:		
Street & Number:		
City & State:		
Zip Code:		
Day Time Phone Number: (including area code)		
Date & Place of Purchase:		
	Part(s) description and quantity: (Please be sure to li	st model number or SKN number)