

TABLE OF CONTENTS / TABLA DE CONTENIDOS

ENGLISH

■ Warranty	2
■ Introduction	2
■ Important Safety Instructions.....	3-5
■ Symbols	6-7
■ Features.....	8
■ Assembly	9
■ Battery Packs and Charger	10-11
■ Operation	12-14
■ Care and Maintenance.....	15-16
■ Environmentally Safe Battery Disposal.....	17
■ Troubleshooting.....	18
■ Illustrated Parts List	19-20
■ Figure Numbers (Illustrations).....	i-viii

ESPAÑOL

■ Garantía	Sección de Inglés pág. 2
■ Introducción	Sección de Inglés pág. 2
■ Instrucciones de seguridad importantes	3-5
■ Símbolos	6-7
■ Características.....	8
■ Armado	9-10
■ Batería y cargador	10-12
■ Funcionamiento	13-15
■ Cuidados y mantenimiento.....	16-17
■ Eliminación ambientalmente segura de la batería..	18
■ Resolución de problemas.....	19
■ Lista de piezas, ilustrada	20-21
■ Números de las figuras (ilustraciones).....	i-viii

CRAFTSMAN LIMITED WARRANTY

FOR TWO YEARS from the date of sale, this power tool is warranted against defects in material or workmanship.

FOR ONE YEAR from the sale date a supplied battery pack or charger is warranted against material or workmanship defects.

WITH PROOF OF SALE, a defective product will be replaced free of charge.

For warranty coverage details to obtain free replacement, visit the web page:

www.craftsman.com/warranty

This warranty does not cover the trimmer line or spool, which are expendable parts that can wear out from normal use within the warranty period.

This warranty is void if this product is ever used while providing commercial services or if rented to another person.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears Brands Management Corporation, Hoffman Estates, IL 60179