


# STITCH SEW QUICK™ INSTRUCTIONS

## Parts Diagram:

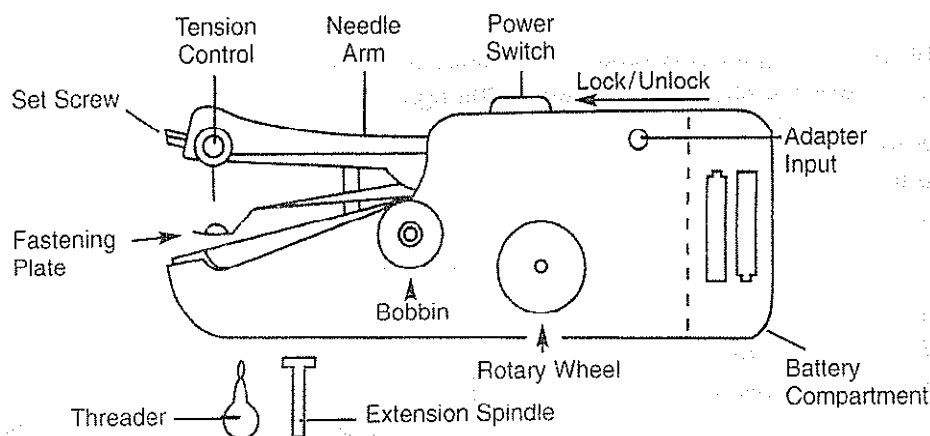


**Note:** Always use rotary wheel to move needle. Never press or pull directly on needle arm to avoid damages to internal mechanism.

## Directions for Use:


**Note:** Operate the machine for 10 seconds, and then pause for 5 seconds. It can then be used again regularly.

1. Make sure machine is in the locked position (see diagram on reverse side under "To Replace Batteries"). Raise the needle arm to the highest position by turning the rotary wheel. Note: The rotary wheel can be turned in either direction (see diagram # 1).
2. Lift up the fastening plate making sure not to push down on the needle arm (the arm can still be moved manually even when the machine is in the locked position). Place cloth underneath the fastening plate (see diagram # 2).
3. Pull at least 2 inches of thread through the needle, from back to front, prior to starting to sew.
4. Hold the Stitch Sew Quick™ with right hand and operate power switch with thumb, other fingers supporting the bottom (see diagram # 3).
5. Unlock machine (see diagram on reverse side under "To Replace Batteries"). Press the power switch with your right thumb. The machine will feed cloth to the left in proper tension automatically, use left hand to hold the cloth and control the direction (do not rush machine). When wider stitches are required, pull cloth to the left a little faster while you continue sewing. Follow the centerline on cloth fastening plate to ensure straight stitching (see diagram # 4).
6. To Finish Seam - When finished sewing, raise the needle arm to the highest position by turning the rotary wheel. Then use the back of a seam ripper or scissors to pull the thread out about 3 inches then cut it (see diagram 5 and 6).


Dia. 1

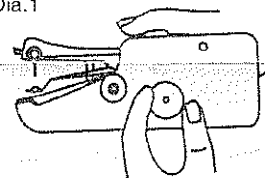


Dia. 2

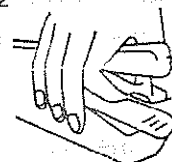


Dia. 3

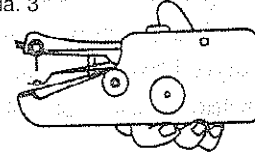

Dia. 4

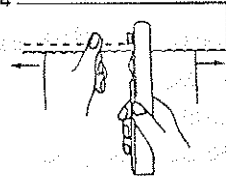

Dia. 5

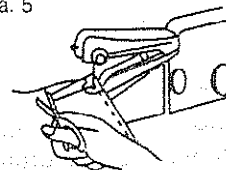

Dia. 6

