


MAGNETIC WINDOW/ DOOR ALARM INSTALLATION AND OPERATING INSTRUCTIONS

Please keep these instructions in a safe place for future reference

Kit includes:

- 1 x Magnetic window/ Door Alarm
- 1 x Double sided mounting tap set
- 1 x Instruction leaflet

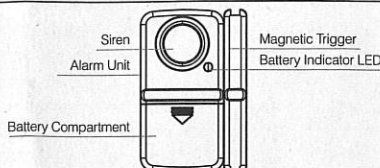

1. Introduction

The Magnetic Window/ Door Alarm is designed to sound an intruder alarm or visitor chime when a door or window is opened. The simply switch in the battery compartment of the unit can toggle between the different modes or switch the unit off when it is not required.

2. Battery installation

The Magnetic Window/ Door Alarm requires 4 x LR44 alkaline batteries (included).

To activate the batteries:

- Slide off the cover at the front of the main unit.
- Carefully remove the clear plastic insulation tab from the batteries. If the batteries are dislodged, replace them noting the polarity diagram inside the battery compartment.
- Replace the battery cover.

It is recommended that the alarm power is regularly tested by pressing the battery test button in the battery compartment. If the light illuminates, the batteries are in good condition. If it fails to illuminate, replace all the batteries.

To replace the batteries:

- Slide off the cover at the front of the main unit.
- Remove the old batteries and replace with 4 x new LR44 alkaline batteries noting the polarity diagram inside the compartment.
- Replace the battery cover.

IMPORTANT:

- Remove batteries before storing the alarm for long periods of time. Batteries corrode over time and may cause permanent damage to the unit.
- Different types of batteries or new and old batteries should not be mixed.
- Depleted batteries should be removed from the unit and disposed of properly.

3. Installing the unit

- Clean the surfaces you want to mount the alarm on using cleaning alcohol or similar. Ensure the surfaces are completely clean and dry before proceeding.
- Using the double-sided adhesive pad provided, mount the alarm and magnetic sensor on the door or window to be protected, placing one of the units on the part of the fixture which opens and the other on the stationary part of the fixture (frame).
- Ensure that when the door or window is closed the arrows on two parts of the alarm are aligned with less than 15mm between them.

4. Operation

To arm the unit in ALARM mode

- Toggle the CHIME/ OFF/ ALARM switch to the ALARM position. When the door or window is opened (causing the sensors to separate by more than 15mm) the alarm will sound continuously until the door or window is shut or the unit disarmed.

To operate the unit in CHIME mode

- Toggle the CHIME/ OFF/ ALARM switch to the CHIME position. When the door or window is opened (causing the sensors to separate by more than 15mm) the chime will sound.

To DISARM the unit

- Toggle the CHIME/ OFF/ ALARM switch to the OFF position. When the door or window is opened (causing the sensors to separate by more than 15mm) the unit will make no sound.

5. Care & maintenance

To clean the unit housing, use a soft cloth slightly dampened with water, and wipe dry. Do not use chemical agents as this may damage and discolor the unit.



WARNING

Limitations of Alarm Products

Test product regularly to ensure it functions in accordance with these instructions. Security Equipment Corporation (SEC) is not providing insurance or any guarantee that the risk of burglary or robbery will be reduced or prevented even if this product is used properly. SEC recommends that users obtain proper insurance coverage for these risks. SEC does not represent or warrant that that this product may not be compromised or circumvented, that it will provide proper or adequate warning, or that the use of this product will prevent injury, property damage or other losses. Note that this product may be bypassed, compromised, fail or fail to warn like any alarm, including due to improper installation, positioning, or maintenance; tampering; dead, faulty, or improperly installed batteries; sensing limitations and component failures. The product's functional range may be affected or limited by environmental conditions, radio frequency interference or other obstructions. Audible alarm signals may be outside of hearing range, muted by doors, walls, and floors, unheard by deep sleepers or the hearing-impaired, or overwhelmed by other sounds.

90 DAY LIMITED WARRANTY

Security Equipment Corporation warrants this product to be free from manufacturing defects for a period of ninety days from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty does not cover products which have been abused, altered or damaged. This warranty is in lieu of all other warranties express or implied. TO THE EXTENT PERMITTED BY LAW, SEC DISCLAIMS ALL OTHER IMPLIED OR EXPRESS WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE.

LIMITATIONS OF LIABILITY: This limited warranty is your sole remedy and SEC shall not be liable for any damages, whether direct, indirect, incidental, special, consequential, exemplary or otherwise, including lost revenue and lost profits, arising out of any theory of recovery, including statutory, contract or tort. In no event will SEC's entire liability exceed the purchase price of this product. Some states and provinces do not allow the exclusion or limitations on how long an implied warranty lasts or permit the exclusion or limitations of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state and province to province.

If unit should prove defective within the warranty period, return prepaid with dated proof of purchase to:

Security Equipment Corporation
747 Sun Park Drive
Fenton, MO 63026

WARNING:

RISK OF PERSONAL INJURY PROLONGED EXPOSURE TO THE ALARM SIREN
MAY CAUSE PERMANENT HEARING LOSS
HEARING LOSS
FOR INDOOR USE ONLY
DO NOT USE IN WET LOCATIONS

 **SECURITY**
EQUIPMENT CORPORATION
www.sabrered.com