



This Personal Alarm features a dual siren design with the two sirens sounding at different frequencies. The dual sirens oscillate to maximize attention. The compact design allows the Personal Alarm to be discretely carried on a key ring, purse, etc. The idea is to be prepared, so take the Personal Alarm wherever you go. It is recommended the Personal Alarm be carried when walking alone, entering buildings, hallways, elevators, parking lots, etc.

Directions: Remove the plastic battery protection slip from back of alarm. To activate the alarm, pull the pin from the plastic housing. A 110 dB siren will sound. To de-activate, slide the pin back into the alarm unit until it snaps in place. It is recommended that the Personal Alarm be tested periodically to ensure battery performance. Replace the batteries if the Personal Alarm ceases to sound or the volume is low.

To change batteries: Using a screwdriver remove the battery cover on the back. Remove the old batteries and dispose of properly. Replace with four new LR41 batteries as shown. Do not mix old and new batteries or mix batteries.

Storage: Remove batteries before storing the alarm for extended periods of time to prevent batteries from corroding and damaging the Personal Alarm.

Caution: Batteries may leak harmful liquids or ignitable materials or explode causing injury and product damage.

- Do not mix old and new or other battery types.
- Replace all batteries at the same time.
- Replace fully discharged batteries immediately