



OWNER'S MANUAL

PRODUCT NAME Product code: UPC code: 30" REGAL FIR WREATH M45191 810174021813

Date of purchase: ____/ ____/

BATTERIES INSTALLATION

- * Requires three (3) 1.5V "C" type batteries;
- * Batteries not Included:

* Open battery box and insert three (3) 1.5V "C" type batteries observing proper polarity (+/-)

OPERATION

The battery box has three (3) buttons:

- * Button A: ON/OFF
- * Button B: COLOR
- * Button C: MODE

Dual color LED lights with eight (8) functions, fifteen (15) different modes of lighting effect:

- 1. STEADY ON
- 3. QUICK SPARKLING
- 2. SLOW SPARKLING 4. SLOW FADE
- 5. QUICK FADE
- 7. FLASHING

6. SLOW GLOW 8. COLOR SWITCHING

TIMER FUNCTIONS

When the light set is ON, the lights will turn on and remain on for 6 hours, then turn off for next 18 hours. Timed 6 hours ON and 18 hours OFF sequence will repeat continuously until button A turns to OFF.

STORAGE

To avoid leakage and corrosion, remove batteries from battery box before storage. Store product in a cool, dry location, protected from sunlight.

Warning

* This product is for seasonal decoration only and not intended for permanent installation or use.

- * Do not mix old and new batteries. Replace all batteries at the same time.
- * Do not use rechargeable batteries.
- * Do not dispose of batteries in fire. Batteries may explode and cause injury.

CUSTOMER SERVICE Do Not Return This Product To The Store. For any guestions, assistance, or missing parts, please contact us at 1-844 946 8733 Or visit our website at www.winnerstree.com Welcome to email us: CUSTOMERSERVICE@WINNERSARTS.COM



Please refer to part numbers when reordering Made in / Hecho en CHINA Distributed by Sears. Roebuck and Co., Hoffman Estates, IL 60179

