

OVENTE®

PRONTOFILL™
**ELECTRIC
KETTLE**

KG612 SERIES



Before using, please read the instruction manual and keep it for future use.

ovente.com

OVENTE®

PRONTOFILL™
**ELECTRIC
KETTLE**

KG612 SERIES



PRONTOFILL™ ELECTRIC KETTLE

KG612 SERIES

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	4
PARTS AND FEATURES	6
USING THE PRONTOFILL™ ELECTRIC KETTLE	7
DESCALING YOUR PRONTOFILL™ ELECTRIC KETTLE	. . .	8
CARE AND MAINTENANCE	9



IMPORTANT SAFEGUARDS

When using your kettle, basic safety precautions should always be followed, including the following:

- ❗ Read these instructions thoroughly before operating the kettle.
- ❗ Before connecting the kettle to a power source, check whether the voltage indicated on the appliance (bottom of the kettle and base unit) corresponds with the main voltage in your home.
- ❗ Do not touch hot surfaces or hot water. Use handles. Care must be taken since burns can occur from touching hot parts or from spilled hot liquid.
- ❗ To protect against fire, electric shock, and personal injury, do not immerse cord, plug, power base, or electric kettle in water or other liquid.
- ❗ Unplug from outlet when not in use and allow the kettle to cool before cleaning.
- ❗ Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number on 1-855-926-2626 for immediate assistance.
- ❗ The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock, or personal injury.
- ❗ Do not use outdoors.
- ❗ Switch OFF and unplug from the outlet before filling, emptying or cleaning, or when not in use.
- ❗ Do not overfill the kettle. Refer to the maximum level indicator.
- ❗ To avoid a fire, do not operate near explosive and/or flammable fumes. Do not operate or place any part of this appliance on or near gas, electric burner or in a heated oven.



IMPORTANT SAFEGUARDS

When using your kettle, basic safety precautions should always be followed, including the following:

SPECIAL SAFETY INSTRUCTIONS FOR THE KETTLE

- ❗ It is recommended to use filtered or tap water when filling the kettle.
- ❗ The water level must be within the MIN and MAX marks.
- ❗ Switch off the kettle before removing from the base.
- ❗ Always ensure that the lid is tightly closed.
- ❗ The base and exterior of the kettle must not become wet.
- ❗ Always make sure that the kettle is positioned properly on its power base.

PARTS AND FEATURES

PRONTOFILL LID

Pour water right over the lid for easy filling

STAINLESS STEEL

Does not bend or warp even when exposed to extreme heat

STAY-COOL HANDLE

Stays cool to touch to prevent burns

BOIL-DRY PROTECTION & AUTO SHUT-OFF

Automatically shuts off when the kettle is finished boiling or when there is no water in the flask

CONCEALED HEATING ELEMENT

Concealed for safe, lime scale-free operation



360° ROTARY BASE WITH BUILT-IN CORD STORAGE

Allows you to swivel the kettle in 360°
Wrap the cord neatly under the base





USING THE PRONTOFILL™ ELECTRIC KETTLE



PRONTOFILL™ LID

Ovente's patented ProntoFill (TM) technology lets you pour water right over the lid, so you can fill, boil, and enjoy...all with the lid on!

- 1 Fill the kettle with water within the MIN and MAX markings on the carafe. Do not overfill to prevent the risk of spillage.
- 2 Place the kettle firmly on the base, plug it in, and then switch it on. The indicator light will illuminate as the water begins to heat up.
- 3 When the water finishes boiling, the indicator light will automatically go off and the switch will bounce up. Disconnect the kettle from the main power supply.

Notes:

- 1 Make sure that there is water in the carafe when the kettle is plugged in.
- 2 It is normal to find moisture under the kettle or the base. It is due to the condensation of water vapor.



Due to the wide mouth opening of the kettle, you can place a teapot on top to heat tea. The teapot shown here is the Ovente Glass Teapot (FGK27B).

CORRECT DISPOSAL



This product should not be disposed of together with regular domestic waste; it should be taken to an authorized recycler of electrical appliances. By disposing of and recycling domestic waste, you help protect the planet and the people living on it. If you wish to dispose of this item, please do so properly.



DESCALING YOUR PRONTOFILL™ ELECTRIC KETTLE

After continual use, the inside of a kettle gets furred up with limescale, a hard yellowish-white mineral deposit formed when hot water evaporates and solidifies.

Since this furring gradually slows down the heating process, clean the exterior of your kettle once a week and descale the interior at least every few months--depending on how frequently you use it.

It's also a good idea not to leave excess water in the kettle after use as standing water can lead to limescaling. Rather boil only the amount of water you need, and empty out any excess water after use.

Please note that reheating tea may cause tea-staining on the stainless steel surface of the kettle's base. To avoid this, do not reheat the same pot of tea and make sure to rinse the inside of your kettle before each use.

"WHEN LIFE GIVES YOU LEMONS, MAKE LEMONADE"

If you have limescale build-up in your kettle, descale it with lemon juice using the steps below. If, unfortunately, your kettle is a lemon, please call Ovente Customer Support at **1-855-926-2626**.



HOW TO DESCALE YOUR ELECTRIC KETTLE WITH LEMON JUICE

- 1 Mix 30ml of lemon juice with 500ml of water and pour it into the kettle. Cut up and add any remaining lemon to the mixture. Let it sit for an hour and then boil.
- 2 Pour out the mixture and rinse the kettle thoroughly. Continue boiling it with regular water until there is no longer a lemon scent.



CARE AND MAINTENANCE

- 1 Unplug the kettle and allow it to cool down before cleaning.
- 2 Wipe the exterior of the kettle and its base with a damp cloth and then dry them with a clean, dry cloth. Do not use coarse or abrasive cleaning materials to prevent bruising the kettles finish.
- 3 Wipe the kettles interior with a soap-soaked cloth and rinse it with water.



ELECTRICAL REQUIREMENTS

Voltage: 120V

Input power: 1500W

Hertz: 60Hz

OVENTE®

PRONTOFILL™
**ELECTRIC
KETTLE**

KG612 SERIES





OVENTE WARRANTY

LIMITED TWO (2)-YEAR WARRANTY

At Ovente, we aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, and we back all our kettles with a two (2)-year warranty from the date of purchase from an authorized retailer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fees may apply.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

For product support email support@ovente.com or call **1-855-926-2626**.

Visit us at ovente.com



[Facebook.com/ovente](https://www.facebook.com/ovente)



[@oventeTweets](https://twitter.com/oventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



[youtube.com/ovente](https://www.youtube.com/ovente)

ovente.com

OVENTE®

Defining Housewares