


DieHard[®]

POWER AHEAD[®]

9-DRAWER 42-IN. MOBILE CABINET

MANUAL

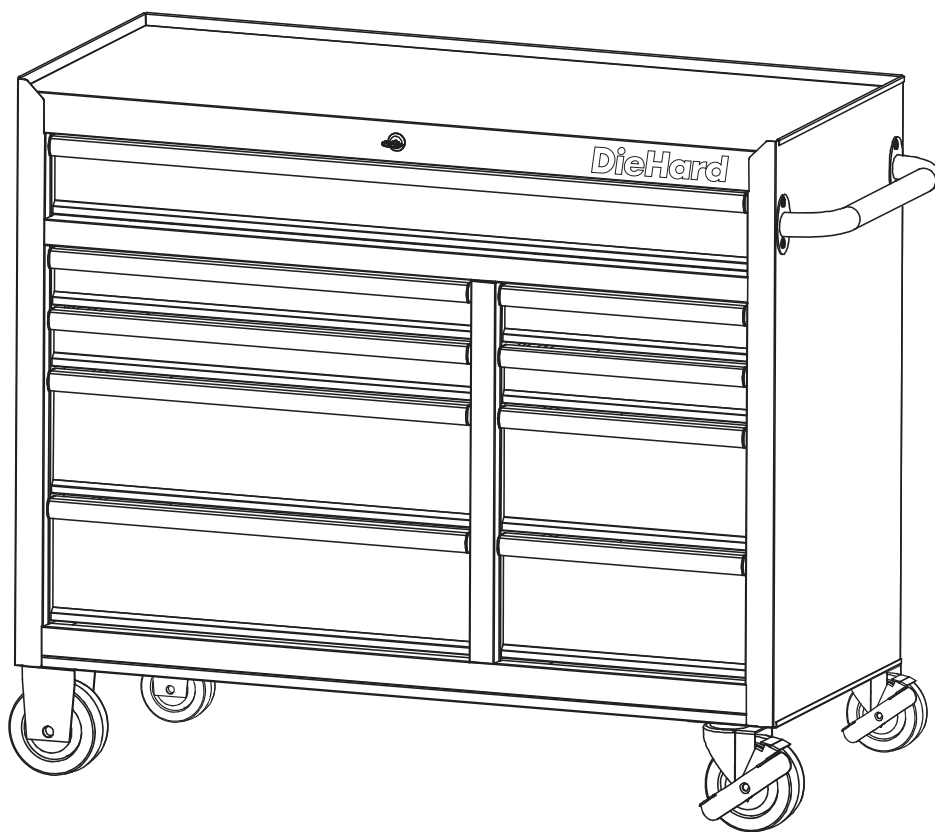

10885

CAUTION:

Read and follow all Safety Rules and Operating instructions before first use of this product

PRODUCT SPECIFICATIONS

COMPONENTS	SPECIFICATIONS
Product size	42-In.W x 18-In.D x 37-In.H
Product Weight	154 lbs.
Maximum drawer capacity	100 lbs.
Maximum total capacity	1200 lbs.



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble or operate this product. Failure to follow may result in serious injury. Save all warnings and instructions for future reference.




WARNING

- Do not stand or step on this product. You may fall which may cause personal injury or product damage.
- When locking a cabinet, close the drawers completely in order for the lock bars to work properly.
- Lock wheels when cabinet is not being moved.
- Secure this product properly before moving it with a forklift.
- Do not attach or mount this product to a vehicle. This may cause personal injury or product damage.

CAUTION


- Do not exceed the maximum drawer weight and total product weight, including contents. Place more than half the total load weight on the bottom cabinet when possible.
- Be careful when opening more than one drawer. The product may become unstable and tip, which may also cause personal injury or product damage.
- Keep the product on level surfaces. The product may become unstable and tip if stored or moved on an unlevel surface, which may cause personal injury or product damage.
- Secure all items and lock all drawers before rolling this product. Only roll the product short distances by using the handle provided.
- Two people are needed to safely move this unit.
- Do not store liquids in the unit unless they are secured in an approved container.
- Keep children and bystanders away while loading, unloading, and moving the product.
- Always use common sense and be cautious when using this product. Do not modify this product in any way.

PART LIST

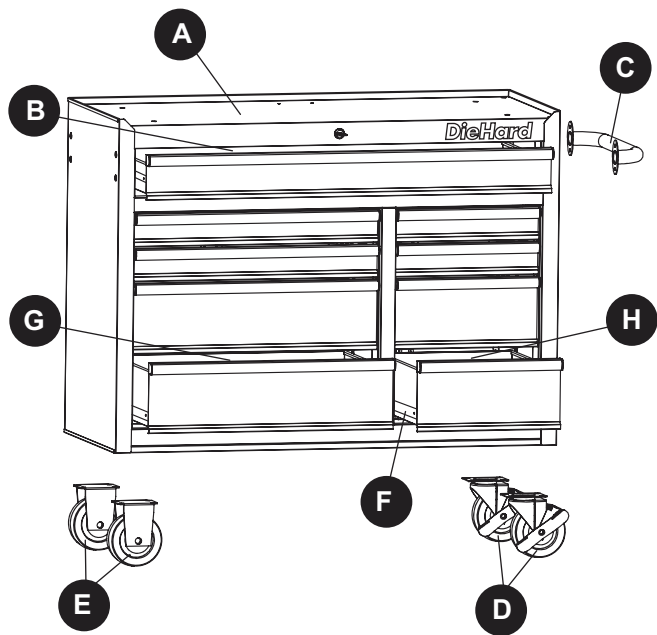

PART	DESCRIPTION
A	Top cabinet mat
B	Big drawer liner
C	Cabinet handle
D	Swivel caster with brake
E	Fixed caster
F	Bottom cabinet drawer slide
G	Bottom cabinet left drawer liner
H	Bottom cabinet right drawer liner
AA	M6 x 20 mm Bolt
BB	M8 x 20 mm Bolt
CC	M8 x 25 mm Bolt
DD	Spring washer
EE	Washer
FF	M8 Nut
GG	Lock
HH	Key


AA

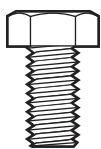

M6 x 20 mm
Bolt

Qty. 4

 
BB



M8 x 20 mm
Bolt

Qty. 4

CC

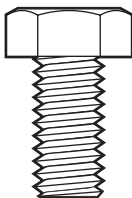

M8 x 25 mm
Bolt

Qty. 16+2

DD



Spring
Washer

Qty. 16+2

EE



Washer

Qty. 16+2


FF



M8
Nut


Qty. 4

GG

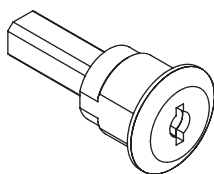

Lock
(Preassembled to chest
and cabinet)
Qty. 1

HH

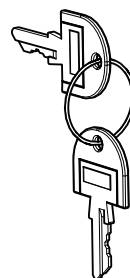

Key
(Preassembled to lock
mechanisms)
Qty. 2

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 15 minutes (does not include unpacking time)

Tools Required for Assembly (included): 10 mm Wrench, 14 mm Wrench

Tools Required for Assembly (not included): Adjustable Wrench

ASSEMBLY INSTRUCTIONS



Step 1.

Attach the cabinet handle (C) to the bottom cabinet using M6 x 20 mm bolts (AA).

Note: The cabinet handle (C) can be attached to either side of the bottom cabinet, but must be attached to the same end as the swivel casters with brake (D). The holes in bottom cabinet are tapped and do not require nuts.

Part Used


AA M6 x 20 mm Bolt x 4

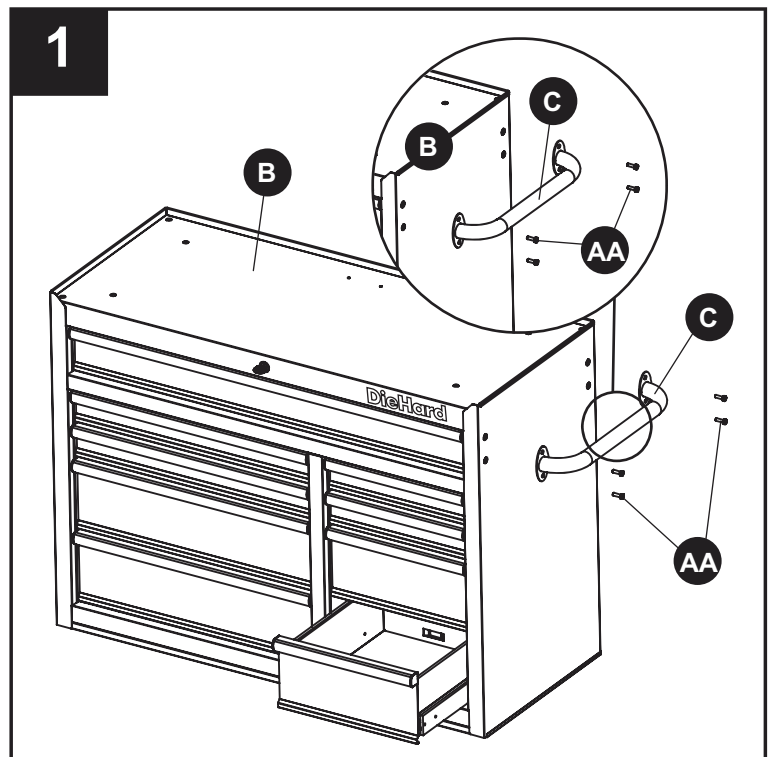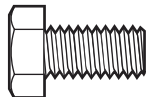


Step 2.

Ensure all cabinet drawers are securely locked into place using the lock (GG) and key (HH) on the bottom cabinet. Lay the bottom cabinet on its back using the cardboard package materials to protect the finish. Mount the two swivel casters with brake (D) to the bottom cabinet using M8 x 25 mm bolts (CC), spring washer (DD) and washer (EE). Repeat this process for the fixed casters (E) on the opposite side of the bottom cabinet. Return the bottom cabinet to its upright position.

Note: Two people may be required to complete this installation. The swivel casters with brake (D) must be installed on the same end of the bottom cabinet as the cabinet handle (C). Do not overtighten the screws.

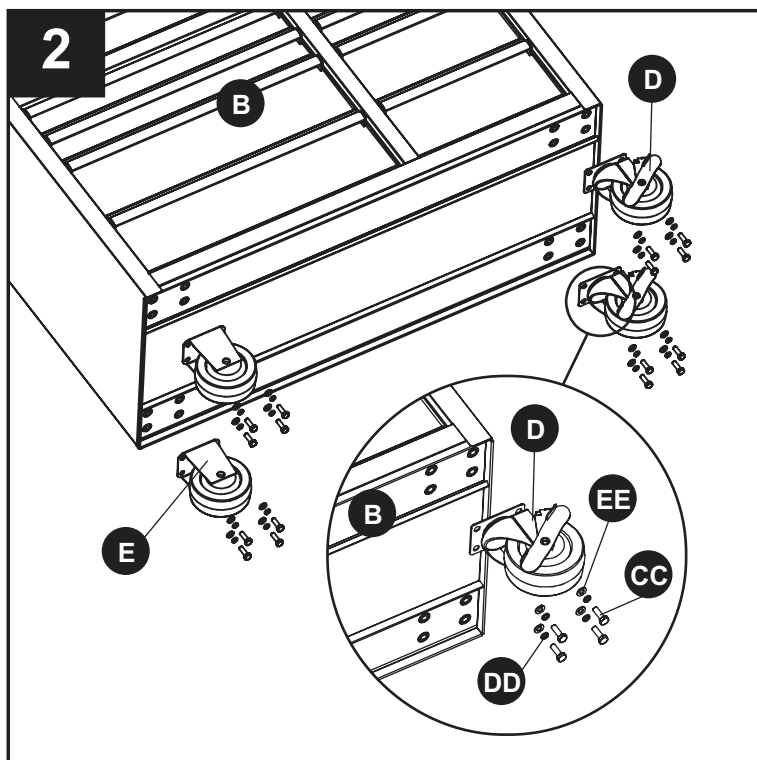



Part Used

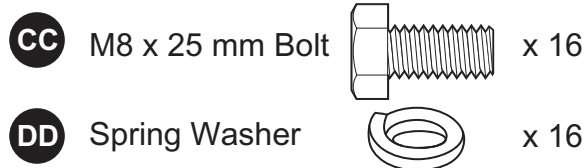

Step 3.

If you plan to stack the top chest (sold separately) onto the bottom cabinet, please follow the below step. Otherwise, forget this step. Unload the two bottom drawers from the top chest and the big drawer from the bottom cabinet using the Operating Instructions on page 6. Insert M8 x 20 mm bolts (BB) from the top of the bottom cabinet into the bottom of the top chest and tighten with M8 Nut (FF). Push the 3 unloaded drawers back into the cabinet using the Operating Instructions on page 6.

Part Used

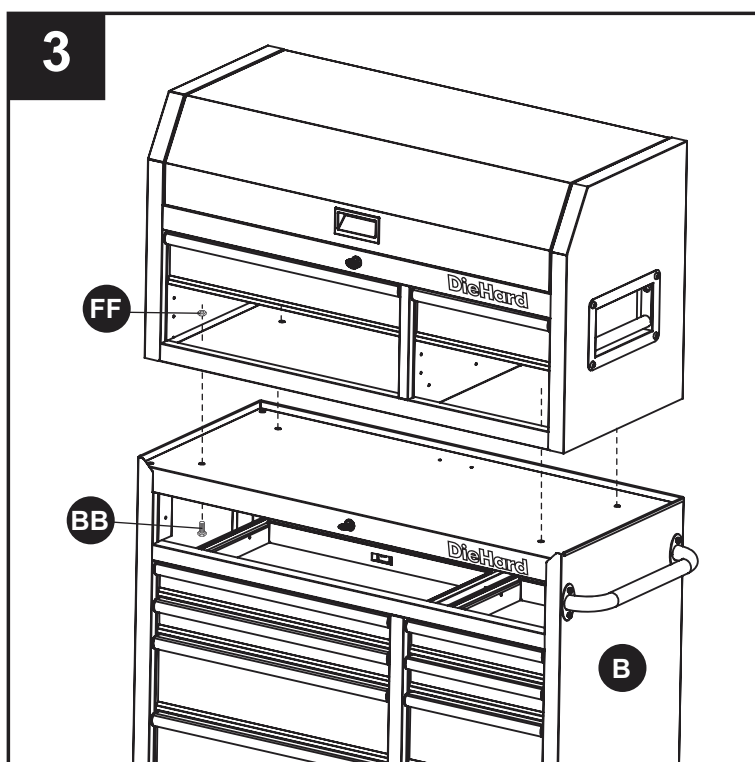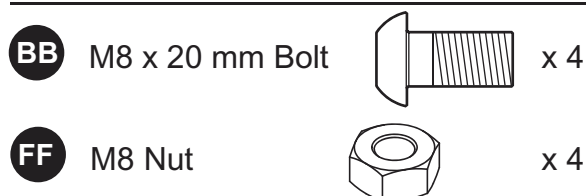


OPERATING INSTRUCTIONS

1. How to use the caster brakes:


To lock the swivel casters, step down on the levers marked with ON. To unlock casters, push down on the levers marked with OFF.

Note: Be sure to lock both casters to prevent cabinet from rolling or swiveling.

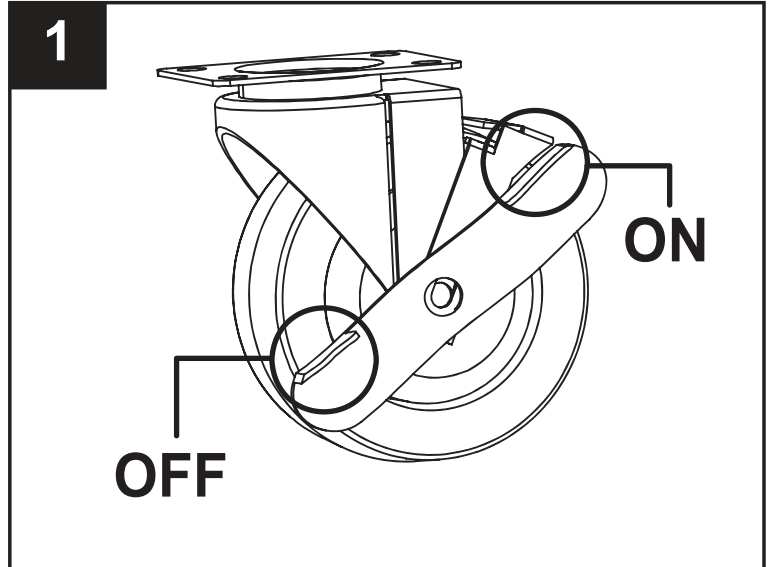


2. How to remove the drawers:

Fully empty and extend the drawer. Push up the release lever on the left drawer side while pulling down on the right drawer side release lever. Pull the drawer outward until it is released from the slides.

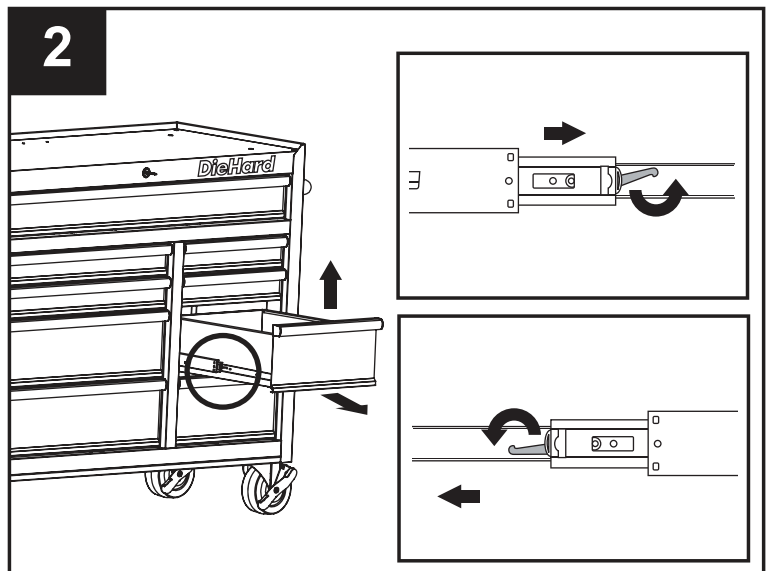

3. How to re-insert the drawers:

Pull the slides and slide carrier out until fully extended. Hold the slide on the drawer while aligning it with the slide on the chest. Slightly insert one side and repeat for the other side. Slowly push the drawer until it is fully closed to engage the slide. Open and close the drawer to verify proper operation.

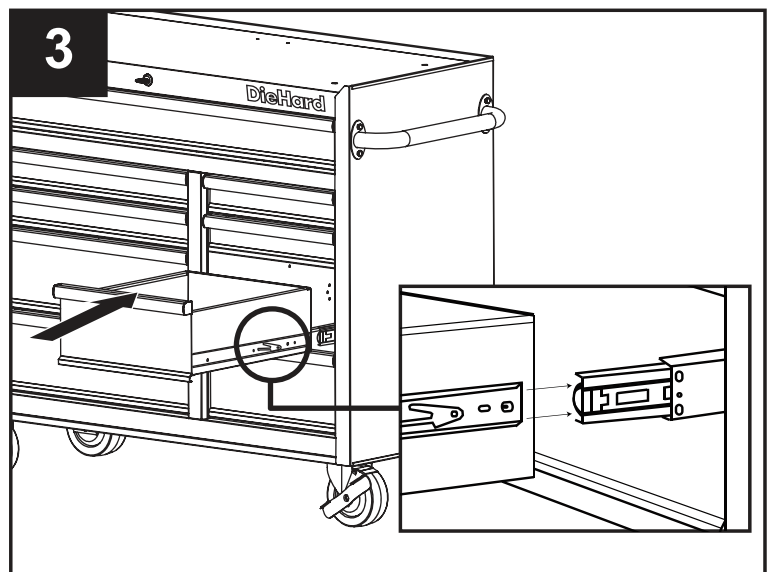

CARE AND MAINTENANCE

- Keep your cabinet in good repair by adopting a regular maintenance program.
- The use of drawer liners (included) is recommended to protect the finish inside the drawers and make the drawers easier to clean.
- Grease the casters annually using high quality bearing grease.
- Lubricate the slides semi-annually with general purpose grease or equivalent.
- Periodically clean the drawer fronts, drawer trim, and other surfaces with a mild detergent and water.
- Remove grease and oil with a standard nonflammable cleaning fluid.

3-YEAR LIMITED WARRANTY

3 year Limited Warranty for Toolbox. This warranty excludes incidental/inconsequential damages and failures due to misuse, abuse or normal wear and tear.

This warranty gives you specific rights, and you may also have other rights which vary state to state.

DieHard® name and logo are used under license.

Product distributed by Transform SR Brands Management LLC, Hoffman Estates, IL 60179
Made in Cambodia.