

# WELCOME.

LG Dishwasher Quick-Start Guide



---



**NEED HELP?** Call an LG Support Representative at 800.243.0000 or visit [lg.com](http://lg.com) for online support.

---



## This guide shows you how to quickly download the free LG SmartThinQ® app to your Android or iOS device and connect your LG Dishwasher

Now, you can control key LG Dishwasher features from your smartphone!

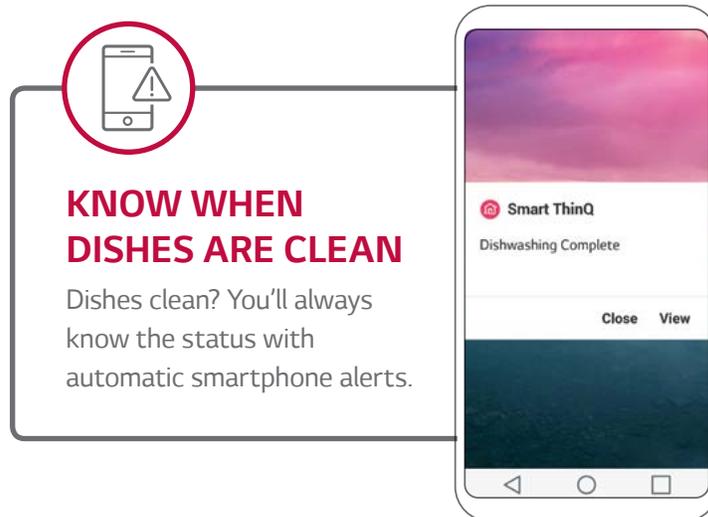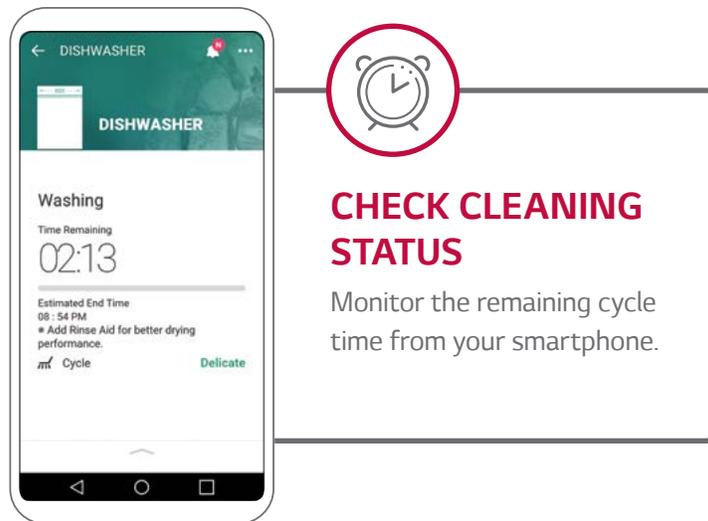

Visit [lg.com/us/discover/smartthing](https://lg.com/us/discover/smartthing) to explore additional Smart Dishwasher features and capabilities.



## DOWNLOAD THE SMARTTHINQ® APP

### 01

#### DOWNLOAD

Download the SmartThinQ® app from [Google Play](#) or the [Apple Store](#).



### 02

#### START

Launch the SmartThinQ® app and press **start**. Press **create account** and follow the on-screen instructions. Enter your account information and verify your e-mail.



## SELECT YOUR PRODUCT

### 03


#### SIGN IN

Click **agree** to accept Terms of Use. Press **sign in** and enter your e-mail ID and password.

### 04

#### SELECT

Tap on the **“+”** at the top of the screen to register your product. **Select** Dishwasher from the menu.

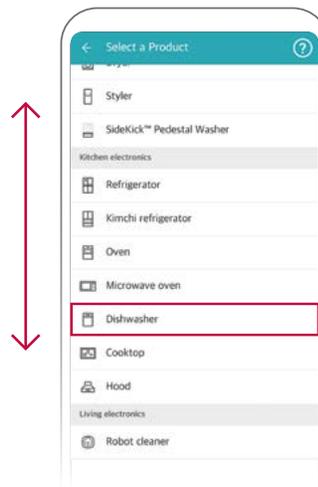




# CONNECT YOUR PRODUCT

## 05 (ANDROID)


### CONNECT PRODUCT & WI-FI

Connect SmartThinQ® to the LG Network by following the on-screen prompts below.

1. After selecting Dishwasher, follow the on-screen prompts to verify your appliance type.

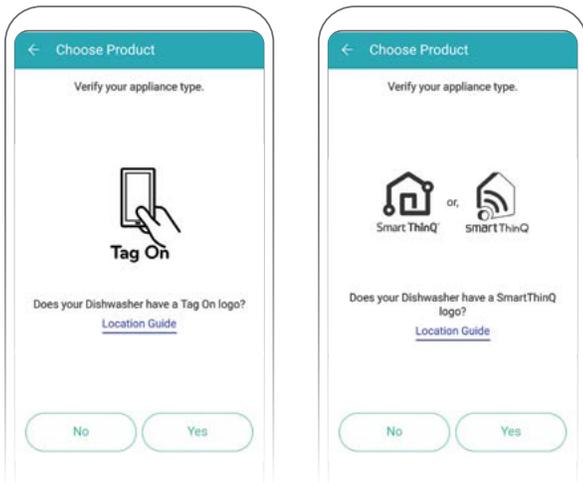


3. On the next screen, select the name of your wi-fi network, enter a valid password and press **connect**. Please note: Only a 2.4 Ghz wi-fi connection is supported.

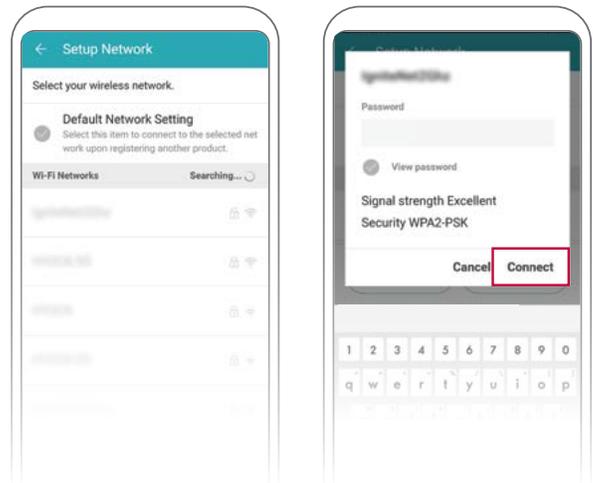

2. Once finished with appliance type verification, **press and hold** the **Delay Start** button on the Dishwasher for **3 seconds** until the wi-fi LED light starts to blink.



4. It may take up to 2 minutes to connect to your selected wi-fi network and completely register your Dishwasher. Once finished, your product will be listed on the main dashboard.

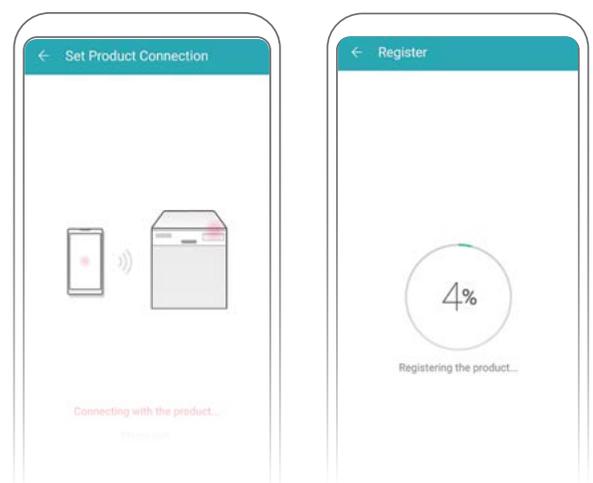




# CONNECT YOUR PRODUCT

## 05 (iOS)


### CONNECT PRODUCT & WI-FI

Connect SmartThinQ® to the LG Network by following the on-screen prompts below.

1. After selecting Dishwasher, follow the on-screen prompts to verify your appliance type.

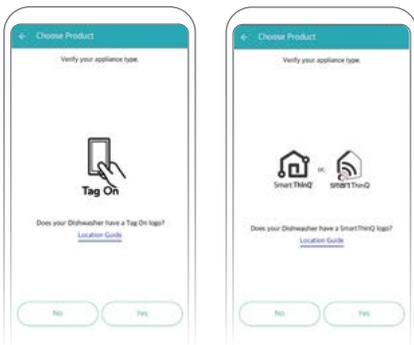



3. Return to the SmartThinQ® app and press the ">" button. On the next screen, press **verify connection**. Select the name of your wi-fi network to connect. **Please note: Only a 2.4 Ghz wi-fi connection is supported.**

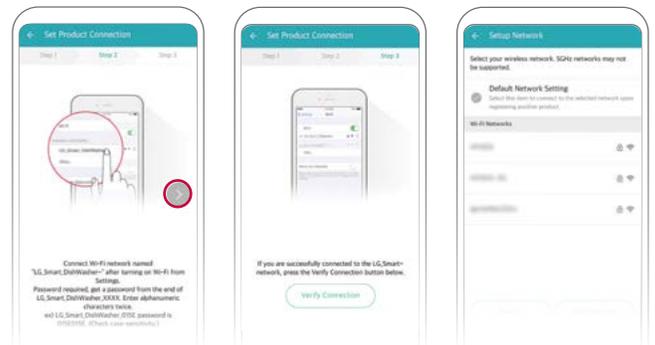

2. Once finished with appliance type verification, **press and hold the Delay Start** button on the Dishwasher for **3 seconds** until the wi-fi LED light starts to blink. Press the ">" button to continue.

On your phone, go to settings and press **Wi-Fi**. On the list of options, select **LG\_Smart\_DishWasher**. **Note: If prompted for a password, enter the last 4 digits twice from the wi-fi name.**

4. Enter the password for the wi-fi network you have chosen and press **connect**. It may take up to 1 minute to completely register your Dishwasher. Once finished, your product will be listed on the main dashboard.

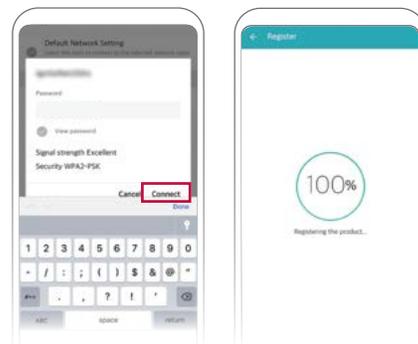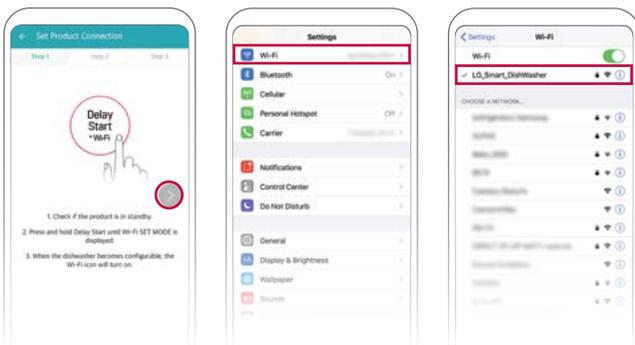



# CONNECT YOUR SMART SPEAKER




## 06 (GOOGLE HOME)


### CONNECT

Connect your Dishwasher and enable use with Google Home by following the steps below.


1. Open the Google Home app on your smartphone. Go to the menu and press **explore**. Search **LG SmartThinQ** and press **control home electronics** after searching has completed.

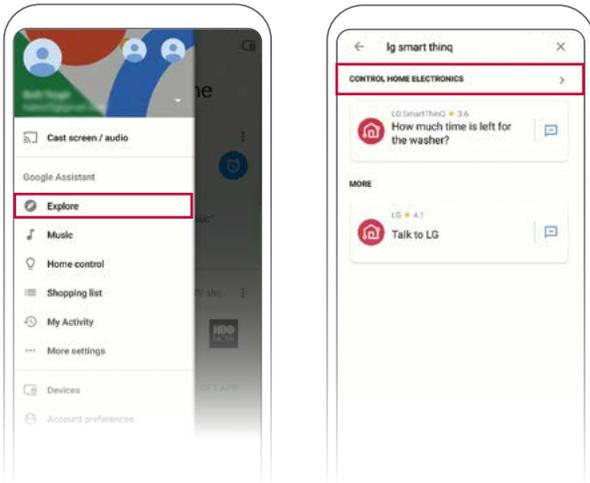

3. Select **LG SmartThinQ** from the available menu. Sign in to your LG SmartThinQ® account and then press **done** in the upper right corner. You are now connected!

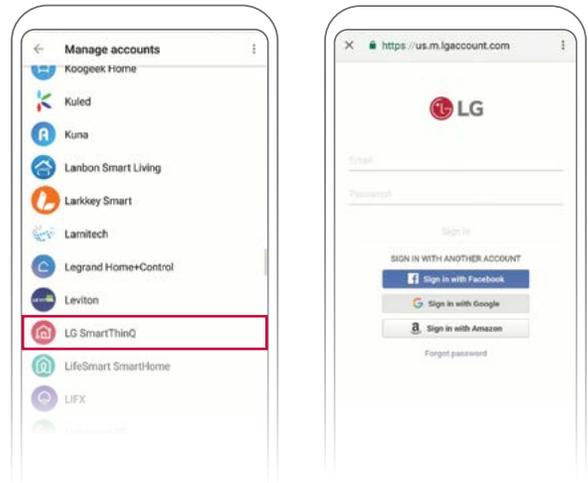

2. Press **set up** from the next screen. From the Home Control screen, press the menu in the upper corner and select **manage accounts**.

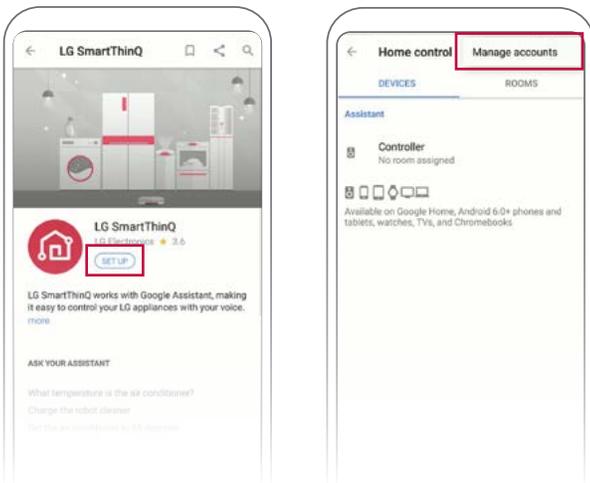

## 07

### COMMAND

Talk to your Google Home and say: **“Hey Google, talk to LG.”** The Google Home will then say: **“Welcome to LG. How can I help you?”** Once connected, try these sample commands with your Google Home. Enjoy!



“Hey Google, what is the dishwasher doing?”

“Hey Google, how much time is left on the dishwasher?”



# CONNECT YOUR SMART SPEAKER




## 06 (ALEXA)

### CONNECT

Connect your Dishwasher and enable use with Alexa by following the steps below.

1. Open the Alexa app on your smartphone. Go to the menu and press **skills**. Search **LG SmartThinQ** and press **LG SmartThinQ – Complete (Smart Appliance and TV)** after searching has completed.

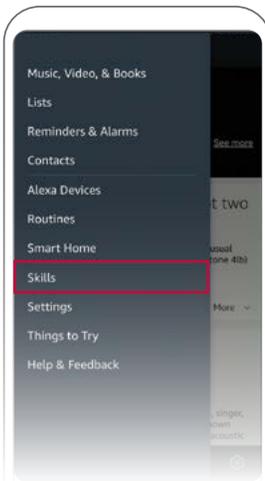

## 07

### COMMAND


Talk to Alexa and say: **“Alexa, talk to LG.”** Alexa will then say: **“Welcome to LG. How can I help you?”** Once connected, tell Alexa a command for your product. Enjoy!



“Alexa, ask LG to check status of the dishwasher.”

“Alexa, ask LG for status of the dishwasher.”

2. Press **enable** from the next screen. Sign in to your LG SmartThinQ® account. You are now connected!

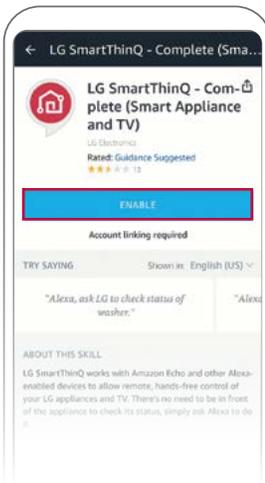



# REGISTER YOUR PRODUCT

## 08


### FOR PRIORITY SERVICE

Thank you for purchasing an LG product. We hope you're enjoying it! Now it's important to register your product—a quick, simple process with many benefits:

- Verification of Ownership
- More Efficient Warranty Service
- Access to Exclusive Information on New Products, Offers and Promotions

### Register Easily with Your Phone


- 1 Take a photo of the camera icon below
- 2 Text the photo to 77228

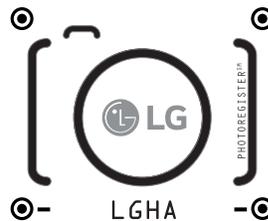

#### NEED HELP?

Visit [photoregister.com/help](http://photoregister.com/help) or text HELP to 77228.

- > Or visit us online at [www.lgusa.com/register](http://www.lgusa.com/register)

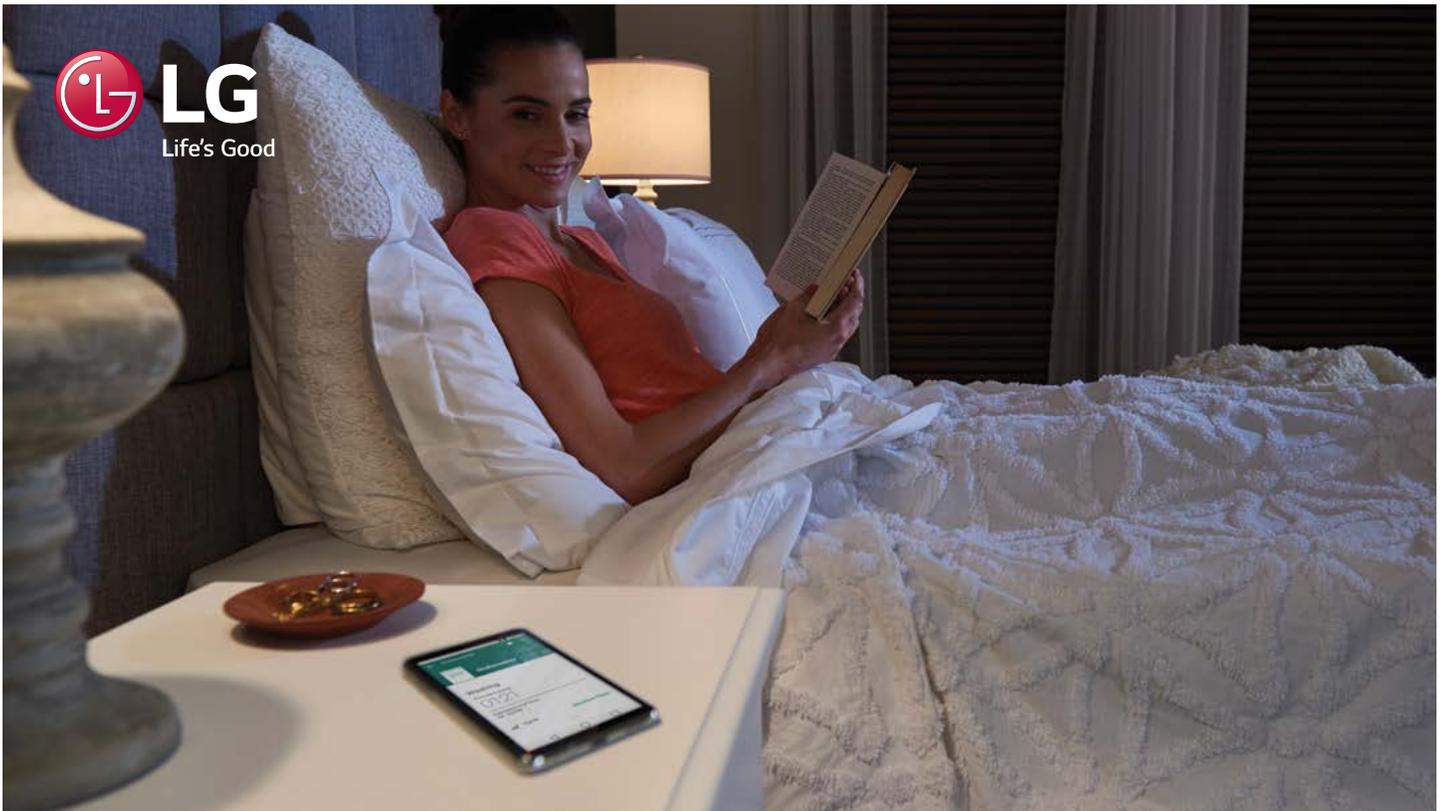

Your new investment only has a 1 year limited warranty. An LG Premium Care\* plan can keep it protected for 1-3 years after the manufacturer's warranty expires. It's simple, call or go online today!

### Call or Go Online for a Free Quote

- > Call: 1.866.618.5775
- > Visit: [www.lg.yourserviceplan.com](http://www.lg.yourserviceplan.com)