### **LG STUDIO**

# **MHES1738F**

1.7 cu. ft. Wi-Fi Enabled Over-the-Range Convection Microwave Oven with Air Fry

**Convection Technology** 

Air Fry

**Steam Cooking** 

EasyClean® Interior

WideView™ Window

PrintProof™ Finish

Wi-Fi Connect (works with ThinQ®)


**Child Lock** 

**Glass Touch Controls** 

**Pocket Handle** 

**Back Lit Lighting** 

Scan-to-Cook

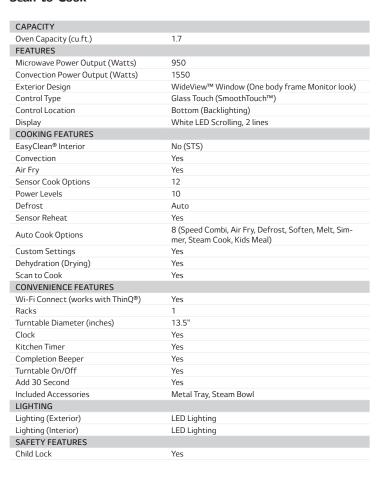





VENTING CYCTEM	
VENTING SYSTEM	
Filtration	Charcoal Filter
Exhaust Grease Filter	2
Power Levels	5
Vent Grille Type	Hidden
Vent Air Flow (CFM)	300
MATERIALS/FINISHES	
All Available Colors	PrintProof™ Stainless Steel
Printproof ™ Finish	Yes
Interior Color	Stainless steel
DIMENSIONS/CLEARANCES/WEIGHT	
Cavity (WxHxD)	21 10/16" x 9 12/16" x 14 4/16"
Exterior (WxHxD)	29 14/16" x 16 8/16" x 16 6/16"
Net Weight (lbs)	72.3 lbs
Shipping Weight (lbs)	82.2 lbs
Shipping Dimensions (WxHxD)	33 7/16" x 20 15/16" x 19 5/16"
POWER/RATINGS	
Volts	120 / 60
Amps / Watts	14A / 1650W
LIMITED WARRANTY	
Parts and Labor	2 Year
Magnetron	10 Years
UPC CODES	
MHES1738F (PrintProof™ Stainless Steel)	195174025642

# **LG**

## **MHES1738F**

1.7 cu. ft. Wi-Fi Enabled Over-the-Range Convection Microwave Oven with Air Fry

## **QUICK INSTALL & CLEARANCES**

For full installation directions/clearances please refer to the corresponding User Manual and Installation Guide.

DIMENSIONS / CLEARANCES / WEIGHT	
Cavity (WxHxD)	21 10/16" x 9 12/16" x 14 4/16"
Exterior (WxHxD)	29 14/16" x 16 8/16" x 16 6/16"
Net Weight (lbs)	72.3 lbs
Carton Dimensions (in) (W x H x D)	33 7/16" x 20 15/16" x 19 5/16"
POWER / RATINGS	
ENERGY STAR® Qualified	No
CEE Tier	-
Microwave Power Output (Watts)	950
Convection Power Output (Watts)	1550
Volts	120 / 60
Amps / Watts	14A / 1650W

#### PREPARING CABINET OPENING

#### DO NOT EXPOSE YOURSELF TO EXCESSIVE MICROWAVE ENERGY!

- DO NOT try to operate the microwave oven with the door open.
- DO NOT tamper with or defeat the safety interlocks.
- DO NOT place objects between the microwave oven front face and the door.
- DO NOT allow soil or cleaner residue to build up on the flat surfaces around the microwave oven door.
- DO NOT operate the microwave oven if it is damaged
- The microwave oven door must close properly to operate safely.

#### DO NOT USE THE MICROWAVE OVEN:

- If the door is bent.
- If the hinges or latches are broken or loose.
- If the door seals, sealing surfaces or glass is broken.

#### DO NOT ATTEMPT TO ADJUST OR REPAIR THE OVEN YOURSELF!

 It should be adjusted and repaired by a qualified technician who can check for microwave leakage after repairing the oven.

#### MAKE SURE YOU HAVE ENOUGH SPACE AND SUPPORT.

- Mount the oven against a flat, vertical wall, so that it is supported by the wall.
  The wall should be constructed of minimum 2" x 4" wood studding and 3/8" thick drywall or plaster/lath.
- $\bullet$  ATTACH AT LEAST ONE of the two lag screws supporting the oven to a vertical,  $2''\times 4''$  wall stud.
- DO NOT mount the microwave oven to an island or peninsula cabinet.
- BE SURE the upper cabinet and rear wall structures are able to support 150 lbs., plus the weight of any items you place inside the oven or upper cabinet.
- Locate the oven away from strong draft areas, such as windows, doors, and strong heating vents.
- BE SURE you have enough space. See below for minimum vertical and horizontal clearance.

