

These instructions will assist you in setting up your new fountain.

Unpack carton carefully, arranging parts safely in your working area prior to assembly.



Connect the biggest plate and the biggest pedestal tightly



Get the wire of pump through plastic pipe of biggest plate centre. Make sure the wire put into the biggest pedestal's cavity.



Connect the second big pillar to the biggest plate tightly



Connect the second big plate and the second big pillar tightly



Feed the rubber hose through the plastic tube of smallest plate centre. then connect top part and smallest plate tightly



Feed the rubber hose through the smallest pillar then connect the smallest plate and smallest pillar tightly



Feed the rubber hose through the plastic tube of small plate centre then connect the smallest pillar and small plate tightly



Feed the rubber hose through the small pillar then connect the small plate and small pillar tightly



Feed the rubber hose through the plastic tube of second big plate then connect the small pillar and the second big plate tightly.



connect the big plastic host to pump outlet. Please close the small door to the second big pillar, then fill the big plate with enough clean water to assure the pump to work properly. Plug the pump, water will start to flow in a minutes.

