

# XtremeAIR®

*The Advanced Range Hoods*

## INSTALLATION GUIDE & USER'S MANUAL

### UNDER CABINET RANGE HOOD

Pro-X Series: PX10-U30/36/42/48

PX11-U30/36/42


PX12-U30/36/42

Ultra Series: UL10-U30/36/42

UL11-U30/36/42

UL13-U30/36/42

Deluxe Series: DL09-U36/42/48

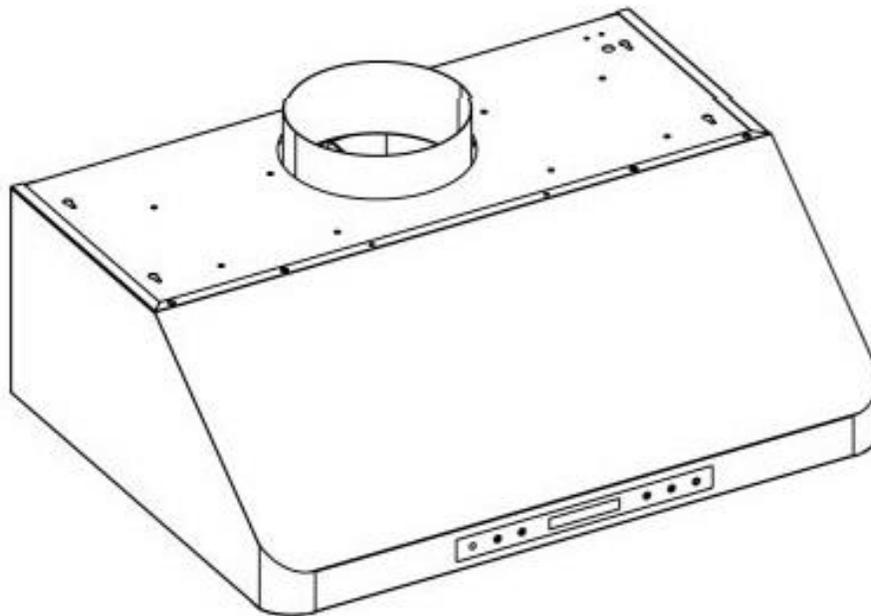

**IMPORTANT: READ AND SAVE THESE INSTRUCTIONS**

**FOR RESIDENTIAL & INDOOR USE ONLY**

## TABLE OF CONTENTS

1	IMPORTANT SAFETY INSTRUCTIONS.....	2
2	HEIGHT & CLEARANCE .....	3
3	VENTING REQUIREMENT .....	3
4	VENTING METHODS .....	3
5	ELECTRICAL REQUIREMENT .....	3
6	TOOLS YOU WILL NEED.....	3
7	PARTS SUPPLIED.....	4
8	DIMENSIONS .....	4
9	INSTALLATION.....	5-6
10	INSTALL & REMOVE BAFFLE FILTERS.....	6
11	RANGE HOOD OPERATION.....	7-9
12	SPECIFICATION.....	9
13	TROUBLE SHOOTING .....	9-10
14	USE & CARE INFORMATION .....	10
15	MAINTENANCE .....	10
16	PRODUCT WARRANTY.....	11

CAUTION

### 1. IMPORTANT SAFETY INSTRUCTIONS

**IMPORTANT NOTICE:** The Important Safety Instructions and warnings in this manual are not meant to cover all possible problems and/or situations that can occur upon installation of this unit. Use extreme caution when installing, maintaining or operating this or any other appliance. Contact the XtremeAir USA, LLC, Customer Support Team at 1.714.554.9000 or email: [support@XtremeAirUsa.com](mailto:support@XtremeAirUsa.com) with any concerns or situations that you do not understand. **The manufacturer disclaims all liability for any damage or injury caused as a result of not following instructions for installation contained in this manual.**



## DANGER

To avoid the possibility of an explosion or fire, **do not** store or use combustible, flammable or explosive vapors and liquids (such as gasoline) inside or in the vicinity of this or any other appliance. Keep all combustible items (such as aerosol cans) away from cook top burners, ovens and range hoods. Do not store flammable or explosive materials in adjacent cabinets or surrounding areas.

**Disclaimer:** *The manufacturer and/or distributor/reseller decline all responsibility in the event of failure to observe the instructions provided for installation, maintenance and suitable use of the product. The manufacturer and/or distributor/reseller shall NOT be responsible for any injury due to negligence and the warranty of the unit shall automatically be voided due to failure to observe proper safety and installation procedures. The manufacturer and/or distributor/reseller will not be held responsible for any damages to personal property or real estate or any bodily injuries whether caused directly or indirectly by the range hood.*

#### **WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:**

\*Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.

**PRODUCT:** Do not remove permanently affixed labels, warnings or plates from the product. This may void the warranty. Do not try to alter the hood.


**INSTALLATION:** The installation in this manual is intended for qualified installers, service technicians or persons with a similar qualified background. Installation and electrical wiring must be provided by qualified professionals and in accordance with all applicable codes and standards, including fire-related construction. When cutting or drilling into the wall or ceiling; do not damage electrical wiring and other utilities. It is recommended that two or more people assist with the installation. The range hood may have very sharp edges; please wear protective gloves if it is necessary to remove any parts for installing, cleaning or servicing.

**VENTING:** For kitchen range or cook top ventilating use only. **DO NOT** use units to exhaust hazardous or explosive materials and vapors. Ducted fans **MUST** always be vented to the outdoors. **DO NOT** vent exhaust into spaces between walls, crawl spaces, ceiling, attics and/or garages. Use only metal ductwork. Old duct work should be cleaned or replaced if necessary to avoid the possibility grease fires. Check all joints on ductwork to insure proper connections. All joints should be properly taped.

**ELECTRICAL:** All electrical wiring must be properly installed, insulated and grounded. **TURN POWER OFF** and un-plug cords from outlet before servicing and/or cleaning to insure your safety.

**OPERATION:** Caution is suggested when using high settings on cooking range. Keep all fan, baffle, spaces, filter, grease tunnel, oil container and grease-laden surfaces clean. Grease should not be allowed to accumulate on fan, baffle, spaces, filter, grease tunnel, and oil container. Never allow the filters to become blocked or clogged. Do not allow foreign objects such as cigarettes and/or napkins, to be absorbed into the hood. Clean ventilating fans frequently. Grease should not be allowed to accumulate on the fan or filters.

## 2. HEIGHT & CLEARANCE

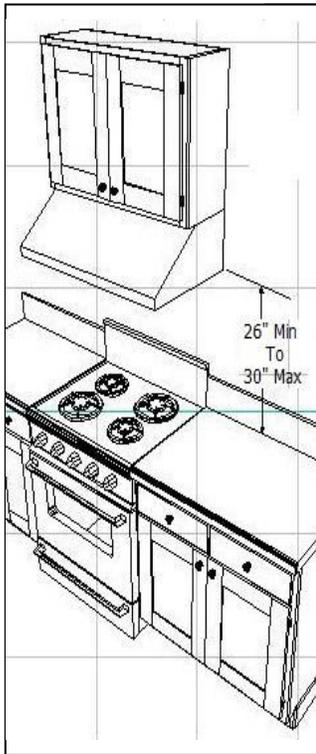


### IMPORTANT:

- NEVER exhaust air or terminate ductwork into crawl spaces, between walls, ceiling, attics or garages. **All exhaust must be ducted to the outside.**
- Hood mounted too low could result in heat and/or fire hazard. Hoods mounted too high will be hard to reach and will lose its performance and efficiency.
- **Use metal ductwork only.**
- **DO NOT use plastic ventilation.**
- **DO NOT use 4" (10.2 cm) laundry-type wall caps.**
- Fasten all connections with sheet metal screws. Tape all joints with aluminum tape.
- Use caulking to seal exterior wall or roof openings around the cap.
- The ventilation system must have a damper. If the roof or wall cap has a damper, you may opt out from usage of your range hood supplied damper (for some models only).

### For the most efficient & quiet operation:

- A distance of 26" to 30" is recommended between stove top and the bottom of range hood.
- It is recommended that the range hood be vented vertically through the roof with a minimum of a 6" or larger vent work.
- ALWAYS, when possible, reduce the number of transitions and turns. If a long duct run is required, increase duct size from 6" to 7" or 8". If a reducer is used, install a long reducer instead of a pancake reducer. Reducing duct size will restrict/decrease airflow.
- The size of the vent should be uniform.
- **Use no more than three 90° elbows.**
- Make sure there is a minimum of 24" (61 cm) of straight vent between the elbows if more than one elbow is used.

## 4. VENTING METHODS

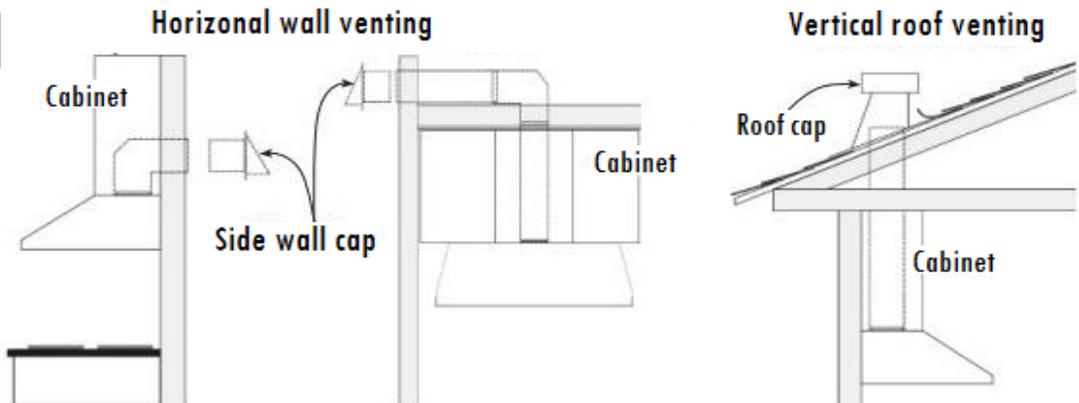

## 5. ELECTRICAL REQUIREMENTS

**IMPORTANT:** Observe all governing building codes and city ordinances.

A 120 volt, 60 Hz., AC, 15-amp outlet is needed (fused electrical circuit is required)

**It is the customer's responsibility:** To contact a qualified electrical installer, to assure that the electrical installation is adequate and in conformance with National Electrical Code, ANSI/ NFPA 70 — latest edition\*, or CSA Standards C22. 1-94, Canadian Electrical Code, Part 1 and C22. 2 No. 0-M91 - latest edition and all local codes and ordinances.

## 6. TOOLS YOU WILL NEED



Level



Powered Screwdriver



Phillips Screwdriver



Tape Measure



Aluminum Tape



Wall/Keyhole Saw



Pencil or Marker



Stud finder



Hex bit extension

### OPTIONAL




CABINET JACK

CAR JACK




(2) 2" x 4" x 24" (1) 24" x 36"/42" x 3/4" plywood  
Note: about 6" wider than stove is ok


## 7. PARTS SUPPLIED

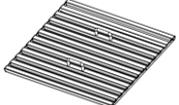PART SKETCH	CODE	DESCRIPTION	PX10	PX11	PX12	UL10	UL11	UL13	DL09
	M B	MANUAL BOOK	1	1	1	1	1	1	1
	O T	OIL TUNNEL	1	1	1	1	1	1	1
	S 1	1 3/4" SCREW	2	2	2	2	2	2	4
	S 2	1 1/4" SCREW	4	4	4	4	4	4	4
	B F	BAFLE FILTERS	3	3	3	3	3	3	3 (36" / 42") 4 (48")
	R C	REMOTE CONTROL	1	N/A	1	N/A	N/A	N/A	N/A


## 8. HOOD DIMENSIONS

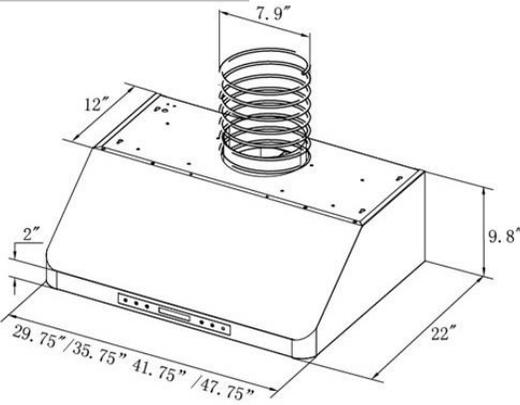


PX10 / UL10

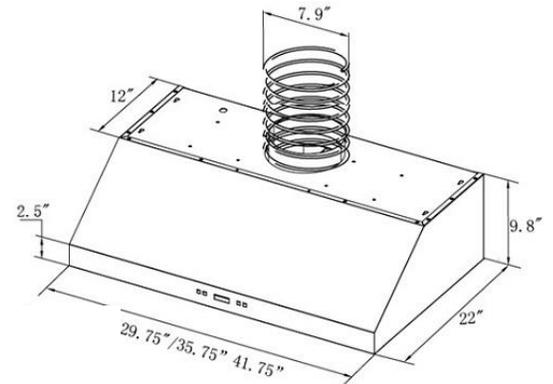


PX11 / UL11

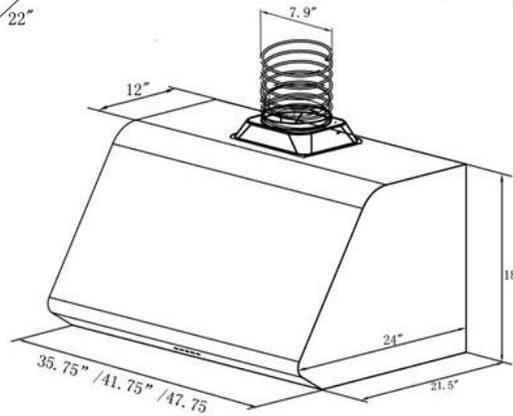

DL09

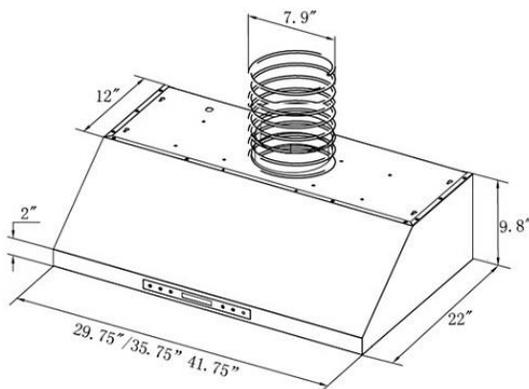

PX12

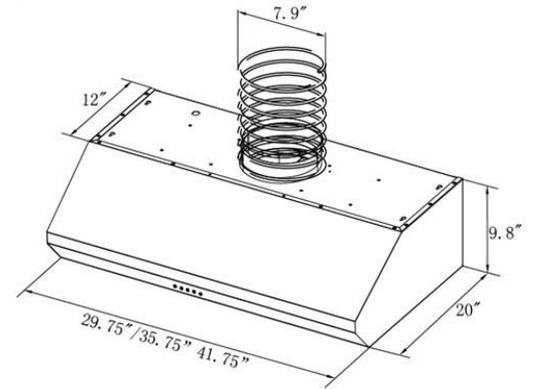

UL13


## 9. INSTALLATION

**NOTE: DO NOT TRY TO REMOVE BLOWER OR ITS HOUSING, YOU WON'T BE ABLE TO PUT IT BACK IN. MOREOVER, THE WARRANTY WILL BE VOIDED.**


### STEP 1: PROTECT THE COOK TOP

- Put a thick, protective covering over counter top, cook top or range to protect from damage or dirt.

### STEP 2: CREATE WORK STATION (OPTIONAL)

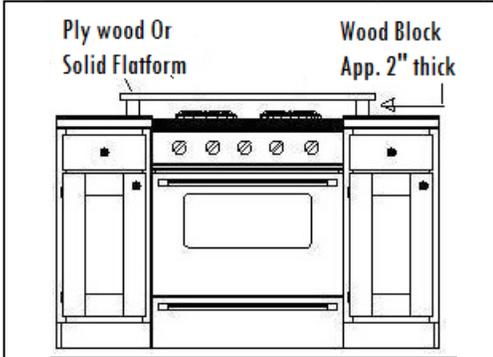


Have 2 pieces of wood about 2" x 4" x 20" on both sides of stove & a plywood on top of them to protect cook top or stove from damage or dirt. This plywood will also create a comfortable work station for easy to installing.

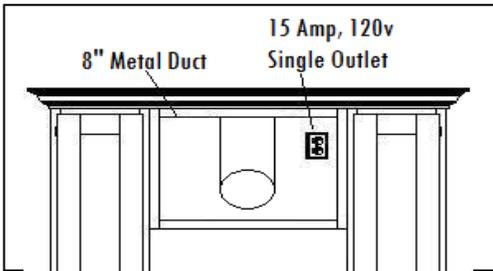


### STEP 3: PREPARE DUCTWORK & SINGLE OUTLET

- Make sure you have a 15amp, 120V, 60Hz, single outlet on the left or right of the duct pipe (usually is on 1/4 of cabinet width).
- Make sure duct pipe is ready to hook up to the range hood before beginning installation (8" diameter duct, and roof or wall cap, depending on where you will be venting your hood).

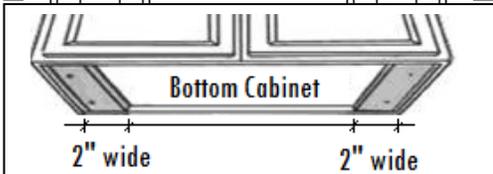



### STEP 4: ATTACH 2-INCH WIDE WOOD FILLER STRIPS

- For installing under the cabinet with recessed bottom, attach 2-inch wide wood filler strips (not provided) to each side.

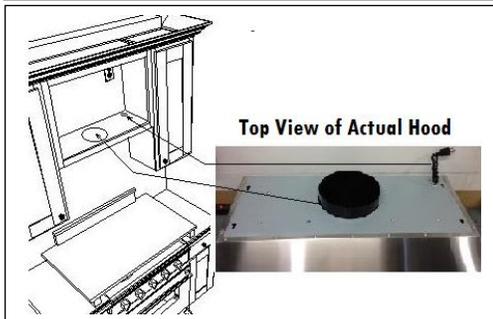

### STEP 5: CREATE ACCESS

- Create or cut access opening for electrical wire and hood exhaust under the cabinet

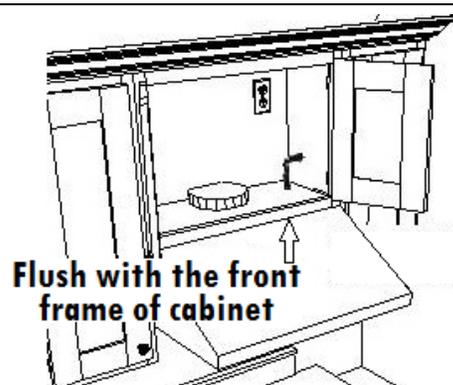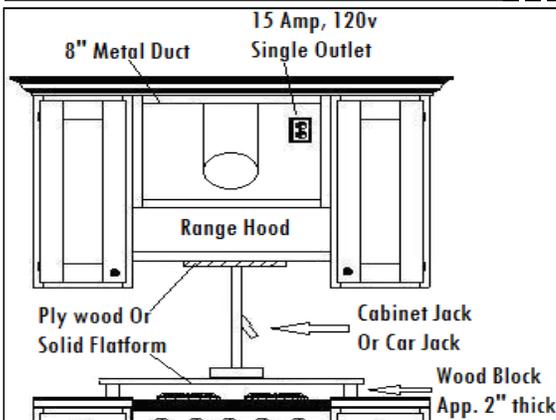

### STEP 6: ATTACH THE HOOD


Lift the hood up and have it placed below the cabinet. Make sure to center the hood beneath the cabinet and flush with the front of the cabinet.

**TIP (optional):** since the hood is heavy, a cabinet or a car jack is highly recommended.



**STEP 7A: SECURE THE HOOD TO BOTTOM CABINET**

**D09 model: please skip this step if you don't have cabinet above the hood.**

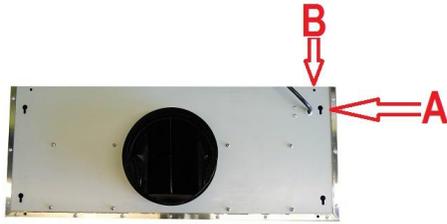

From inside of the hood, use "hex bit extension" place 1 ¼" provided screw into each key hole (A) OR predrilled-holes (B) and secure to cabinet bottom. There are 8 holes (4 keyholes & 4 predrilled-holes) available. You can use either key or predrilled-hole as long as a minimum of 1 screw at each corner of hood body.




**STEP 7B: SECURE THE HOOD TO WALL**

- Use stud finder to find the stud and use 1/8" drill bit to drill though the back of the hood.
- Secure the hood by using 1 7/8" provided screws though the back of the hood to the studs.



**STEP 8: CONNECT DUCTWORK**


- Connect the exhaust on the hood to the ductwork. Wrap with aluminum tape to make all joints secure and tight.

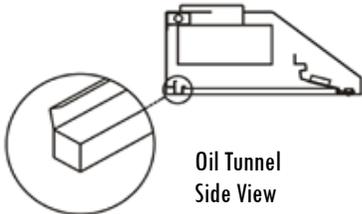

Oil Tunnel Side View

**STEP 9: INSTALL OIL TUNNEL OR OIL CONTAINER (NOT AVAILABLE FOR ALL MODELS)**

- Drop oil tunnel into recess support near rear of hood. Refer to the left picture

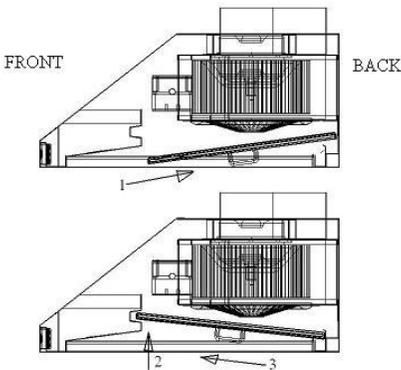

Baffle Installation Side View

**Step 10: Install baffle filters**


- Install baffle filters; refer to picture at left for the following three steps:
  1. Angle baffle filter toward back of hood.
  2. Lift a baffle filter up above horizontal level.
  3. Slide forward into slot behind the front of hood.
  4. Slide the installed baffle filter to either left or right until it stops.
  5. Repeat step 1 to 4 to install the next ones, make sure you slide to opposite direction from the previous installed filter.
- To remove the baffle, please reverse the process.  
NOTE: The middle filter has to be installed last where it should be taken out first when you want to remove other filters.

# 11. RANGE HOOD OPERATION


## IMPORTANT: BEFORE YOU BEGIN

1. For **TOUCH SENSITIVE CONTROLS**, please **DO NOT PRESS**. A light touch and hold on the required button for a matter of a (1) one second is all that is needed.
2. **TOUCH THE ENTIRE BUTTON:** See illustration on right:

For best results, Start the range hood before cooking and allow it to operate several minutes after the cooking is completed to clear all smoke and odors from the kitchen.

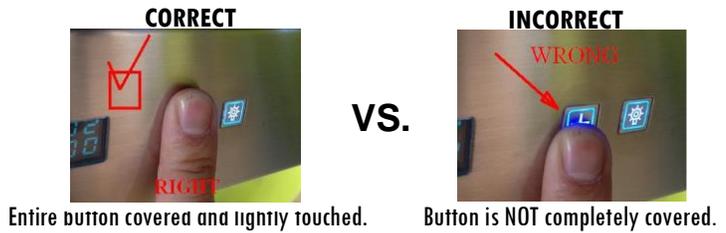

## 1. FOR PX10 & PX12 Model: TYPE 1: TOUCH SCREEN CONTROL PANEL

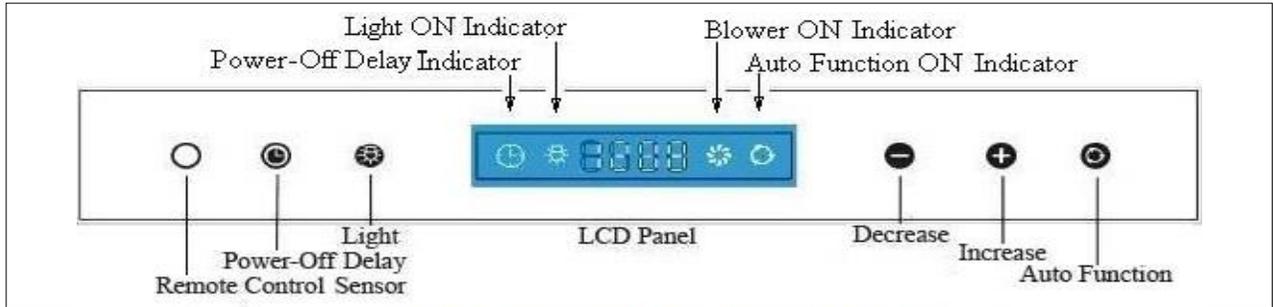

TYPE 1: TOUCH SCREEN CONTROL

### Importance

1. **AUTO FUNCTION ACTIVE:** Once “Auto Function” is on or touched, all other functions will be **DE-ACTIVATED** and will **NOT** be working.
2. **2 ½ HOUR AUTOMATIC SHUT OFF:** This range hood will be shut off for every approx. 2 ½ hours. You can re-start operation usual after it was shut off.
3. **SCREEN TURN OFF:** This range hood is equipped with remote control and smoke sensor that will self-calibrate within 5 seconds when the range hood is first electrically activated. Self-calibration will be set when the range hood beeps. LCD panel **WILL TURN OFF** automatically after a period of inactivity and every time when **plugged into electrical outlet**.

### A. ACTIVATING NORMAL BLOWER FUNCTION:



While the range hood is off,  
 Touch (+) to start from lowest speed, F1  
 Touch (-) to start from Highest speed, F4  
 Touch (+) or (-) again to change the blower speed as indicated in LCD panel

00	= blower off
F1	= quiet speed
F2	= low speed
F3	= medium speed
F4	= high speed

### B. Activating Light Function:




Touch *Light* button to turn the lights on or off.

### C. Activating Power-Off Delay Function:



1. While the range hood is on and the blower is running in normal mode, touch *Power-Off Delay* button to activate delay off timer.
2. Adjust to desired period of delay of timer by touching (-) or (+) button quickly (1-15 minutes). Timer begins to countdown immediately, when it reaches 0, the blower will shut off.
3. Display screen will show flashing clock if timer is working.

### D. Activating Smoke Detector Function:

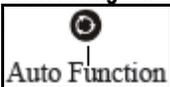

While the machine is off, touch *Auto Function* button to activate the smoke detector auto function mode.  
 NOTE: this function will only worked when there's a lot of smoke. Once this button is touched, all other buttons are not active.

### E. Changing the clock (only available in some models)

While the blower is off:

1. Touch power sign once. The hour indicator will be flashing.
2. Use (+) or (-) to adjust to the desired hour.
3. Touch power sign again for the “minutes”. Indicator will be flashing.
4. Use (+) or (-) to adjust to desired minutes.
5. Touch power sign again to clear the screen. Touch light button to validate. To check time, touch light button.


NOTE: The clock display is only available for product manufactured after October 2013.

## F. Remote Control Sensor:



1. Remote control sensor receives infrared (IR) signal from the remote control. The maximum distance for IR data transmission is 10 feet and requires direct line of sight. The transmission distance may vary depending on temperature and remote control battery condition.
2. Light settings are independent from other settings (including power-off delay) and lights have to be manually turned on or off.
3. The system saves user configurations, settings such as light, timer and blower (motor) speed will remain the same the next time it is turned on.

## 2. FOR PX11 Model: TYPE 2: BUTTON TOUCH CONTROL PANEL

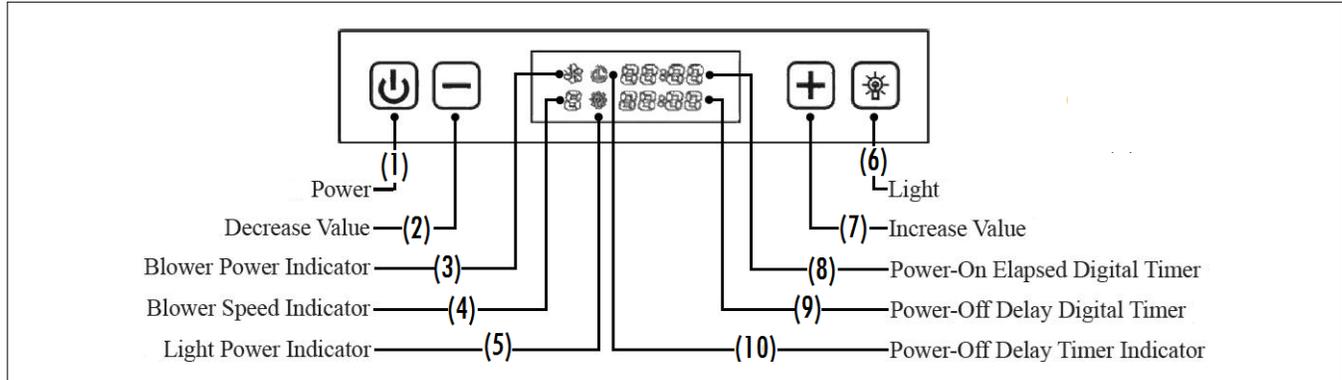

### Importance Notice:

1. **2 1/2 HOUR AUTOMATIC SHUT OFF:** this range hood will be shut off for every approx. 2 1/2 hour. You can re-start operation as usual after it was shut off.
2. **30 HOUR REMINDER:** after 30 hours of use, the timer (8) will be flashing. To clear it, please refer to “G-To Clear Cleaning Reminder” on page 7.

### A. ACTIVATING BLOWER FUNCTION:

- Option 1: Touch and hold down (+) for 1-2 seconds.
  - Option 2: Touch and hold down power sign (1) for 1-2 seconds. (The blower will be running at the same speed as last used).
- Note: The system saves user configurations, settings such as timer and blower (motor) speed will remain the same the next time it is turned on.*

### B. ADJUSTING BLOWER SPEED:

- Touch and hold down (+) for increase.
- Touch and hold down (-) for decrease.

### C. TURNING OFF THE BLOWER:

- Touch and hold down power sign (1) for 1-2 seconds.

### D. TO TURN THE LIGHT ON/OFF:

- Touch Light button (6) once to turn on the lights, and once again to turn off the lights.

### E. ADJUSTING THE TIMER FUNCTION:

- While the blower (motor) is not running, touch and hold Decrease Value button (2) 1-2 seconds or until it's flashing to enter timer mode.
- Adjust to desired period of delay off timer by touching Increase Value or Decrease Value button (**minimum 1 minute to maximum 15 minutes**). **This setting will be saved immediately.**


### F. ACTIVATING THE TIMER FUNCTION:

- While the blower (motor) is running, touch and hold “Power” button (1) for 1-2 seconds til you see “BLUE L” to activate delay off timer. *Power-Off Delay Timer Indicator* (10) will light up and *Power-Off Delay Digital Timer* (9) will begin to countdown. When it reaches zero, the blower (motor) will shut down.

### G. TO CLEAR CLEANING REMINDER:

- When blower (motor) starts to rotate, cumulative running time will be shown in *Power-On Elapsed Digital Timer* (8). This timer icon flashes when 30 hours is up and reminds user to clean the baffle filters.
- After cleaning the filters and when the motor is not in use, touch and hold (+) *Increase Value* button (7) over 3 seconds to reset the timer. Please note that turning off the system will not reset the *Power-On Elapsed Digital Timer* (8).

### 3. FOR ALL ULTRA SERIES: TYPE 3: MECHANICAL BUTTON CONTROL

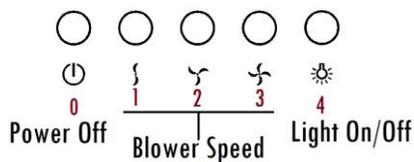

#### A. Activating Blower Function:

- Press your designed speed (1,2,3)


#### B. Turn off power:

- While the blower (motor) is running, press button (0) to turn off the motors.

#### C. To turn the light ON/OFF

- While the light is off, press button (4) once to turn on the light.
- Press button (4) again to turn the light off

### 4. FOR DL09 Model: TYPE 4: ELECTRONIC BUTTON CONTROL

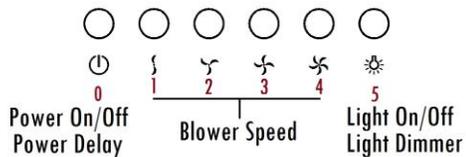

#### A. Activating Blower Function:

- Press (0) once (flashing)
- Press your designed speed (1,2,3,4)

#### B. Active delay power shut off / turn off power:

- While the blower (motor) is running, press (0) once to active 3 min power delay shut off
- Press (0) again to turn off blower and power.

#### C. To turn the light ON/OFF & Dimmer

- While the light is off, press (5) once to turn on the light
- Press (5) again to turn dimmer down to lower setting
- Press (5) again to turn the light off.

## 12. SPECIFICATION

	PRO-X Series	UL Series	DL09-U36/42	DL09-U48
Body Design/Material	Seamless Stainless Steel, Satin Finish. 1.0 mm Non-Magnetic 201 S.S			
Power Rating	120V/60Hz (USA & Canada standard)			
General Input Power	184W	184W	156W	308W
Motor Input Power	90W x 2	90W x 2	150Wx1	150Wx2
Ampere	1.7A	1.7A	1.3A	2.6A
Control Type	Touch Screen / Touch Button (PX11)	Mechanical Button	Electronic Button	
Levels Of Speed Control	4 Levels	3 Levels	4 Levels	4 Levels
Noise Level	1.5-6.5 sones or 33-55 dB			3.0 – 7.0 sones or 41 – 56 dB
Number Of Motors	2 Motors	2 Motors	1 Motor	2 Motors
Motor Type	Single Chamber Ultra Quiet			
Fan Type	Centrifugal Squirrel Cage Blower			
Filtration Type	Heavy Duty Stainless Steel Baffle Filter			
Illumination	LED light, 2W Maximum			
Venting Size	Top, 8 inches Round			
Note	Specification subject to change without notice, contact your local reseller for details.			

## 13. TROUBLESHOOTING

### 1. If the range hood or lights does not operate after installation:

- Check if the range hood has been plugged in. Make sure that all power has been turned back ON.
- Swap out light assembly to working ones to determine whether it is caused by defective bulbs.



- Make sure the range hood is unplugged or turn OFF breaker.
- Pop out the light by pressing behind the light fixture.
- Install new light bulb.
- Put the light set back by pressing it in.
- Plug in and range hood to test for operation.

### 2. The range hood vibrates when the blower is on:

- The range hood might not have been secured properly to the cabinet or wall.
- Check if the blower wheel is damaged.

### 3. The blower or fan seems weak:

- Check that the duct sized used is at least 6". Range hood WILL NOT function efficiently with insufficient duct size & loosely secured.
  - Check if duct is clogged or if damper unit (half-circular flapper) is not installed correctly or opening properly. A tight mesh on a side wall cap unit might also cause restriction to the air flow.
4. **The lights work but the blower is not spinning at all, is stuck or is rattling.**
    - The blower might be jammed or scraping the bottom due to shipping damage. Please contact us immediately.
  5. **The hood is not venting out properly:**
    - Make sure the distance between the stove top and the bottom of the hood is within 26" and 30" in distance.
    - Reduce the number of elbows and length of ductwork. Check if all joints are properly connected, sealed, and taped.
    - Make sure the power is on high speed for heavy cooking.
  6. **The hood is noisier than normal**
    - The damper was not opened.
    - The duct is not secure and causes vibration.
    - The smaller duct size than required is being used.
  7. **Control panel is not active**
    - Check to make sure the auto function is not on.

## 14. USE & CARE INFORMATION

### Operations:

- Read and understand all instructions and warnings in this manual before operating the appliance. Save these instructions for future reference.
- Always leave safety grills and filters in place. Without these components, operating blowers could catch on to hair, fingers and loose clothing.
- NEVER dispose cigarette ashes, ignitable substances, or any foreign objects into blowers.
- NEVER leave cooking unattended. When frying, oil in the pan can easily overheat and catch fire. The risk of self combustion is higher when the oil has been used several times.
- NEVER cook on "open" flames under the range hood. Check deep-fryers during use: Superheated oil may be flammable.

### Cleaning:

- The saturation of greasy residue in the blower and filters may cause increased inflammability. Keep unit clean and free of grease and residue build-up at all times to prevent possible fires.
- **FILTERS MUST BE CLEANED PERIODICALLY AND FREE FROM ACCUMULATION OF COOKING RESIDUE.**
- DO NOT operate blowers when filters are removed. Never disassemble parts to clean without proper instructions. Disassembly is recommended to be performed by qualified personnel only. Read and understand all instructions and warnings in this manual before proceeding.

## 15. MAINTENANCE

**SAFETY WARNING:** Never put your hand into area housing the fan while the fan is operating! For optimal operation, clean range hood and all baffle/spacer /filter/grease tunnel/oil container regularly. Regular care will help preserve the appearance of the range hood.

### Cleaning Exterior surfaces:

- Clean periodically with stainless steel cleaner or hot soapy water and clean cotton cloth. **Do not use corrosive or abrasive detergent (e.g. Comet Power Scrub®, EZ-Off® oven cleaner), or steel wool/scoring pads, which will scratch and damage the stainless steel surface.** For heavier soil use liquid degrease such as "Formula 409®" or "Fantastic®" brand cleaner.
- If hood looks splotchy (stainless steel hood), use a stainless steel cleaner to clean the surface of the hood. Avoid getting cleaning solution on or into the control panel. Follow directions of the stainless steel cleaner. **CAUTION:** Do not leave on too long as this may cause damage to hood finish. Use soft towel to wipe off the cleaning solution, gently rub off any stubborn spots. Use dry soft towel to dry the hood.
- After cleaning, you may use non abrasive stainless steel polish such as 3M® or ZEP®, to polish and buff out the stainless luster and grain. Always scrub lightly, with clean cotton cloth, and with the grain.
- **DO NOT** allow deposits to accumulate or remain on the hood.
- **DO NOT** use ordinary steel wool or steel brushes. Small bits of steel may adhere to the surface and cause rusting.
- **DO NOT** allow salt solutions, disinfectants, bleaches, or cleaning compounds to remain in contact with stainless steel for extended periods. Many of these compounds contain chemicals, which may be harmful. Rinse with water after exposure and wipe dry with a clean cloth.

### Cleaning Grease Filter / Stainless Steel Filter less Grill:

**IMPORTANT:** Drain oil from oil containers before oil and residue overflow!

- The metal filters fitted by the factory are intended to filter out residue and grease from cooking. It needs not be replaced on a regular basis but are required to be kept clean.
- Filters should be cleaned after every 30 hours of use. Remove and clean by hand or dishwasher. Use proper degreasing detergent for stainless steel and leave to soak if heavily soiled. Dry filters and re-install before using hood.

## 16. LIMITED WARRANTY

### XtremeAIR USA HOOD TEN (10) YEARS MOTOR LIMITED WARRANTY

XtremeAir USA Range Hood (hereunder called "The Company") warrants its product against defects in material or workmanship for the time periods and as set forth below.

**Parts:** For a period of two (2) years from the original date of purchase of product ("Parts Warranty"), The Company will supply new or equivalent replacement parts in exchange for parts determined to be defective. The motor warranty is extended for an additional eight (8) years to accumulate of ten (10) years total (motor only).

**Labor:** For a period of one (1) year from the original date of purchase of the product ("Labor Warranty"), if the product is determined to be defective, The Company will repair or replace the product, at its option, at no charge. After the Labor Warranty period, labor charges are applicable.

**Warranty Performance:** In the event of any malfunction or defect covered under the terms of this warranty, immediately contact the company. Written notice of any malfunction or defect must be given within 7 days of the time of the discovery of the malfunction and must be accompanied by the original consumer purchase receipt which shows the date of purchase unless product has been registered

Please complete the [Product Registration Card](#) and return it with the dated bill of sale or other evidence of the original proof of purchase within 30 days from purchase of the product to address shown below to protect your investment.

To obtain warranty service, the products must be delivered, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the company authorized service facility specified as below. The repaired unit will be returned at the company expense.

309 N. Harbor Blvd., Santa Ana, CA 92703, USA

For specific instructions on how to obtain warranty service for your product, Visit XtremeAir USA's Web Site:  
[www.XtremeAirUsa.com/Warranty/Service](http://www.XtremeAirUsa.com/Warranty/Service)

Or call XtremeAir USA Customer Information Service Center: 1(714)554-9000

**Repair / Replacement Warranty:** This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period. Any part or product replaced under this Limited Warranty will become the property of The Company.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use or non-transferable; it does not cover product issues caused by any other reason, including but not limited to product issues due to commercial use, acts of God, misuse, defects resulting from damages sustained during shipping, unauthorized repair, modification of or to any part of the XtremeAir product.

This Limited Warranty does not cover XtremeAir products sold AS IS or WITH ALL FAULTS, light bulbs, remote control, normal maintenance and service, costs of removal, installation. This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product.

#### DISCLAIMERS

XtremeAir USA LLC shall not be responsible for loss of use or other incidental consequential costs, expenses or damages which may occur. Under no circumstances shall XtremeAir USA LLC or any of its representatives be held liable for injury to any person or damage to any property, however arising. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

All rights reserved to XtremeAir USA LLC

XtremeAIR Warranty 6.1.13