 




# Upright Freezer

## Model - FR430

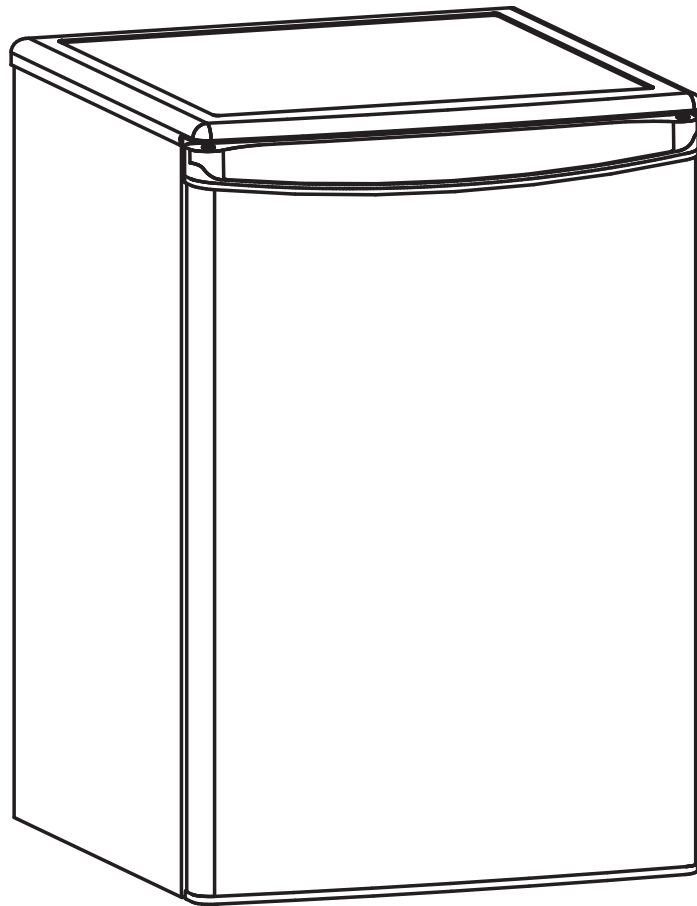

## OWNER'S MANUAL

---

Please read the instructions carefully and keep for future reference. Information may be updated from time to time so please refer to the manual online for the latest version of the manual.

## Warranty

---

Conserv Appliances undertakes to the consumer-owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or materials under normal personal, family or household use, in the USA and Canada, for a period of one year from the date of original purchase. For commercial use, the product is warranted for a period of 90 days. During this period, we will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been installed and operated in accordance with the written instructions with the appliance. Ready access to the appliance, for service, is the responsibility of the consumer-owner. Service would be provided from Monday to Friday between normal business hours.

## Exclusions

---

In no event shall Conserv Appliances be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, misuse, incorrect voltage or acts of God. This warranty does not cover service calls which do not involve defective workmanship or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer-owner.

**Specifically, the following work is not covered under warranty and does not constitute warranty work**

**Installation – e.g. Insufficient spacing around the appliance**

**Maintenance – e.g. Cleaning the appliance using solvents**

**Mishandling – e.g. Breakage of door or shelves**

Most work is covered. The defining factor is, has the machine malfunctioned (Conserv Appliances is responsible) or has the customer omitted or done something to cause the machine to malfunction (customer is responsible). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you.

## WARRANTY SERVICE

---

This warranty is given by:

**Conserv Appliances**

10222 Georgibelle Drive, Suite 200

Houston, TX 77043-5249

For Service:

Call 1-800-776-3538

Email: [Service@ApplianceDesk.com](mailto:Service@ApplianceDesk.com)

Web: [www.ApplianceDesk.com](http://www.ApplianceDesk.com)

Business hours: 9:00 am - 5:00 pm weekdays

You can register your Warranty by either of the following methods:

1. Scan the QR Code

### QR Code



1. Open Smart Phone
2. Open Camera
3. Scan QR Code
4. Click the Link

2. Online at: [ApplianceDesk.com/Warranty](http://ApplianceDesk.com/Warranty)

## GENERAL

---

Since it is the responsibility of the consumer-owner to establish the warranty period by verifying the original purchase date, Conserv Appliances recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

*All rights reserved. Manual subject to change without notice.*

## Safety

---

### **Please always follow the safety precautions listed below:**

- Do not put acid or flammable or volatile materials inside the appliance.
- Do not puncture or damage refrigerant tubing.
- Unplug the unit immediately if you find any abnormal smell or smoke, and contact Customer Service.
- Use a dedicated power outlet and a three prong power socket, that is properly grounded.
- Do not use extension cords or ungrounded two prong adapters.
- Do not use the power cord or plug if it is damaged.
- When removing the power plug, do not pull on the cord. Grasp the plug firmly and pull it out from the socket.
- Do not touch the cold surfaces, particularly when hands are damp or wet.
- Unplug the unit first when doing maintenance or repair.
- Keep ventilation openings free of obstructions.
- This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

### **Safe Disposal**

- Before discarding the appliance, remove the door but leave shelves in place in order to prevent risk of child entrapment.
- Dispose off this appliance in accordance with local regulations.

California Proposition 65

 
WARNING: This product contains chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

## Placement

---

**This unit is designed to be freestanding and not built-in.**

- When moving the appliance, ensure that it is not tilted more than 45 degrees.
- The unit should be placed in a ventilated and dry environment.
- Do not put the unit in direct sunlight, and keep it as far as possible from heat sources.
- Don't put the unit in a cold area.
- There should be 5" (12.7cm) space around the top, sides and back of the unit as shown, to allow proper ventilation.
- The unit should be placed on flat and stable ground. Keep the unit level by adjusting the 2 front leg levelers.

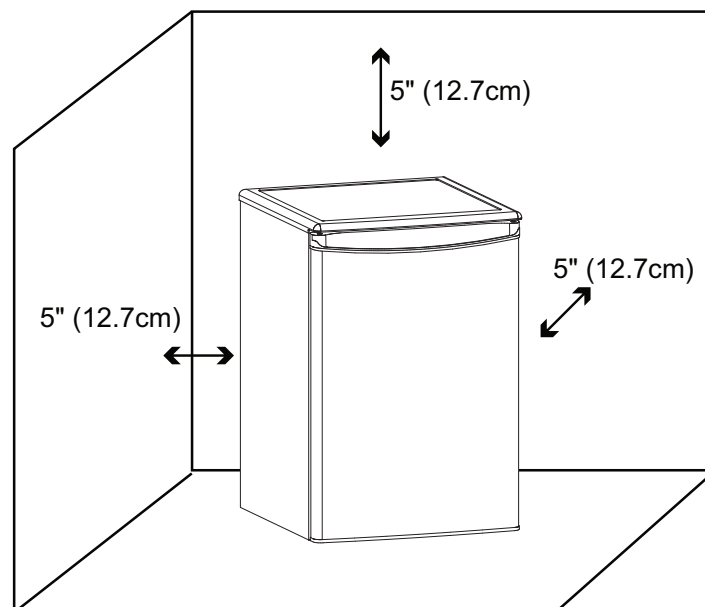


## Before Use

- Before initially plugging in the appliance, keep the unit standing upright and stable for 24 hours. The refrigerator should be on for up to 4 hours and adequately cold, before putting food in it.
- Clean the outside and inside of your appliance before placing food in it.

## Operation

This appliance is intended for household use.

 The temperature control dial is located inside and at the top of the appliance.

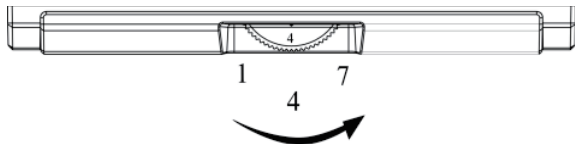

Control Dial	Temperature
1	6.8°F (-14°C)
2	3.2°F (-16°C)
3	-0.4°F (-18°C)
4	-4°F (-20°C)
5	-7.6°F (-22°C)
6	-11.2°F (-24°C)
7	-14.8°F (-26°C)

The temperature range is + and - 2 degrees.

Set the temperature by turning the dial, which has numbers ranging from 0 -7. 0 is the off position, where there is no cooling. 1 is the least cool and 7 is the coldest. The table above indicates the number on the control dial and the corresponding temperature.

The ideal temperature for freezing is 0°F (-18°C). It is recommended to set the control dial at 3 for optimal performance.

Note: In case you unplug your appliance or experience an electrical outage, allow 5 minutes before plugging it back in or restarting the appliance.

### Defrosting

- For most efficient operation and minimum energy consumption, defrost whenever the frost becomes 1/4" thick. Never use a sharp or metallic instrument to remove the frost, as it may damage the cooling coils. (A punctured coil will void the warranty). Use only a plastic scraper. Do not use boiling water as it may damage the unit.
- Remove frozen food from the freezer and place it in a cooler to protect the food.
- Turn the temperature control dial to 0 and unplug the unit. Defrosting usually takes a few hours. To defrost faster keep the freezer door open.
- Place a shallow defrost pan (not included) in front of the freezer and gently slide the defrost drain outward. Water that has accumulated at the bottom of the freezer during defrosting will drain into the pan.
- Monitor the defrost pan to avoid overflow.
- When defrosting is complete, wipe the interior of the freezer with a soft cloth. Plug power cord back into the electrical outlet.
- Reset the temperature control to the desired setting.
- Return the food into the freezer.

## Maintenance

---

### Cleaning

- Remove all items and unplug the unit before cleaning.
- Clean inside, behind and around the appliance regularly, using water and mild detergent, and a damp cloth (not wet).
- Never use boiling water, harsh cleaning chemicals or abrasive materials.
- Dry all surfaces thoroughly.

### Extended Absence

- If the unit will be switched off for a long time, remove all items, turn off the appliance and clean the unit thoroughly.
- Leave the door open and place the unit in a well ventilated area to avoid build up of odor.

### The following phenomenon is normal

- A sound like water running is caused by refrigerant flowing inside the system.
- While the unit runs, heat is emitted from both sides of the cabinet.
- When the environment is too humid, the edges around door may have a little moisture. Simply wipe it with a dry cloth.

## Technical Specifications

Model	FR 430
Capacity	4.3 cu.ft.
Voltage	115 V / 60 Hz
Current	1.1A
Temperature Range	10.4 °F to -11.2 °F
Refrigerant	R600a / 1.41oz
Net Weight	83.4 lbs
Product Dimensions (HxWxD)	36.14" x 23.94" x 24.88"

## Troubleshooting

---

**Before calling for service, please check the following table.**

PROBLEM	POSSIBLE CAUSE
Doesn't work	<ul style="list-style-type: none"><li>• Power is not on or the unit is not connected to power</li><li>• Low voltage</li><li>• A fuse may be blown or the circuit breaker tripped</li><li>• Plug not fully inserted into the wall outlet</li></ul>
Internal temperature not cold enough	<ul style="list-style-type: none"><li>• Temperature setting is too warm</li><li>• Door is not shut properly or opened frequently</li><li>• Exhaust vent is obstructed</li><li>• A large quantity of warm food has been placed in the unit</li><li>• Close proximity to heat source or direct sunlight</li><li>• Ambient temperature or humidity is very high</li></ul>
Appliance runs continuously	<ul style="list-style-type: none"><li>• Temperature setting is too cold</li><li>• Door not shut properly or opened frequently</li><li>• Exhaust vent is obstructed</li><li>• A large quantity of warm food has been placed in the unit</li><li>• Close proximity to heat source or direct sunlight</li><li>• Ambient temperature or humidity is very high</li></ul>
Internal temperature is too cold	<ul style="list-style-type: none"><li>• Temperature setting is too cold</li></ul>
Noises	<ul style="list-style-type: none"><li>• Hoses are expanding and / or the refrigerant is circulating; this is normal</li><li>• Floor is not flat, and the unit is not placed in a stable position</li></ul>
Doors cannot be closed properly	<ul style="list-style-type: none"><li>• The door is obstructed by items inside the unit</li><li>• The door gasket is not providing a good seal. Heat the gasket with a hair dryer</li></ul>

## Door Reversal Instructions (Optional)

---

The door opening of the appliance can be reversed to open the door from the opposite side. Follow instructions below for door reversal.

**CAUTION: To avoid personal injury to yourself and/or property, we recommend someone assist you during the door reversal process.**

1. To access the lower hinge assembly, tilt back the freezer cabinet or lay the freezer on its back. (Fig.1)
2. Remove both leveling legs located at the front of the cabinet.
3. Remove the screws holding the lower hinge assembly to the cabinet.
4. Remove door from cabinet by lifting it slightly and pulling down.
5. Using a flathead screwdriver, remove the main door top hinge pin. (Fig. 2)
6. Re-install the door top hinge pin on the opposite side of the cabinet.
7. Remove the door plug and door bushing located on the top of the door and reverse their positions on the opposite sides.
8. Re-install door assembly on cabinet.
9. Remove door bushing (bottom door) and install on opposite side.
10. Re-install the lower hinge assembly on the opposite side.
11. Make sure the door assembly is properly aligned on the cabinet before tightening lower hinge screws.
12. Re-install both leveling legs.

