

CHECK
to make sure all of the contents are in the box

REVIEW
the safety information in the User Manual

SETUP
your HDTV so that the rear connectors are accessible

INSTALL
included AAA batteries into the provided
Polaroid Remote Control

WRITE
down your HDTV's Model and Serial Number
(located on the back of TV)




HDMI: THE BEST CONNECTION

We highly recommend you use the HDMI input whenever possible to receive an incredible High Definition picture. Please keep in mind, however, that not all A/V devices are capable of this type of connection.

For the best viewing experience, connect your TV to an HD digital cable/ satellite box, HD/ Blu-Ray DVD player and/or other HD A/V device using the HDMI connection. Make sure your external A/V devices are set to output an HDMI signal. Consult your A/V device's User Manual for instructions on how to output an HDMI signal.

*HD-CAPABLE CONNECTION

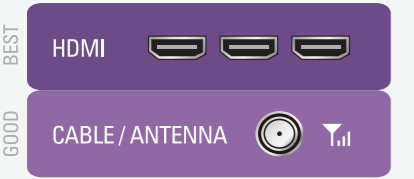

Polaroid

Digital UHD LED TV 55GSR4100KM

THREE WAYS TO GET HDTV

- 1) OVER-THE-AIR ANTENNA** – Connected to your HDTV through RF Cable / Antenna input.
- 2) HD CABLE BOX** – Subscribe to HD programming through your local cable company (HD cable box required).
- 3) HD SATELLITE** – Subscribe to HD programming through DirecTV, Dish Network, or other satellite provider (HD satellite receiver required).

For more information, see the "First time installation" in your User Manual.

**NEED HELP?
IT'S FREE!**




FOUR EASY STEPS FOR CONNECTING YOUR HDTV

1) CHOOSE A/V EQUIPMENT YOU WANT TO CONNECT TO YOUR HDTV

Select which types of **A/V Equipment** and **TV Signal Source** you want to connect to your HDTV.


The colored boxes in the **A/V Equipment** and **TV Signal Source** charts below indicate which type of connections you may use to connect to your HDTV

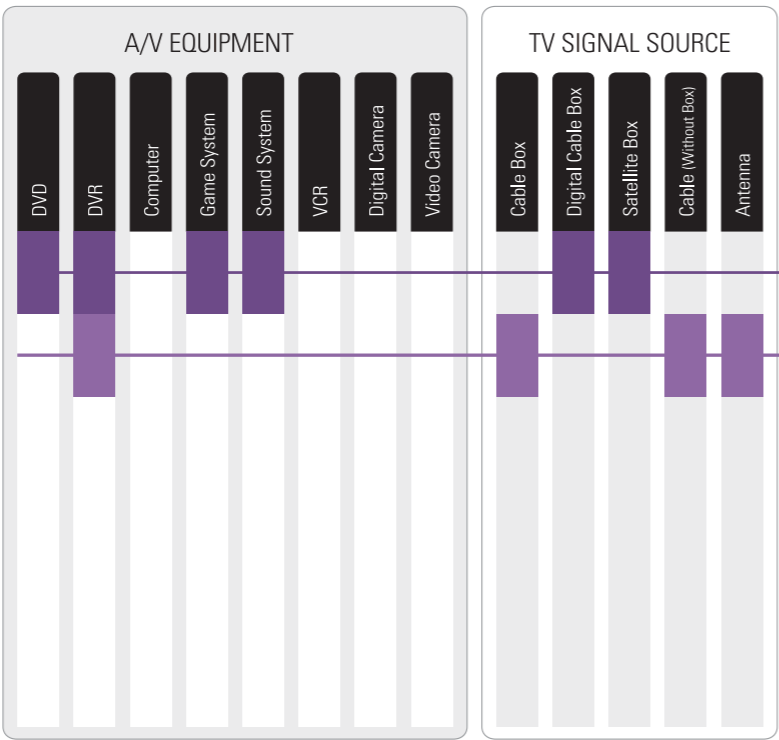


2) CHOOSE A/V CONNECTION METHODS

Using the colored boxes from STEP ONE, follow the row across to STEP TWO to match up the colored boxes to the same colored connection method.

Choose **ONLY** one connection method for each signal and piece of equipment.

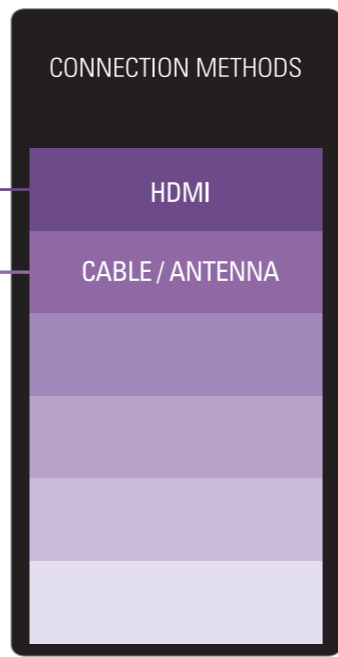

EXTERNAL DEVICE CONNECTIONS

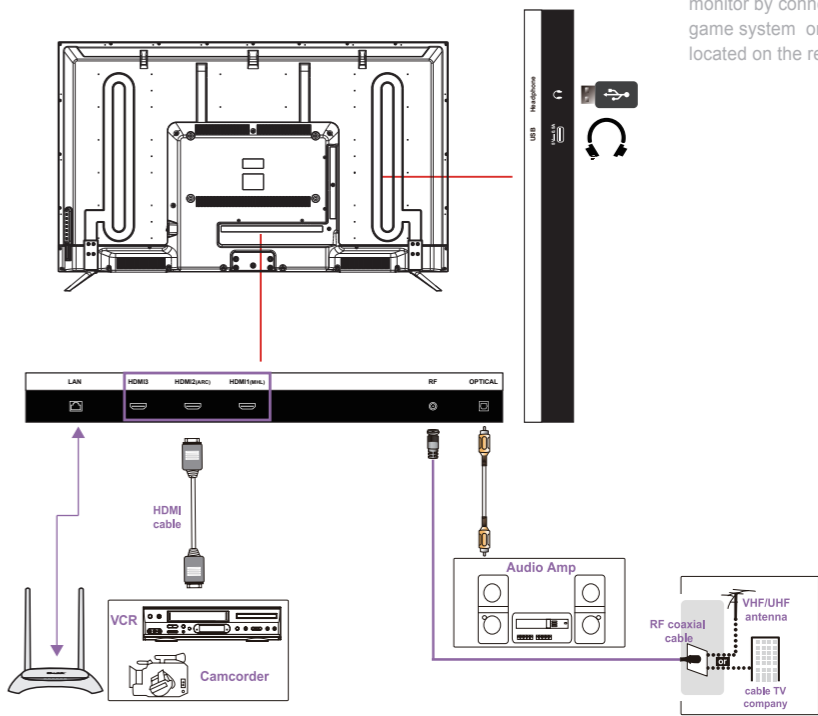


You can enjoy picture, sound and a PC monitor by connecting a DVD player, video game system or computer to the inputs located on the rear of the LED TV set.

3) SELECT CABLES AND MAKE CONNECTIONS

Once you have chosen your preferred connection methods from STEP TWO, follow the row to STEP THREE to decide what kind of cables you need and what the connections look like on your A/V equipment.

Following the color-coded chart, use the appropriate cables and connect your **TV Signal Source** and **A/V Equipment** to the color-coded inputs on your HDTV. (Refer to the **Connection Map** at the bottom of the page.)

Once connected, turn on your HDTV and all your connected A/V equipment.

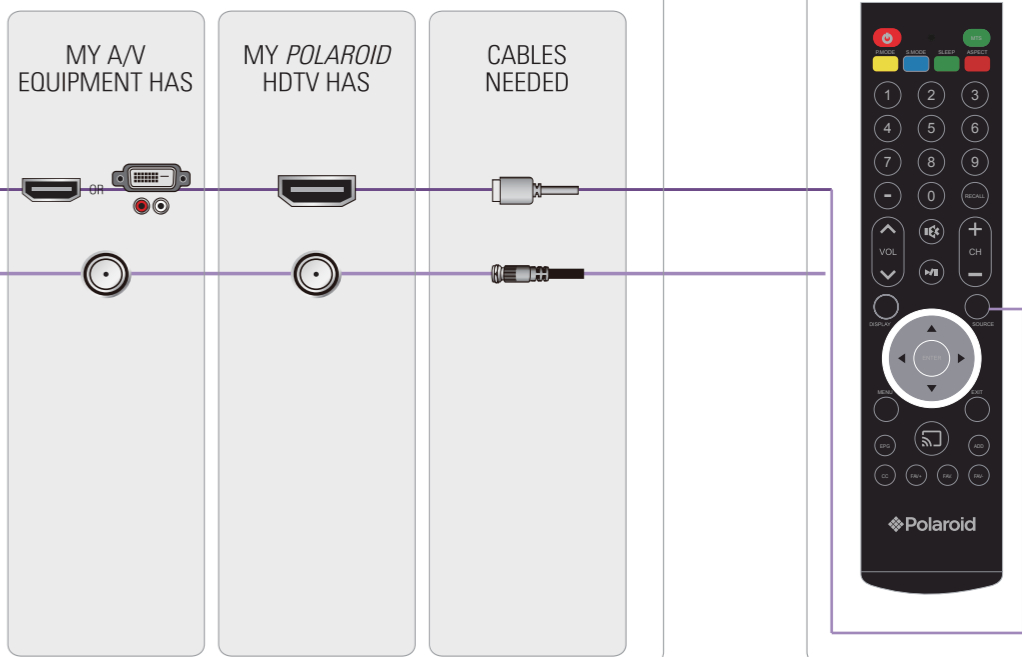

4) ENJOY YOUR HDTV!

Follow the "PROGRAM YOUR HDTV" section on the back of this Quick Start Guide.

QUICK START GUIDE



Questions?
Need some help?
This manual will help you
enjoy your new product



If you still have questions,
call our help line:
USA: 1-888-636-8599



or visit us at:
www.polaroidhdtv.com

Polaroid and Polaroid & Pixel are trademarks of PLR IP Holdings, LLC, used under license. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product. PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.

This product is distributed and sold by:
Empire Electronic Corporation
5550 Jurupa St, Ontario, CA 91761

Polaroid Digital UHD LED TV 55GSR4100KM

PROGRAM YOUR LED TV TO RECEIVE & DISPLAY CHANNELS USING YOUR REMOTE CONTROL. It's Easy!

If you need additional information on your new Television, complete instruction manuals are available for reference and download in our SUPPORT section online at www.polaroidhdtv.com

To maximize your viewing experience, We have included an on-screen wizard to guide you through your TV setup the very first time you turn on your LED TV. Follow the on-screen prompts to: select your TV input, and select the language and time zone of your choice.

1) REGULAR CABLE OR OVER-THE-AIR ANTENNA (NO BOX)

Receive channels through RF Cable / Antenna input using a regular antenna or regular cable service signal, without a satellite or cable box.

STEP 1.1

A. Connect your TV Signal Source (cable from out-of-wall cable or antenna for cable service without a box) directly to Cable / Air input on your LED TV.



STEP 1.2

First time installation

When you power ON the unit for the first time, the screen will show the initial setup dialog. There are 3 option in initial setup menu:

- **Menu Language** : English, Francais, Espanol

- Press the button to highlight **Auto Channel Search** and press **ENTER** button to perform auto channel scan, the Auto Scan process will take about 30 minutes, while the auto scan process is finished then the first memorized channel will appear on the screen.

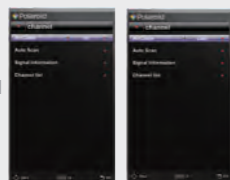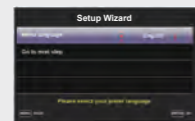

You can memorize the channels at any time using the following instructions:

STEP1.3

Channel Programming

- Press the **MENU** button on the remote control, then press the **◀▶** button to highlight **CHANNEL** . and press the **ENTER** button to access to the sub-menu.
- Press the **▼** button to highlight **Signal Type**, then press the **▶** button to select desired **Air** or **Cable**.
- Press the **▼** button to highlight **Auto Channel Search** , and press the **ENTER** button to launch the Auto channels scanning. The scanning process will take about 30 minutes or more (depends on how many TV stations are in your area), when the auto scanning process is finished the first memorized station will appear on the screen.

2) OPTIMIZE

Fine tune your TV settings for home use. After completing either STEP 1 or STEP 2, please follow the steps below to optimize your TV viewing experience.


A. Press the **MENU** button.

B. Use the **◀▶** buttons to select the **PICTURE** icon, then press **ENTER** button.

C. Use the **▲▼** buttons to highlight individual **VIDEO** options.

D. Use the **◀▶** buttons to change the settings to show your ideal picture.

E. Press **MENU** to exit the on-screen display menu.

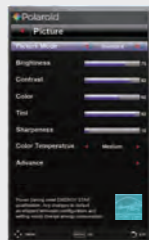

3) PROGRAM

Enjoy the convenience of your TV's program guide.

If you followed STEP 1, take the following steps to make sure that the correct program times are shown when pressing the **GUIDE** button.

A. Press the **MENU** button.


B. Use the **◀▶** buttons to select the **TIME** icon, then press **ENTER** button.

C. Use the **▲▼** buttons to highlight **Clock Setting**, then press **ENTER** button.

D. Use **▲▼** buttons to highlight Time Zone.


E. Use the **◀▶** buttons to change the settings to your desired time zone.

F. Press **MENU** to exit the on-screen display menu.

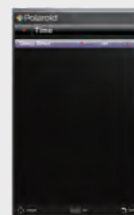

IMPORTANT SAFELY INSTRUCTIONS

FIGURE A
EXAMPLE OF ANTENNA
GROUNDING ACCORDING TO
NATIONAL ELECTRICAL CODE
INSTRUCTIONS

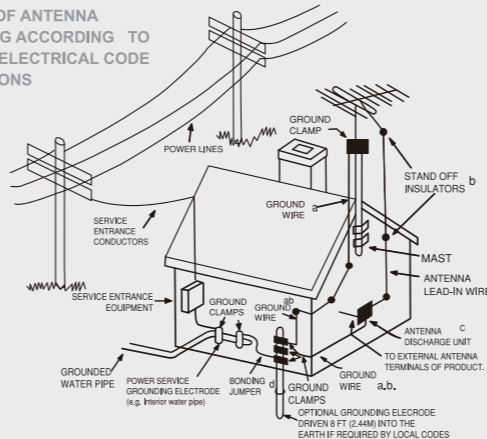

- Use No.10AWG(5.3mm²)copper,No.8AWG(8.4mm²)aluminum,No.17AWG(1.0mm²) conper-clad steel or bronze wire,or larger,as a ground wire.
- Secure antennal lead-in and grounding wires to house with insulators spaced forom 4-6 feet (1.22-1.83m) apart.
- Mount antenna discharge uint as close as possible to where lead-in enters house.
- Use jumper wire ont smaller than No.6AWG(13.3mm²)copper,or the equivalent,when a separate antenna grounding electrode is used.

- POWER** Turns the LED TV on and off (standby mode).
- MTS** In NTSC receiving mode, press to select. the audio modes to Mono, Stereo or SAP. In ATSC Digital receiving mode, press to display the audio selection menu on the screen. Using the Navigator **▲, ▼** button to select the desire audio mode.
- S.MODE** Sound Mode, press repeatedly to select the presetting sound effect modes.
- P.MODE** Picture Mode, press repeatedly to select the preset picture modes.
- SLEEP** Press repeatedly to activate and/or set the sleep timer.
- ASPECT** Press repeatedly to select the aspect ratio of screen as desired.
- 0-9** Numeric buttons.
- .Select channel with two digits.
- RECALL** Recall Mode.
- VOL+/VOL-** Press to increase or decrease the volume level.
- CH+/CH-** Press to increase or decrease the channel number.
- Turn off the sound temporary.** Press again to turn the sound back.
- Play/Pause picture.**
- DISPLAY** Press to display the information; settings and the status of current mode/station on the screen.
- SOURCE** Press to display the source menu on the screen. Using the Navigator **▲** or **▼** buttons to select the source as desire then press (ENTER) button to confirm your selection.
- ▲▼▶◀/ENTER** Press to move the cursor within the setting menu. ENTER Press the ENTER button to confirm the selection. Press the "ENTER" button, the check mark will appear to the channel , and the channel is marked as channel list.
- MENU** Displays the setting menu on the screen.
- EXIT** Press to exit from the setting menu.
- Google cast** Enter cast connect surface
- EPG** Press to display the Electronic Program Guide in digital TV channels(Operation in ATSC mode only functions on signals emitting from TV station) .
- ADD** In FAV display mode, press to increase or delete the highlighted channel.
- FAV+**.Next favourite channel.
- CC** Press repeatedly to activate and/or set the CC (Closed Caption Display) modes.
- FAV.** Show the list of favorite channels.
- FAV-**.Previous favourite channel.




PLEASE **READ** THIS
BEFORE REMOVING
PRODUCT FROM
THE BOX

We've provided:
A. LED TV
B. Stand
C. Screws



If you prefer to wall mount your TV, do not attach the stand. Use the instructions in your wall-mounting kit (not included).



Simple Steps for Attaching Your TV Stand

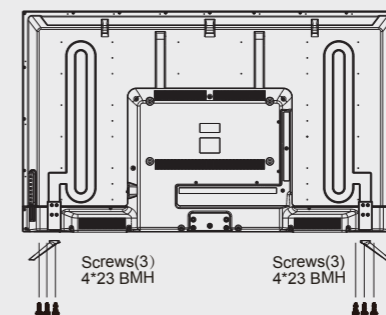

Mounting on the wall

This unit is VESA-compliant, and is designed to be wall-mounted with a VESA-compliant 15.75"x7.87"(400 mmx200mm) mounting kit designde for flat-panel TVs(not supplied). Mount this unit according to the instructions included in the monting kit. Length of screw should not exceed 12 mm

NOTE
Remove the base stand before mounting the unit on the wall.

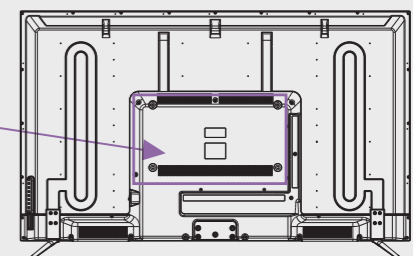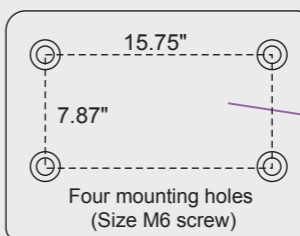

TROUBLESHOOTING

Symptom	Check
No sound and no picture	• Check the Power indicator on the TV panel lit or not lit. If not lit, check the connections between AC/DC adaptor and the TV or the connections between AC/DC adaptor and AC outlet.
No picture but the sound is normal	• The pictures may be too dark, increase the bright ness and contrast level.
Normal picture but no sound	• Sound level may be too low, increase the sound level.
Picture with noise	• Try another channels. • Check the connection of antenna.
No color	• Try another channels. • Increase the level of saturation
Remote handset doesn't operate	• Aim the remote handset to the remote sensor on the front panel. • Replace new batteries. • Check the batteries with correct polarity mark inside the battery compartment or not.
No sound and / or no picture in HDMI mode	• Check and make sure the Video output from the connected device is set to HD (High Definition) and the Audio output is set to PCM (Plus Code Modulation). For details, refer to the Instruction Manual of the connected device.
The TV turn off automatically.	• No Signal Auto Power off was set to on, when no was received within 30 minutes, the TV will turn off automatically.
Forgotten the preset parental lock password	Use the master password 1470 to reset a new password.

QUICK START GUIDE



Questions?
Need some help?
This manual will help you enjoy your new product



If you still have questions,
call our help line:
USA:1-888-636-8599



or visit us at:
www.polaroidhdtv.com

Polaroid and Polaroid & Pixel are trademarks of PLR IP Holdings, LLC, used under license. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product. PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.

This product is distributed and sold by:
Empire Electronic Corporation
5550 Jurupa St, Ontario, CA 91761