
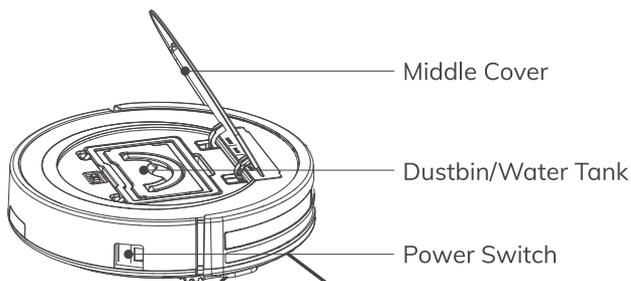
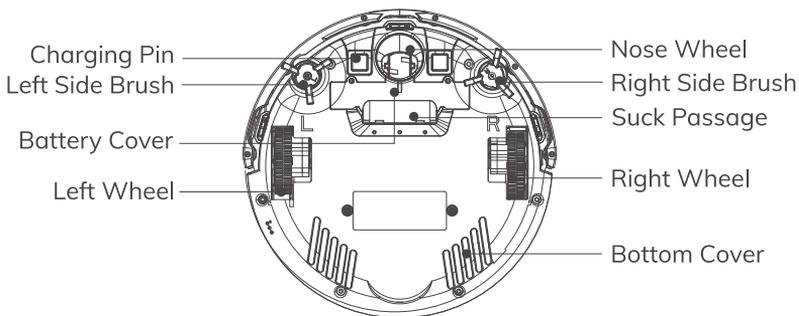



Product Composition

Robot Anatomy

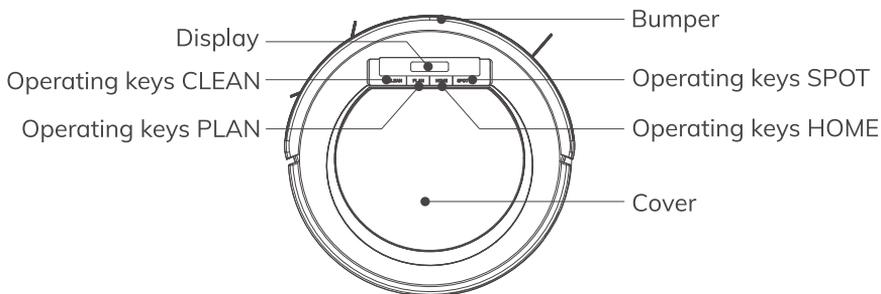


Product Composition


Dustbin

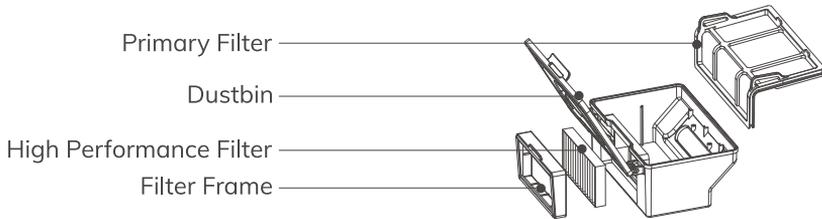

Charging Dock

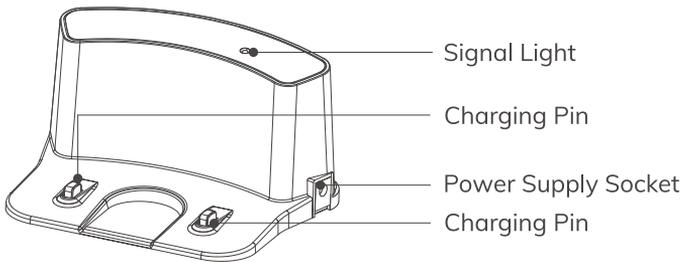


Water Tank

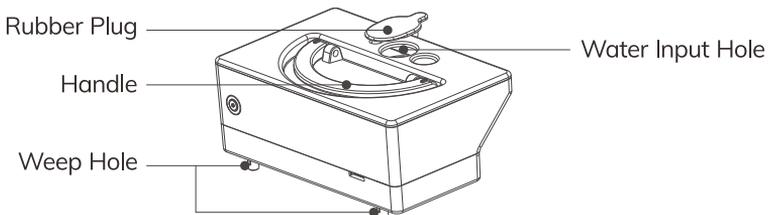

Product Composition

Remote Control

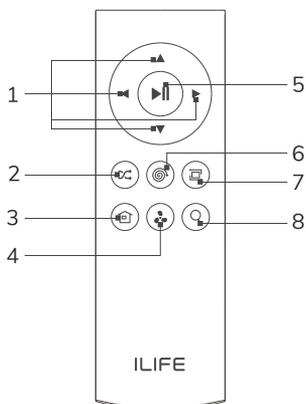

1. Direction Buttons
2. Auto Mode
3. Self-charge Button
4. MAX Mode
5. Clean/Pause Button
6. Spot Mode
7. Edge Mode
8. Search the robot (The robot must be within the field of view and within 3 meters)

1 Clean/Pause Button

- Press the button to switch the robot from Sleep Mode to Select Mode.
- Press the button when in Select Mode to start cleaning.
- Press the button to Pause the robot during its operation.

2 Direction Buttons

A. “▲” **Forward** Press the button to move the robot forward.

B. “▼” **Backward**

Press the button to turn the robot 180° to the right, then go backward.

C. “▶” **Right** Press the button and the robot will turn right.

D. “◀” **Left** Press the button and the robot will turn left.

Note: “▲” “▼” cannot be used during a cleaning cycle.

Product Composition

3 MAX Mode

Under the Cleaning Mode, to clean dust traffic area, please press “

4 Self-charge Button

Press the button and the robot will return to the charging dock for recharging.

5 Edge Mode Button

Press the button to start border cleaning.

6 Spot Mode Button

Press the button to start the spot cleaning.

7 Search the robot Button

If the robot is in sleep mode, press the button to wake it up. If the machine is in other modes, press this button, the machine will respond with a beep.

Reminder :


Please install two AAA/R03 batteries before using the remote control.
Please take out the batteries if the remote control won't be used for a long time.

How to Use

Getting Started

- 1>. Place charging dock on the floor and plug in adapter.
Signal light on charging dock will turn solid.

Note: Put charging dock against a wall and remove obstacles about 1 meter on both sides and about 2 meters in front.

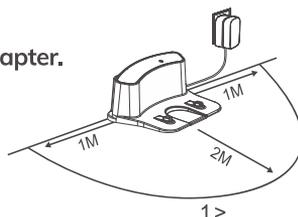

- 2>. Display panel will flash after the power switch (near the power socket) is turned on.


(If no command is received, the robot will switch to sleep mode after 30 seconds)

Note:


- A. Always keep the power switch on, otherwise the robot will not work.
- B. If power switch is turned off, all scheduled cleaning will be lost.

- 3>. Robot can be recharged by :

- A. Plugging into an electrical outlet;
- B. Press HOME button on robot or  on the remote control – the robot will return to charging dock for auto recharge.

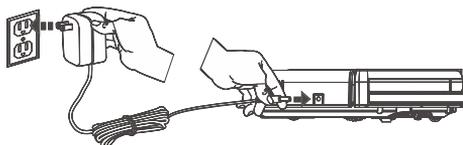

A

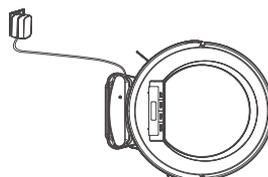

B

Extending battery life:

- A. Before first use, charge the robot overnight.
- B. Always place the robot on the charging dock that is connected to power.
- C. If the robot will not be used for a long time, fully recharge it and turn off the power switch before storing it in a cool, dry place.

4>. Auto charging

The robot will automatically return to charging dock when battery runs low.

How to Use

Start/Pause/Sleep

Sleep mode: The robot is not working,  on the display panel is off and power switch is on.

Selected mode: The robot is not working,  on the display panel flashes.

Cleaning mode: The robot is working and different icons are always on the display.

1>. Starting up

A. Make sure the power switch is on.

B. In selected mode or Auto charging mode, press CLEAN button on robot or  /  on the remote control to start cleaning.

Note: If the robot is in sleep mode, press CLEAN button on the robot or  /  /  on remote control to recover it. Press CLEAN button on the robot or  /  on the remote control to start the cleaning cycle again.

2>. Pause

Press CLEAN button on robot or  /  on the remote control to change from Clean mode to selected mode.

Note: When the robot is paused from Clean mode, press CLEAN button to resume the cleaning cycle.

3>. Sleep

Change from selected mode to sleep mode:

A. Press and hold CLEAN button on robot for 3 seconds.

B. Robot automatically enters sleep mode if no command is received after 30 seconds.

How to Use

Schedule

You can use the PLAN button on the main body to schedule the robot to cleaning from a specific time. (For example, if the schedule time is set to 06:30, the robot will start cleaning after 6 hours and 30 minutes, and before the schedule is cleared, the robot will work at this time every day.)

-Once the schedule takes effect, the robot will start work on time every day at the scheduled time. If the power switch on the side of the robot is turned off, the schedule will be cleared, and you need to set the schedule again.

Make an schedule on the display

1. Turn on the power switch and press the PLAN button to enter the schedule mode.
2. In the setting, press the PLAN button to switch between hours(0-23) and minutes(0,15,30,45), press the SPOT button to decrease the number, and press the HOME button to increase the number.
3. After setting the schedule, press the CLEAN button to confirm the schedule. To cancel the schedule, press and hold the PLAN button for 5 seconds and then press the CLEAN button to confirm the setting.

Cleaning Mode

1>. Auto cleaning

The robot will clean a room automatically and adjust its cleaning according to the situation.

Note: In selected mode or Auto charging mode, press CLEAN button on robot or  /  on the remote control to start Auto Cleaning.

2>. Spot cleaning

Press  on the remote control toward the robot when the robot is in selected mode and the robot will begin to circle around. The robot will turn into selected mode after Spot clean is finished.

3>. Edge cleaning

In selected mode, press  on remote control to start edge cleaning.

How to Use

Display Notifications


When the robot is working or operating, the display screen will show the current status of the robot with various icons.

Display	Status
	The robot is in selection mode, desired function can be selected through the operating button.
	The robot is in Edge mode.
	The robot is in Auto mode.
	The robot is in Spot mode.
	The robot is in Self-charge mode, which is searching for a charging dock.
	The battery is almost empty and must be charged soon.
	The battery is completely charged.
	The battery is being charged. The fewer bars that blink, the more completely charged the battery is.
	The robot is in directional control.



How to Use

Electrowall

Electrowall creates an invisible barrier that V55 will not cross. This invisible barrier can be used to confine V55 to a particular room or area.

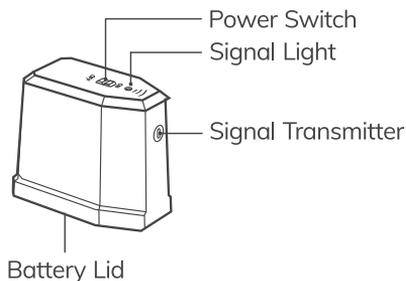

- Install battery first, then turn it on.
- Put the electrowall on the outside of the doorway you wish to block.
- Ensure the signal logo is facing forward and toward the opening you would like to block.
- Turn off the electrowall after each use.

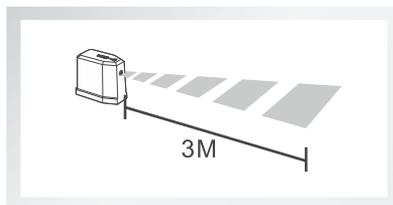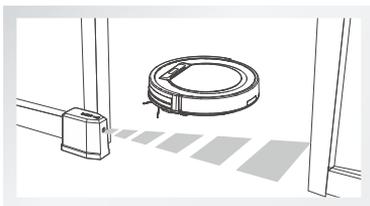

TIPS:

- * Make sure which side is working area according to the stickers on the electrowall.
- * Place the robot in the "working area" to do cleaning.

Maintenance

Cleaning Side Brushes

Clean the side brushes when it gets dirty and replace it if it was damaged.


Note:

Before replacing side brushes, check and match "L" "R" marks on both and bottom of robot.

Cleaning Dustbin and Filter

Clean and empty dustbin after each use, steps are as shown in below figures.

- After taking dustbin, check whether there is foreign matter stuck in suck passage and clean it.
- Clean Filter after use for 10-30 days. And replace it after use for 6 months at maximum.
- Install both Filter and primary filters when they are dry.
- Filter and primary filter could be replaced if needed.

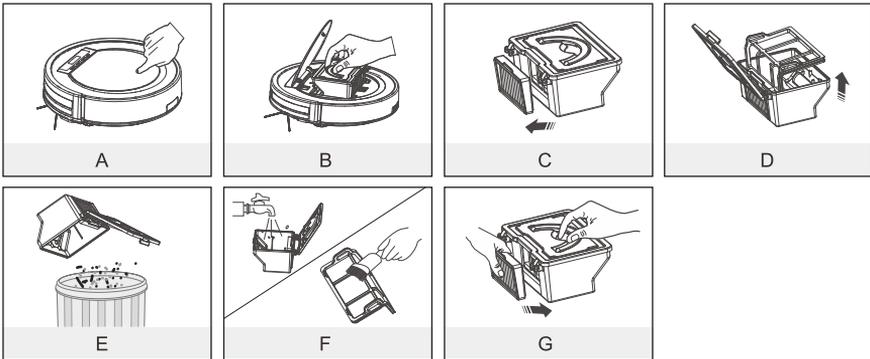

Cleaning Cliff Sensors and Charging Pins

Slightly clean the sensor window and anto charging pins with a soft dry cloth.

Note: Charging pins on charging dock need to clean if dirty.

