

# MASSAGE CHAIR USER MANUAL

PS6000

PLEASE READ AND SAVE THESE INSTRUCTIONS

# TABLE OF CONTENTS

- Thank you for your purchase of this product. Before using, please read this USER MANUAL carefully, and pay special attention to the safety precaution to ensure proper operation and use.
- Please keep this USER MANUAL properly for further reference.

<b>SAFETY PRECAUTIONS</b>	MEDICAL WARNINGS .....	01
	WARNING .....	02
	FORBIDDEN .....	02 - 03
	REMOVE PLUG .....	03
<b>NAME AND FUNCTION OF EACH COMPONENT</b>	EXTERNAL STRUCTURE .....	04
	INTERNAL STRUCTURE .....	05
	MUSIC SYSTEM .....	06
	REMOTE CONTROLLER INSTRUCTION .....	07
	REMOTE CONTROLLER KEY FUNCTIONS .....	08
<b>PREPARATION BEFORE USING</b>	HOT KEY INSTRUCTION .....	09
	INSTALLATION METHOD .....	11
	TURN ON POWER SUPPLY .....	12
	MOVE METHOD .....	12
<b>PRODUCE STORAGE AND MAINTENANCE</b>	INSTALLATION POSITION .....	13
	GROUNDING INSTRUCTIONS .....	14
	AFTER USING THE CHAIR .....	14
	METHODS OF STORAGE .....	14
	MAINTENANCE .....	14
<b>TROUBLESHOOTING GUIDE</b>	KIND REMINDING .....	15
	TROUBLESHOOTING GUIDE .....	15
<b>CLEANING INSTRUCTIONS</b>	CLEANING THE PLASTIC PARTS .....	16
	CLEANING THE MESSAGECHAIR SYNTHETIC LEATHER .....	17
	ENVIRONMENT WHEN USING PRODUCT .....	18
<b>TECHNICAL SPECIFICATIONS</b>	TECHNICAL SPECIFICATIONS .....	19

# SAFETY PRECAUTIONS

- Before using, please read this "SAFETY PRECAUTIONS" carefully to ensure proper operation.
- The following "SAFETY PRECAUTIONS" is of great help to your correct use of this massage chair.
- To clearly indicate the degrees of danger and damage, the classes of accidents caused by incorrect use are classified into "WARNING" and "FORBIDDEN". Instructions marked as followings should be strictly followed.

## MEDICAL WARNINGS

### NOT RECOMMENDED FOR THE FOLLOWING PEOPLE.

- Patients with serious hyperostosis
- Swollen lump and patient thrombosis
- Patients with serious heart conditions
- Pregnant Women
- People that consume large amounts of alcohol
- People with diabetes
- People suffering from high fever
- Patients with malignant tumors or malignant abscesses
- People with distorted joints
- People with serious skin conditions
- People with spinal injuries
- All people should consult a physician and exercise care when operating this system
- Minors under 16 years or people unable to control his/her behavior, i.e. mental patients, people with paralysis, etc.

## WARNINGS

- Use this appliance only for its intended use as described in this manual.  
Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug.
- Keep the cord away from heated surfaces.
- Please empty pockets and remove all your arm Jewellery and watch before using this chair.
- Do not operate where aerosol (spray) products are being used.
- To disconnect, turn all controls to the off position, then remove the plug from the outlet.
- Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- Do not remove the back cushion and do not play with the roller mechanism.
- Do not remove the bottom seat and do not play with actuators.
- Keep the cord out of a heavy traffic area.
- Always unplug the power cord from the electrical outlet immediately after use.
- Only people less than 120kgs are acceptable.
- Do not operate any equipment with damaged parts.
- Any other use not recommended by the manufacturer may cause electrical shock or injury.
- Do not touch or re-wire the wires connected to the master-box.
- Do not attempt to repair or adjust any electrical or mechanical functions on this unit.  
Doing so will void the warranty.
- Do not put your hands or head under the chair.
- When using the massage chair, ascertain that the footrest is in the lowest position.

## FORBIDDEN

- Do not allow children to play near the chair especially during operation
- Do not leave mobility impaired or speech impaired people alone in chair
- Do not place or stock this machine near damp places such as swimming pools or bathrooms
- Do not press by force on the massage rollers
- Do not stand on the chair or store heavy items on the chair
- Do not use in the environment which is dusty, greasy or lacking oxygen

- Do not place near steam oven, open fire, or heat
- Wear suitable clothing, do not massage with bare skin
- Do not place directly in the sun
- Do not use electric blanket while using the massage chair
- Do not use outdoors
- Do not use while smoking
- Do not use immediately after meals
- Do not sit on the back cushions, armrest, or legs
- Don't use the massage chair when your body is wet or moist as it can result in electrical shock
- Do not operate with more than one person
- Don't use when using head ornamentation as it can result in injury
- Do not stumble over electrical wires or connections

### ⚠ REMOVE PLUG

 
 
- Before maintenance, please pull out the power plug. In addition, please do not insert or unplug the power plug with damp hands, to avoid electric shock.
- When the massage chair is not in use, please switch off power and remove the plug from the socket. When power is off, please cut off power supply immediately and pull out the power plug from the socket.

### ⚠ BE CAREFUL

- Please avoid using a massager after drinking or when you are not feeling well.
- Do not massage the head, elbow joints, knees, chest, abdomen, etc. directly on the massage ball.
- Do not damage the power cord or operate the massager while the power cord is damaged. This may result in electric shock or mechanical failure. Please contact the service center for a detailed inspection.

## NAME AND FUNCTION OF EACH COMPONENT


### EXTERNAL STRUCTURE

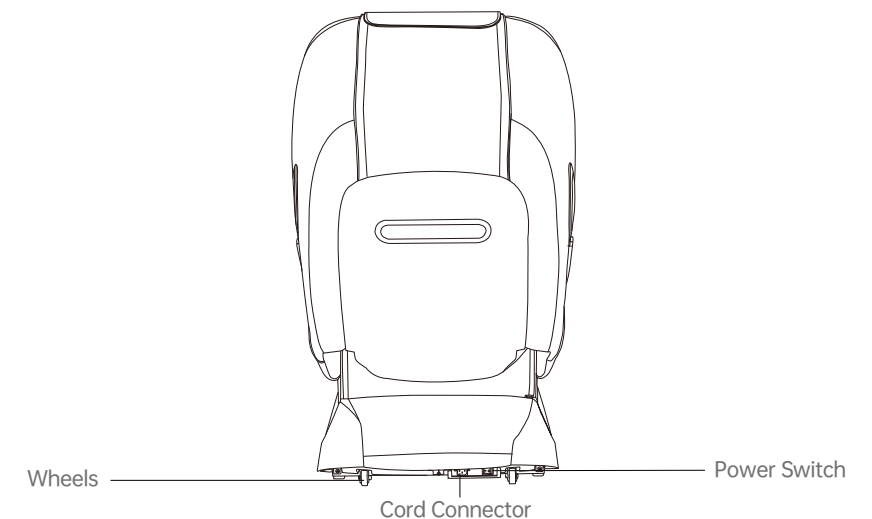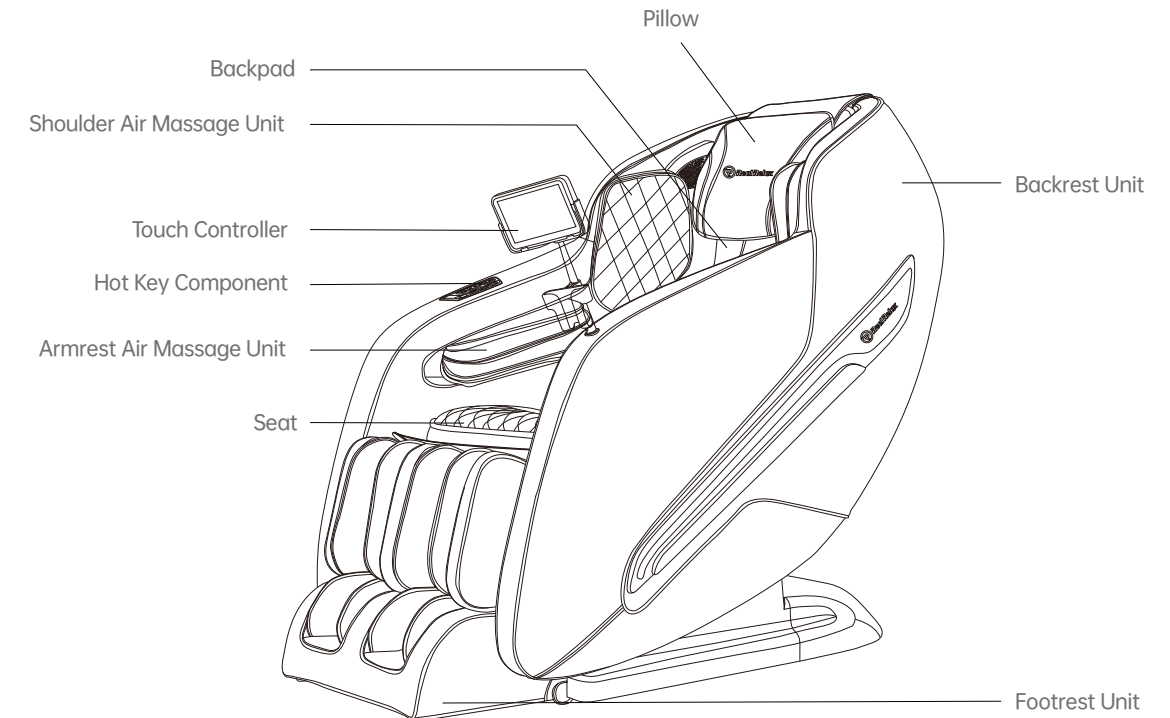



## INTERNAL STRUCTURE

 - |   |                           |    |                          |
|---|---------------------------|----|--------------------------|
| 1 | Shoulder Air Massage Unit | 6  | Foot Air Massage Unit    |
| 2 | Armrest Air Massage Unit  | 7  | SL Massage Track         |
| 3 | Touch Controller          | 8  | Back Heater              |
| 4 | Hot Key Unit              | 9  | Slide Rail               |
| 5 | Calf Air Massage Unit     | 10 | Foot Roller Massage Unit |

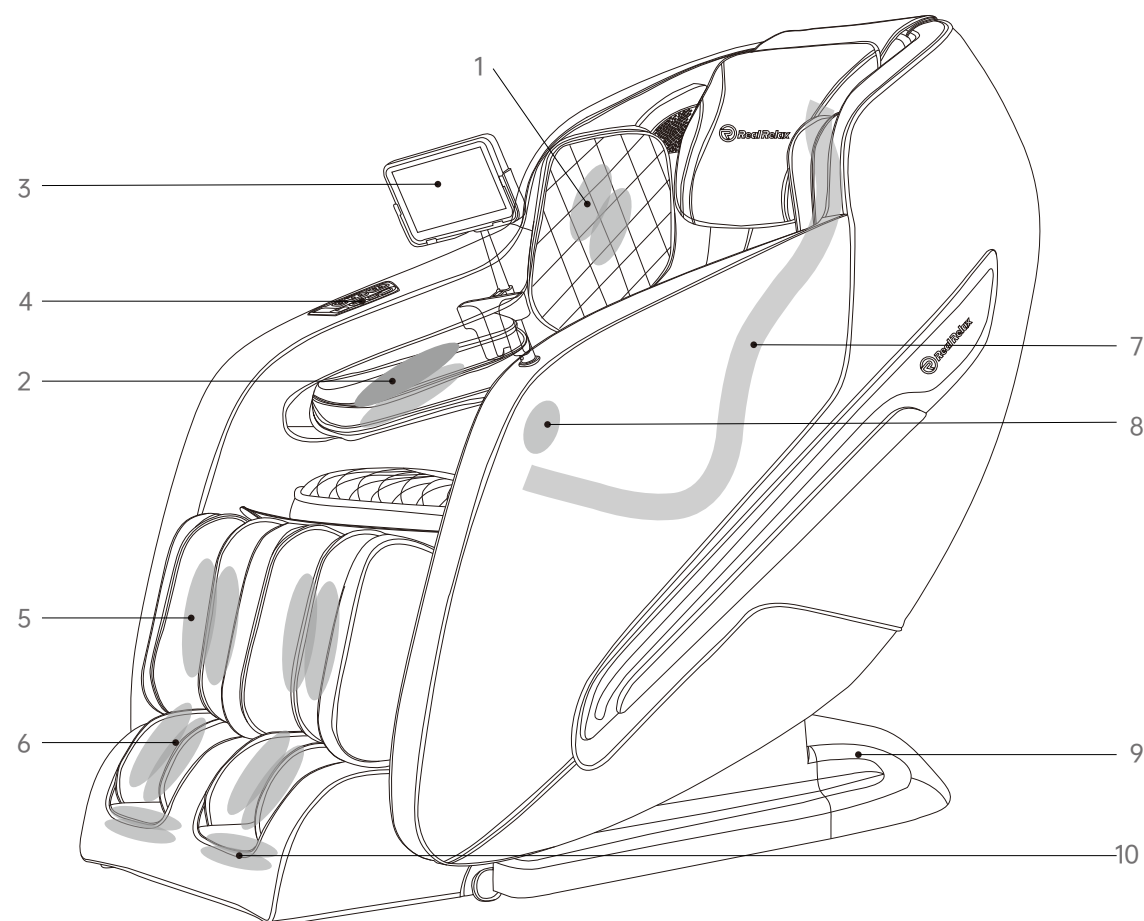

## MUSIC SYSTEM

Our product is designed with Bluetooth audio connection function. It can play music through connect with smart phone, tablet computer or other audio devices.

### How to use:

1. Open mobile-phone/ipad/computer BLUETOOTH capabilities, and access to the search state, your device will automatically search neighboring BLUETOOTH devices.
2. In a few seconds, our massage chair name will show up under the device list, select massage chair name, and the connection complete.



## REMOTE CONTROLLER INSTRUCTION

On-off icon:


The icon is dark in standby status; touch any part of the screen, the icon will flush. No further operation, the screen will be dark in 20 seconds. If the chair stops working but does reset, the screen will not react when touched. 23 seconds are needed for the chair to reset.



When the chair works, touch the icon, the screen will be dark, when the chair reset, touch the icon, enter into standby page.

Click this icon to into automatic mode page

 Click this icon to into manual mode page

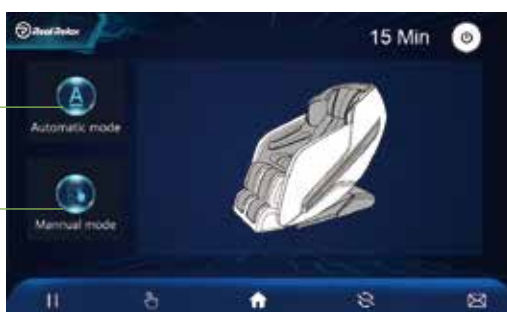

Automatic page:

When the icon is selected, the icon flush, otherwise, it is dark. Touch the flushing icon again, the according program stops



1. Under the automatic program, when the massage are conducted on the body parts, the according airbag and roller flush.
2. Pause button
3. In any status, click this icon to enter into automatic page

## REMOTE CONTROLLER KEY FUNCTIONS

Manual page:

In the course of automatic program operating, enter into this page, one of the six icons will flush according to what flush according to what automatic program is doing. If the user enters into the page directly, the screen is dark. Touch any icon, the icon will flash and the according operation will be done.

 


1. For these function icons, in the course of automatic operating, select any icon, the function will be conducted while not affecting the automatic program executes.
2. In any status, click this icon to enter into manual mode page


Position adjust page




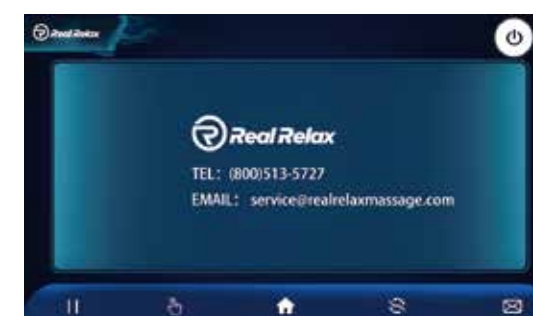

 If you have any questions, please contact us

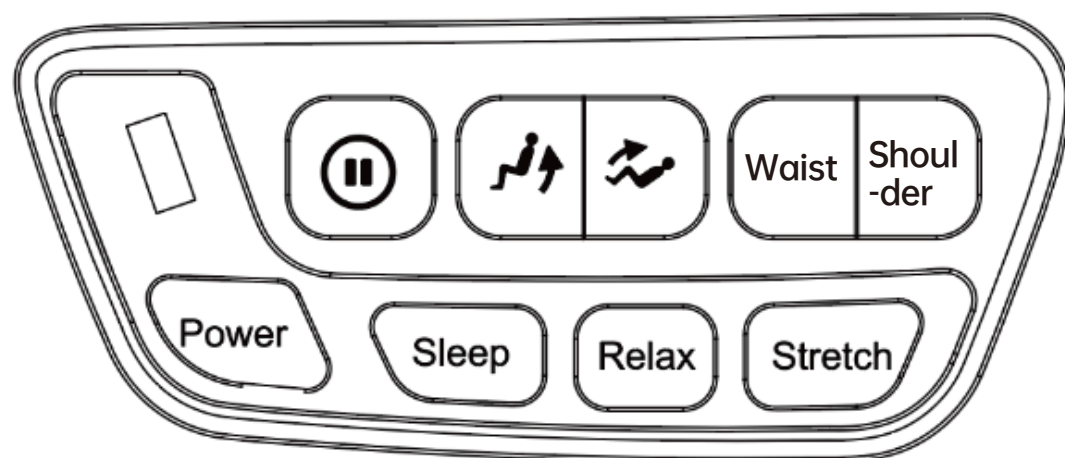

## HOT KEY COMPONENT

 


Button	Function
	USB port for charging
	Pause button
	Back & leg up and down
Waist	Waist mode
Shoulder	Shoulder mode
Power	On/off button
Sleep	Sleep mode
Relax	Relax mode
Stretch	Stretch mode

# PREPARATION BEFORE USING





 
## 1 INSTALLATION METHOD ACCESSORIES FROM BOX


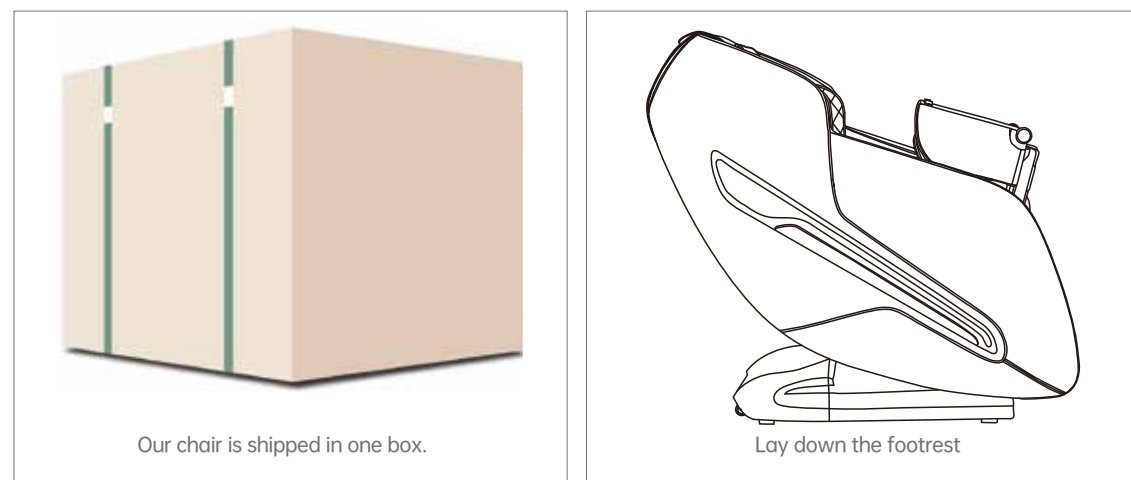


### Steps:

 
Lift up the outer box

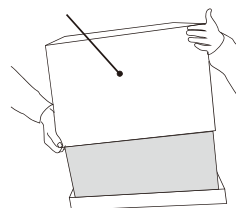



Remove around

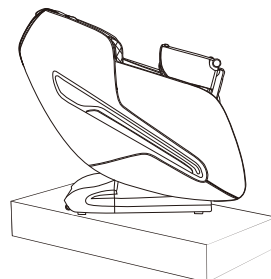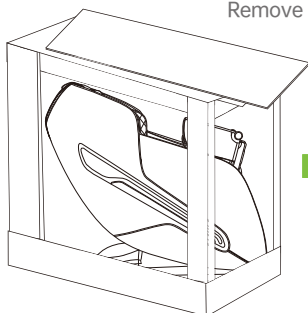  

Install the bracket of hand controller

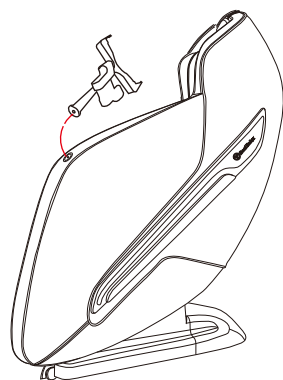 


  Tighten the bottom screw through hexagonal tool

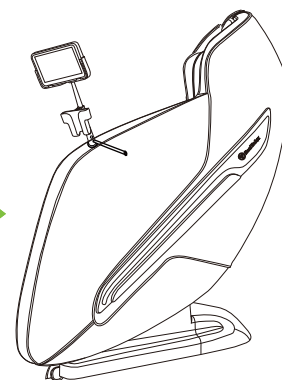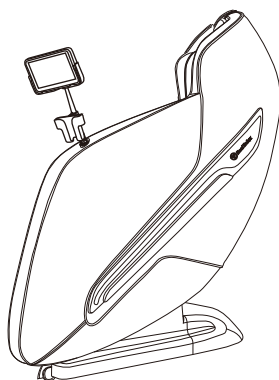

## 2 TURN ON POWER SUPPLY

 
1. Plug the power cord into three core socket with well grounding.
2. Turn on the power switch on the bottom of massage chair.

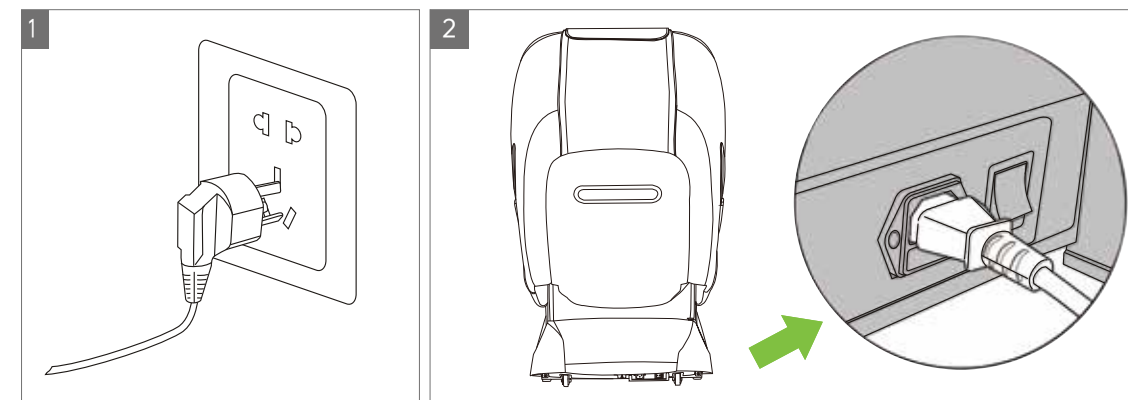

- Before switching on the chair, please make sure there is no damage on the power wire and other exposed wires.
- Make sure the power switch is off before the chair is connected to electricity.

## 3 MOVE METHOD

 - There are moving rollers at the bottom of the chair.
- Raise the back to the highest point.
- Switch off and plug out the chair.
- Lift the front part of the chair as showed in the figure (one person raise the front part via holding moving holder, another person push the chair when holding the top of the chair), move the chair by the rollers.

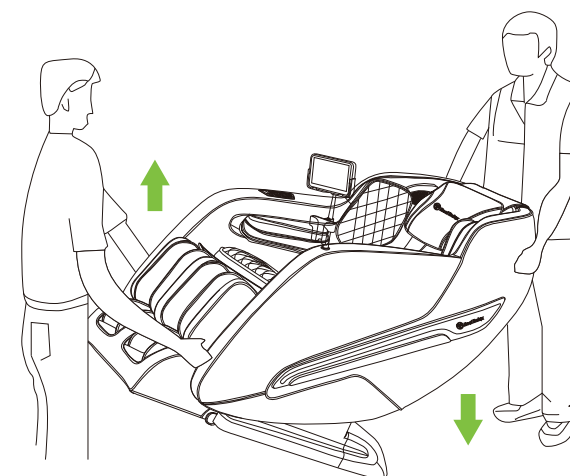


- Don't move it when there is people in it.
- Don't use the armrest while moving the chair, only hold the moving holder in the back and front.

# INSTALLATION POSITION
 
## PLEASE LEAVE THE SPACE AROUND THE MASSAGE CHAIR WHEN PREPARING THE MASSAGE

- (1) Place a massage chair where there is enough space for the back of the chair to recline and the footrest to rise.
- (2) Make sure that there is at least 50 cm in the back of the massage chair and at least 50 cm in front of the massage chair. In order to prevent from signal interference, please keep at least 1m away from the TV, radio and other video and audio devices.

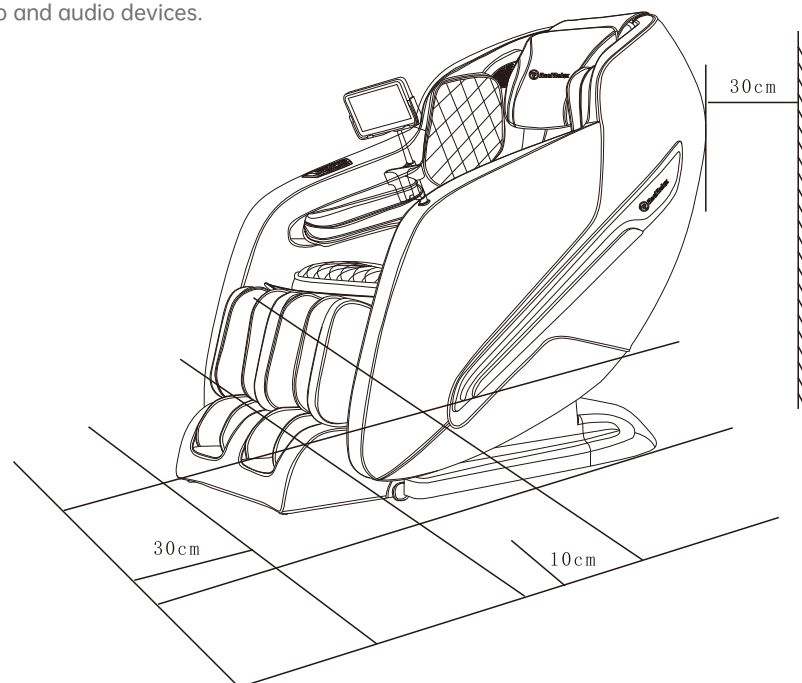

CAUTION

Before using, please tidy up well the cables to avoid twining or damage. When the whole chair makes slide movement forward or backward to original position, please check first whether there are kids, pets or any other objects to avoid accidents. Please put carpet or other pad under the massage chair, in order to avoid any unpredictable impression on the floor.

## SURROUNDING ENVIRONMENT



Keep the massage chair away from damp places (for example: bathroom) to avoid electric leakage.



Keep the massage chair away from high temperatures sources (for example: stove) to avoid fire or damage to leather material.



## GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Danger - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet; have a proper outlet installed by a qualified electrician.



## AFTER USING THE CHAIR

- Please power off the chair and unplug from power the supply socket after using, disconnect the controller and store carefully.
- Please power off the chair and unplug from the power supply socket when the chair is not in use, to avoid children to start the chair accidentally.
- Please store the chair well if it is not in use for a long time.



## METHODS OF STORAGE

- Do not dismount the back of the chair
- Keep the massage chair free of dust
- Cover the chair with a dust-free cloth to prevent dust from collecting
- Do not store in a hot, humid, damp place or in direct sunlight or heat
- Do not store in an overly cold place



## MAINTENANCE

- Before cleaning unplug from electrical source to avoid shock
- Clean the cloth surface with neutral detergent or a special mild detergent for cloth.
- Dust can be cleaned off with a damp cloth or mild detergent and air dry.
- Do not spray pesticide on the device.
- Specified cleaner can be used on the leather, plastic, and dried with a cloth
- Do not use a damp cloth on the electronic components which can cause shock and damage
- The leather covers (headrest, seat cushion, foot cushion) can be removed for cleaning

## ! KIND REMINDING

During daily use, please check whether the following phenomenon exist: Scorched smell

When touch the wire, the power is on, but sometimes off

The power supply cord is hot

Other abnormal phenomenon



CAUTION

If problems happen above, please turn off power supply and contact the distributor or manufacturer for assistance.

## TROUBLESHOOTING GUIDE

Problems/Issues	Possible Cause	Troubleshooting Method
Sounds like tapping or hum sounds	Sounds from air pump, motor or other mechanical parts	Normal phenomenon
Suddenly stops working	1. Bad power connection 2. Auto program timers is up	1. Unplug and reinsert power cord to the chair 2. Normal
Does not work after power up	1. Power switch is not turned on 2. Bad connection between plug and socket 3. Massage remote is not turned on 4. Have broken power wire plug 5. Bad fuse 6. Control unit for functioning properly	1. Turn power switch on 2. Connection power cord again 3. Press power button on remote 4. Contact professional technician 5. Replace fuse 6. Contact professional technician
Roller height changes	Rollers work alternately	Normal phenomenon
Abnormal sounds suddenly while working	Maybe from over working the massage chair	1. Cut down usage 2. Contact professional technician
Can not recline the chair	Obstruction-be sure that the chair is allowed enough room to fully recline	Stop chair operation, and move obstruction
can not restore position after reclined	Problem on electric motion pole or plug under bad connection	Contact professional technician

### ! ATTENTION

If problems are not from the above reasons, please turn off the power supply and the distributor or manufacturer for assistance.

Note : Do not dismantle the produce by yourself, and our company shall shoulder no responsibility to the damage of the product or the inquiry of people caused by improper use. Thanks for your cooperation !

## CLEANING INSTRUCTIONS

### CLEANING THE PLASTIC PARTS

 
 
1. Soak a piece of soft cloth in hot water or neutral detergent mixed with hot water, wring it out and wipe the plastic parts.

· Do not clean the product with chemicals such as thinners, alcohol.

2. Wipe residue away with a clean soft cloth that has been water and wrung out.

· Wring the cloth out thoroughly before using it to wipe the remote controller.

3. Let the plastic parts air dry. gasoline and soaked in clean

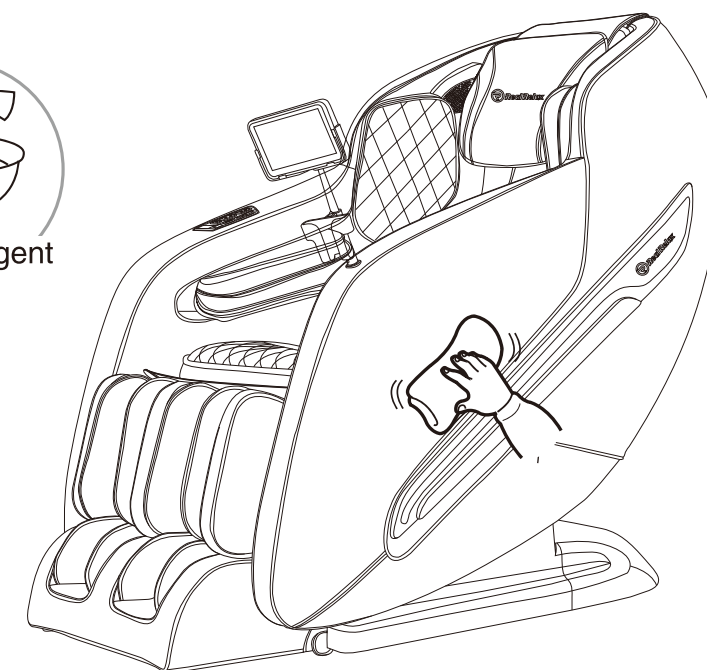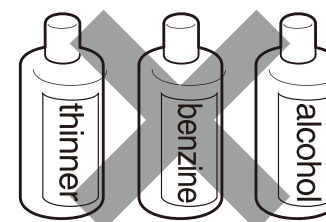


## CLEANING INSTRUCTIONS

### CLEANING THE MASSAGE CHAIR SYNTHETIC LEATHER

Wipe off the synthetic leather with a soft dry cloth.

 - Do not clean the product with chemicals such as thinners, and alcohol.
  - When using a leather maintenance product (i.e. cleaning cloths) on the market, follow its directions for use.
  - If the synthetic leather is very dirty, try the method below.
1. Soak a soft cloth into a solution of 3% to 5% neutral detergent and hot water. Wring it out.
  2. Wipe the surface of the synthetic leather with the moist cloth.
  3. Wipe the detergent residue off of the chair with a soft that has been soaked in clean water and wrung out.
  4. Allow the synthetic leather to air dry on its own.
- If the stains are difficult to remove with the method above, put a piece of melamine foam into a neutral detergent and use product.
  - Do not dry the surface using a hairdryer.
  - Fabric colors may dye the surface of the synthetic leather, be careful when wiping the product with denim or colored cloth. gasoline sold soft cloth the acawipesoak it Wipe off the synthetic leather with a soft dry cloth.

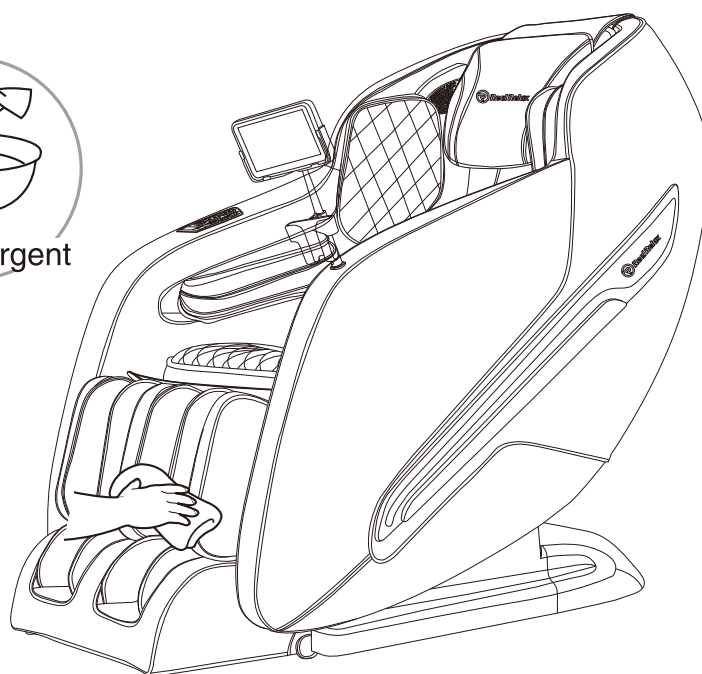

## CLEANING INSTRUCTIONS

### ENVIRONMENT WHEN USING PRODUCT

- Do not use this appliance in a hot and humid environment, such as a bathroom.
- Place and use the unit on a flat surface. Failure to do so may result in an accidental dumping.
- Do not use this appliance in dusty or corrosive atmospheres.
- Do not smoke on this appliance to avoid scalding the leather cover.

### YOU SHOULD NOT USE THIS DEVICE IF

- If you suffer from severe osteoporosis
- If you wear an electronic medical device such as a pacemaker
- If you have a high fever or feel unwell
- If you are pregnant or menstruating
- If you suffer from a physical condition
- If you have been ordered to recuperate by a doctor
- If your body is wet
- This product is forbidden for children under the age of 14 without supervision

# PS6000

Rated Voltage : 110 V

Rated Frequency : 60 Hz

Rated Power : 150 W

Safety Design : Class I

N.W: 229.1LB

G.W: 254LB

MEAS: 57.49"\*33.47"\*50.4"

Manufacturer Reserves The Right To Make Changes To InformationsPublished In This Document,  
Including Without Limitation Specifications And Product Descriptions, At Any Time And Without Notice.



# THANK YOU!