




OWNER'S MANUAL

16" Stand Fan Model: SF-16T07

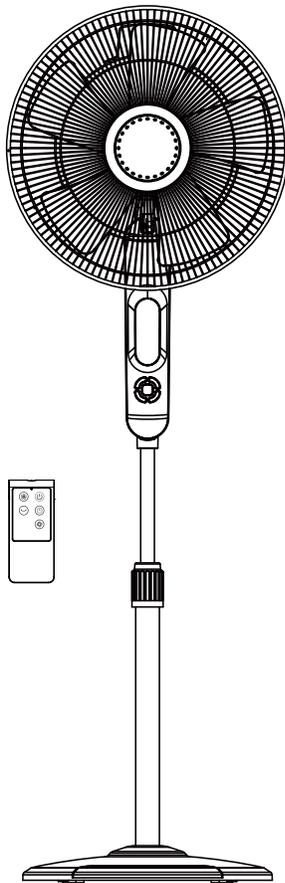

READ AND SAVE THESE INSTRUCTIONS

Attention: Pictures in the IM are for reference only.

CAUTION

Read Rules for Safe Operation and Instructions Carefully.


WARNING

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
2. To reduce the risk of fire or electric shock, do not use this fan with any solid state speed control device.
3. Do not leave the fan running unattend.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Disconnect fan when removing grilles for cleaning.
4. Be sure fan is on a stable surface when operating to avoid overturning.
5. DO NOT use fan in window. Rain may create electrical hazard

PART FIGURE

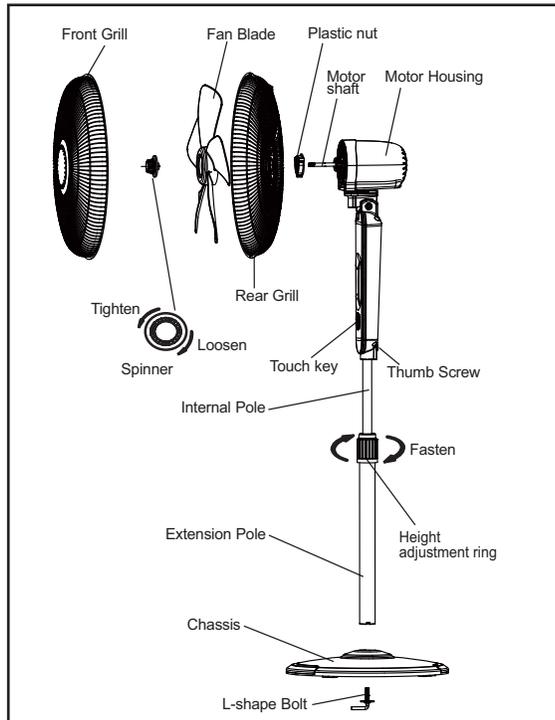


Note: All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

ASSEMBLY OF CHASSIS & COLUMN UNIT




1. Unscrew the L-shape Bolt from bottom of the Extension Pole. (Fig.1)
2. Insert extension pole into the chassis, replace and tighten the L-shape Bolt. (Fig.2)
3. Loosen the height adjustment ring located on the extension and adjust the internal pole to desired height. (Note: If you don't see the internal pole, it is inside the extension pole, simply pull it out.) (Fig.3)
4. Attach the head unit to the internal pole: loosen the thumb screw on the bottom of the head unit. Place the head unit on the internal pole and tighten the thumb screw in alignment with the groove on the internal pole. (Fig.4)

CAUTION: Height adjustment ring must be fully fastened before the assembly of the motor section to the internal pole.

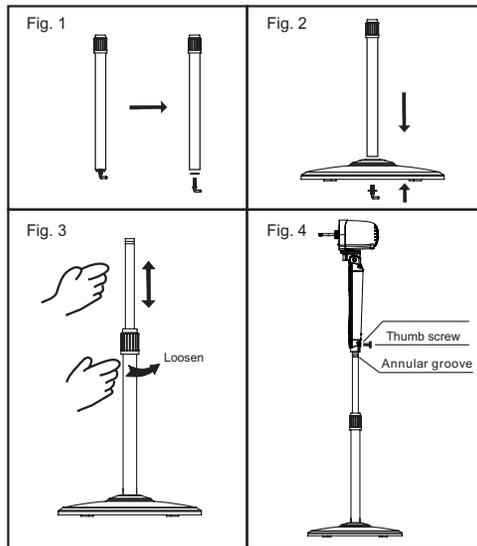

GRILL & FAN BLADE ASSEMBLY

1. Unscrew the spinner clockwise (this part may be packed separately in bag) and unscrew plastic nut counterclockwise to remove. Fix the rear grill onto the motor shaft, replace plastic nut and turn clockwise to tighten. (Fig. 5)
2. Insert the blade onto the shaft - make sure the rotor shaft pin is fitted into the groove on the blade. Turn the spinner counterclockwise to tighten blade. (Fig. 6)
3. Fix the front grill to the rear grill and secure with the grill clip. (Fig. 7)

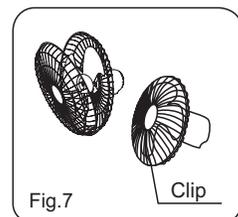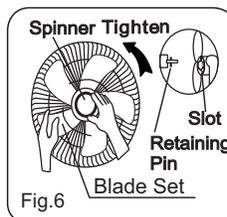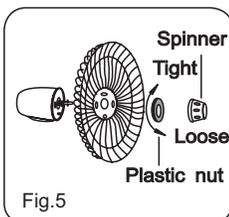

OPERATING INSTRUCTIONS

CONTROL PANEL

There are 5 operating keys. (See Fig.8)

⏻ **Power Key**

With the unit plugged in, press to turn the fan on.
Press again to turn fan off.

🌀 **Speed Key**

Press to change the fan speed in the order "1-2-3-4-5-6"

🌀 **Mode Key**

Press to select mode (or wind type). Press repeatedly to change in order: "Normal - Natural - Sleep - Smart". Corresponding indicator will be displayed on the screen.

Features of the four modes:

Normal: delivers air constantly at set speed.
There are total of 6 speeds.

Natural: delivers air according to preset program, switching through different speeds to simulate natural wind. There are 3 speeds under this mode.

Sleep: similar to Natural mode but steps down gradually for light and soft wind delivery. There are 3 speeds under this mode.

Smart: based on current fan speed and room temperature when this mode is selected, unit will automatically increase or decrease fan speed according to room temperature increase or decrease of 1°F. When room temperature falls below 68°F, fan will stop running and the "Smart" icon on the display will flash. Once room temperature reaches or surpasses 68°F, fan will automatically resume running.


CAUTION: These are features designed for your comfort, not a malfunction.

↔ **OSC Key**


Press to oscillate the fan left and right, the oscillating indicator will illuminate.
Press again to stop the fan from oscillating.

🕒 **TIMER Key**

Press to set timer-off: 1H, 2H, 4H and 8H. Once set, the timer display will indicate set time. As time passes, display will indicate how many hours remaining in the sequence of "8-4-2-1". For example, if timer is set for eight hours, after one hour, the display will still indicate "8h". However, once the remaining time reaches 4 hours, display will change to "4h", etc.

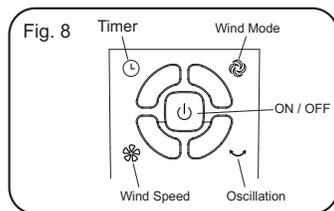

TOUCH KEY

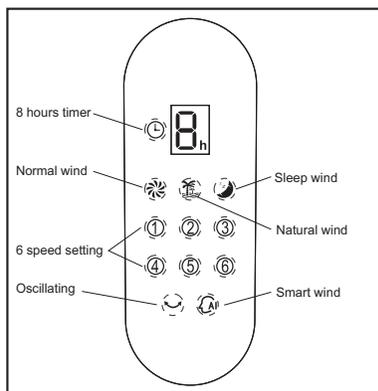

DISPLAY

Safety Touch Stop Sensor

This feature is designed to protect children. Fan will stop with a touch on the fan guard. This is a protection feature and not a malfunction.

REMOTE CONTROL

Keys on the remote control: Power (⏻), Wind Speed (⚙️), Wind Mode (🌀), OSC (↺) and Timer (⌚) have the same functions as corresponding keys on the unit. (Fig. 9)

1. Remote Control Operation

- Point the remote control at the control panel and press the desired key.
- Make sure to align the emitter at the front of the remote control to the receiving window on the panel.
- Avoid direct sunlight onto the control panel, this may affect how well the remote control works.

2. Batteries (not included)

- Slide off the battery compartment cover located at the back of the remote.
- Insert batteries and make sure the batteries are placed as shown in Fig. 10.
- Replace battery cover.

NOTE: use size “AAA” manganese or alkaline batteries.

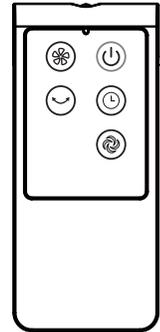


Fig. 9

WARNING:

- Do not dispose batteries in fire or high heat locations, batteries may explode or leak.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

TILT ADJUSTMENT

To adjust airflow upwards or downwards, push the head gently to desired angle.

HEIGHT ADJUSTMENT

Loosen the height adjustment ring and adjust the internal pole to desired height. Tighten the ring when done (Fig. 3)

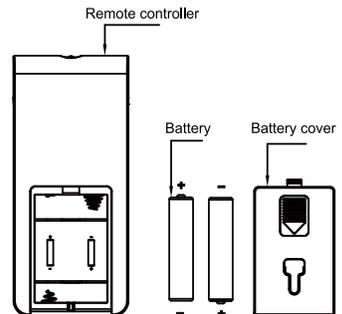


Fig.10 Battery Compartment

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts can be cleaned with mild soap and a damp cloth or sponge. Follow with clean damp towel to remove soap film.
3. Be sure water or other liquid does not come in contact with the motor.



Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Damage due to installation error, product abuse and/or misuse.
- Incidental or consequential damage caused by possible defects with this product.
- Labor cost incurred for the installation and/or removal of a possible defective unit.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.
- Normal wear and tear on parts or replacement of parts designed to be replaced.
- Damage to personal property from use of product.
- Replacement or repair of household fuses, circuit breakers, wiring or plumbing.

This GUARANTEE is in addition to your Statutory Rights

SUNPENTOWN INTERNATIONAL INC.
14625 Clark Ave. City of Industry, CA 91745
Tel: 800-330-0388
service@sunpentown.com
www.sunpentown.com