
 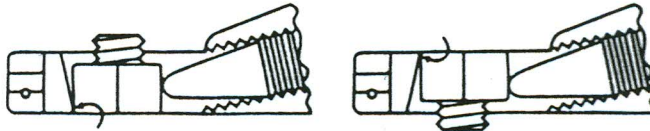


**CRAFTSMAN****94772**

## Universal Nut Cracker

To rotate the cutter blade, pull the blade out and rotate it 1/2 turn.  
Re-insert into recess in frame.



**IMPORTANT:** The cutter blade can be rotated to obtain the best cutting angle. Please note proper blade position in the applications shown above.

**NOTE:** ALWAYS WEAR SAFETY GLASSES OR EYE SHIELDS WHEN USING THIS TOOL. DO NOT USE WITH POWER TOOLS.

### FULL UNLIMITED WARRANTY ON CRAFTSMAN HAND TOOLS

If this Craftsman hand tool ever fails to provide complete satisfaction, RETURN IT TO THE NEAREST SEARS STORE OR OTHER CRAFTSMAN OUTLET and it will be replaced, free of charge.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., Dept. 817WA,  
Hoffman Estates, IL 60179

Made in U.S.A.

Sold by Sears, Roebuck and Co., Hoffman Estates, IL 60179

