


DOREL ASIA



ROCKER

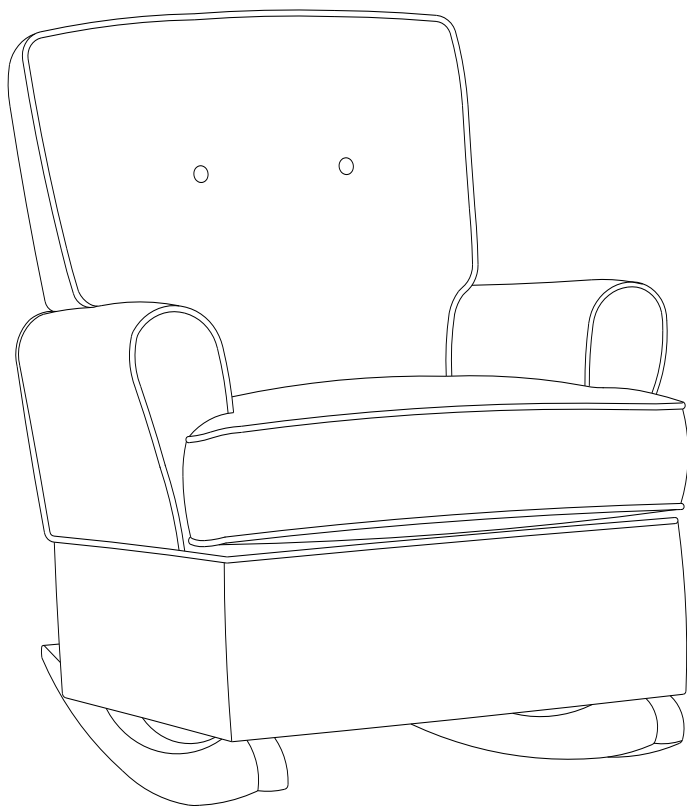

Model No:

DA6727RO-BR (Brown)

DA6727RO-BG (Beige)

DA6727RO-GR (Grey)

UPC CODE:

0-65857-16690-3 (Brown)

0-65857-16691-0 (Beige)

0-65857-16692-7 (Grey)

NOTE:

THIS INSTRUCTION BOOKLET
CONTAINS **IMPORTANT** SAFETY
INFORMATION. PLEASE READ AND
KEEP FOR FUTURE REFERENCE.

Lot number:

(TAKEN FROM CARTON)

Date of purchase:

____ / ____ / ____

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service
department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980

E-Mail: das@dorel.com

Fax #: 514-353-7819

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!



CALL 1-800-295-1980

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

**Customer Service Department No. 413
12345 Albert-Hudon Boulevard, Suite 100
Montreal, Quebec
Canada H1G 3L1**

E-MAIL: das@dorel.com

NOTES

- * Ensure all parts and components are present before beginning assembly.
- * Assemble on a clean, smooth surface to prevent damage to product finish.
- * **DO NOT** use power tools.
- * **CAUTION:** Adult assembly required.
- * Assembly and handling will require two people.
- * Estimated assembly time: 8 minutes.

CARE AND CLEANING

Dust regularly with a soft, dry cloth to prevent soil build up. Wipe away spills immediately to prevent staining. Use a cloth dampened with water or a professional product to clean the fabric. Always test an inconspicuous area first. Allow upholstery to dry and brush lightly. Keep away from heat to avoid glazing, melting or scorching.

MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

LIMITED WARRANTY

Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. Any wearing, tearing or fading of the fabric is not covered under the warranty. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.



 



WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.







ROCKER

DA6727RO-BR / DA6727RO-BG / DA6727RO-GR

HARDWARE LIST
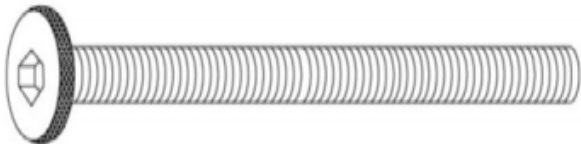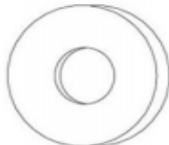
<div style="border: 1px solid black; padding: 2px; text-align: center;">1</div>  <p style="text-align: center;">Ø5/16" X 2-3/8"</p>	<div style="border: 1px solid black; padding: 2px; text-align: center;">2</div>  <p style="text-align: center;">Ø22 X 1.8mm</p>	<div style="border: 1px solid black; padding: 2px; text-align: center;">3</div>  <p style="text-align: center;">Ø12.5 X 1.5mm</p>
<p style="text-align: center;">HEX SOCKET HEAD BOLT 11 PCS</p>	<p style="text-align: center;">FLAT WASHER 11 PCS</p>	<p style="text-align: center;">SPRING WASHER 11 PCS</p>
<div style="border: 1px solid black; padding: 2px; text-align: center;">4</div>  <p style="text-align: center;">M5 X 64mm</p> <p style="text-align: center;">ALLEN KEY 1 PC</p>		

  PARTS LIST
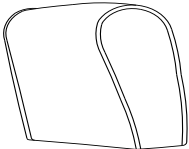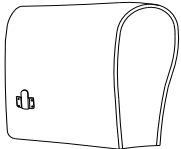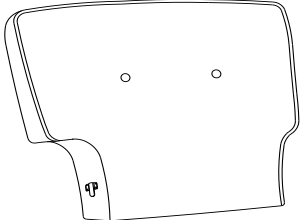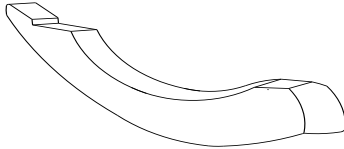
<div style="border: 1px solid black; padding: 2px; text-align: center;">A</div> 	<div style="border: 1px solid black; padding: 2px; text-align: center;">B</div> 	<div style="border: 1px solid black; padding: 2px; text-align: center;">C</div> 
<p style="text-align: center;">LEFT ARM 1 PC</p>	<p style="text-align: center;">RIGHT ARM 1 PC</p>	<p style="text-align: center;">CHAIR BACK 1 PC</p>
<div style="border: 1px solid black; padding: 2px; text-align: center;">D</div> 	<div style="border: 1px solid black; padding: 2px; text-align: center;">E</div> 	<div style="border: 1px solid black; padding: 2px; text-align: center;">F</div> 
<p style="text-align: center;">SEAT BASE 1 PC</p>	<p style="text-align: center;">SEAT CUSHION 1 PC</p>	<p style="text-align: center;">FOOT 2 PCS</p>

ROCKER


DA6727RO-BR / DA6727RO-BG / DA6727RO-GR

STEP 1:

Place all parts on a clean, smooth surface.

Place the left arm (A) onto the seat base (D). Lift the side covers on the seat base (D) to secure the left arm (A) using flat washers (2), spring washers (3) and hex socket head bolts (1). Use Allen Key (4) to tighten the bolts.

Repeat this step to assemble the right arm (B) to seat base (D).

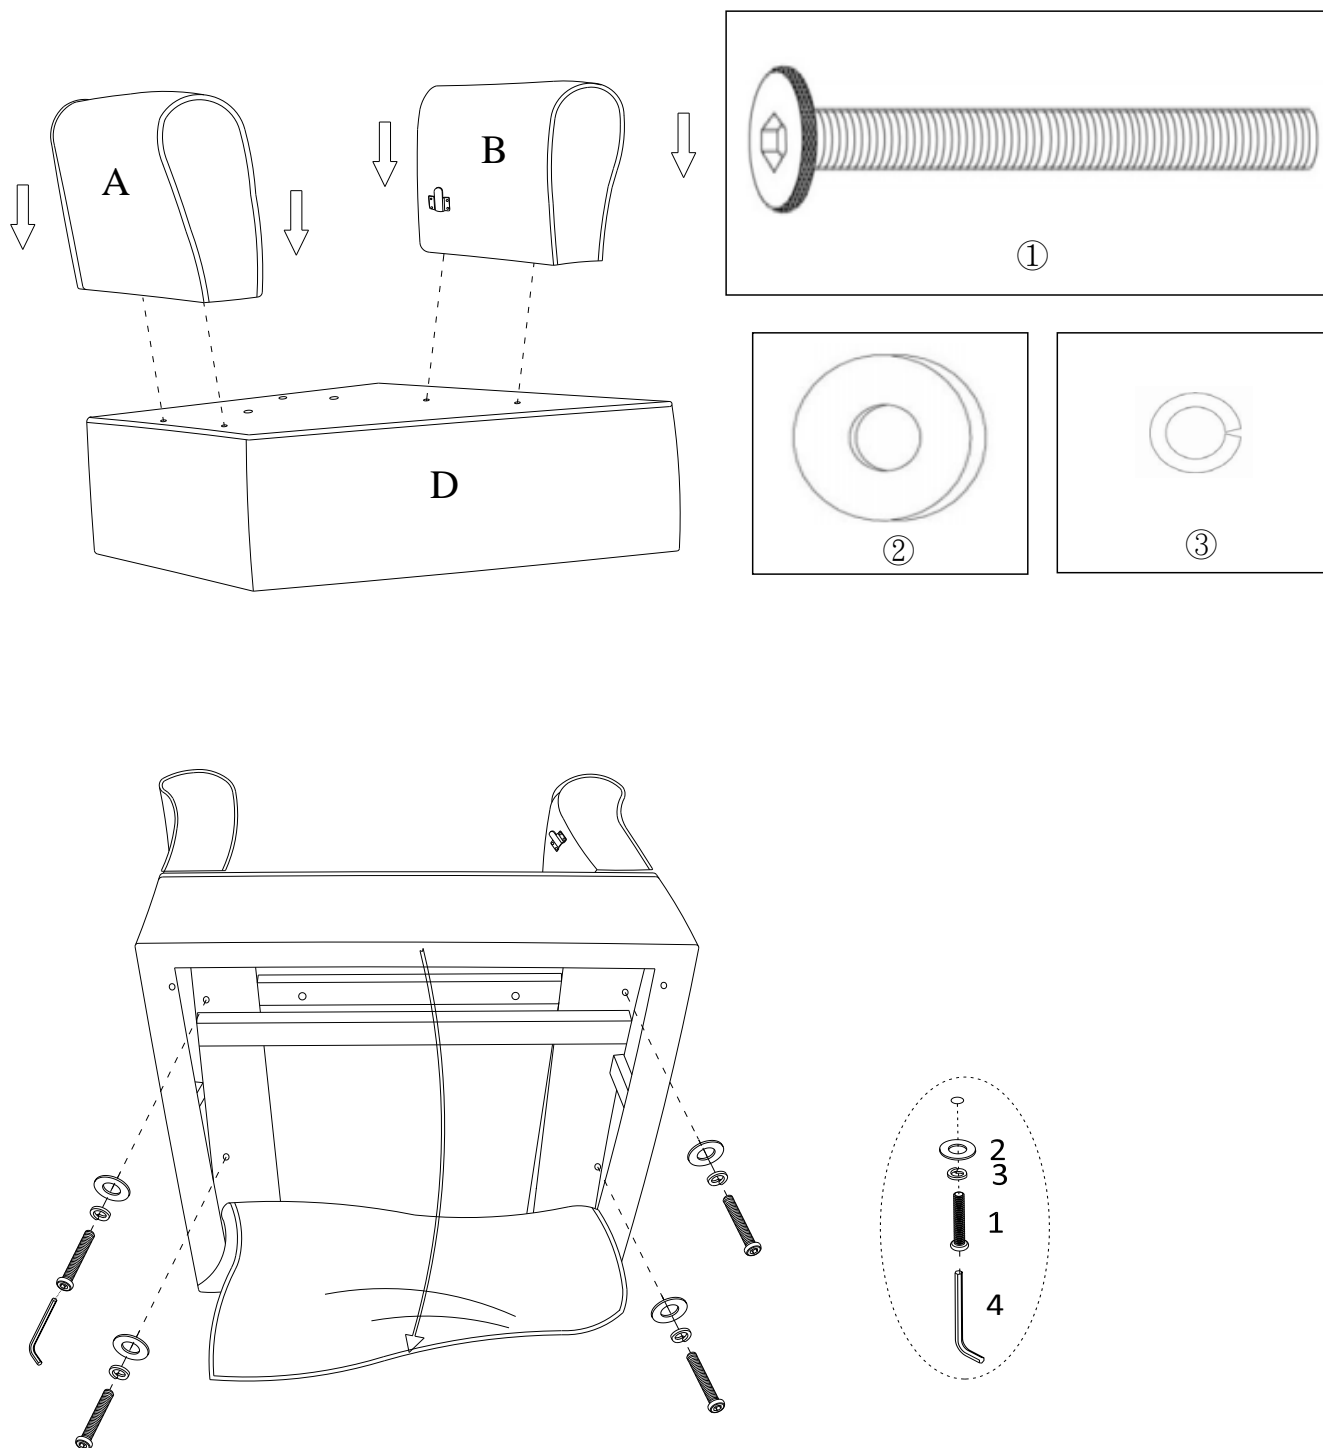


ROCKER

DA6727RO-BR / DA6727RO-BG / DA6727RO-GR

STEP 2:

Attach the chair back (C) to the assembled unit by inserting the metal brackets on chair back (C) into the metal glides on left arm (A) and right arm (B).

Push the chair back (C) with a downward force to secure it into place.

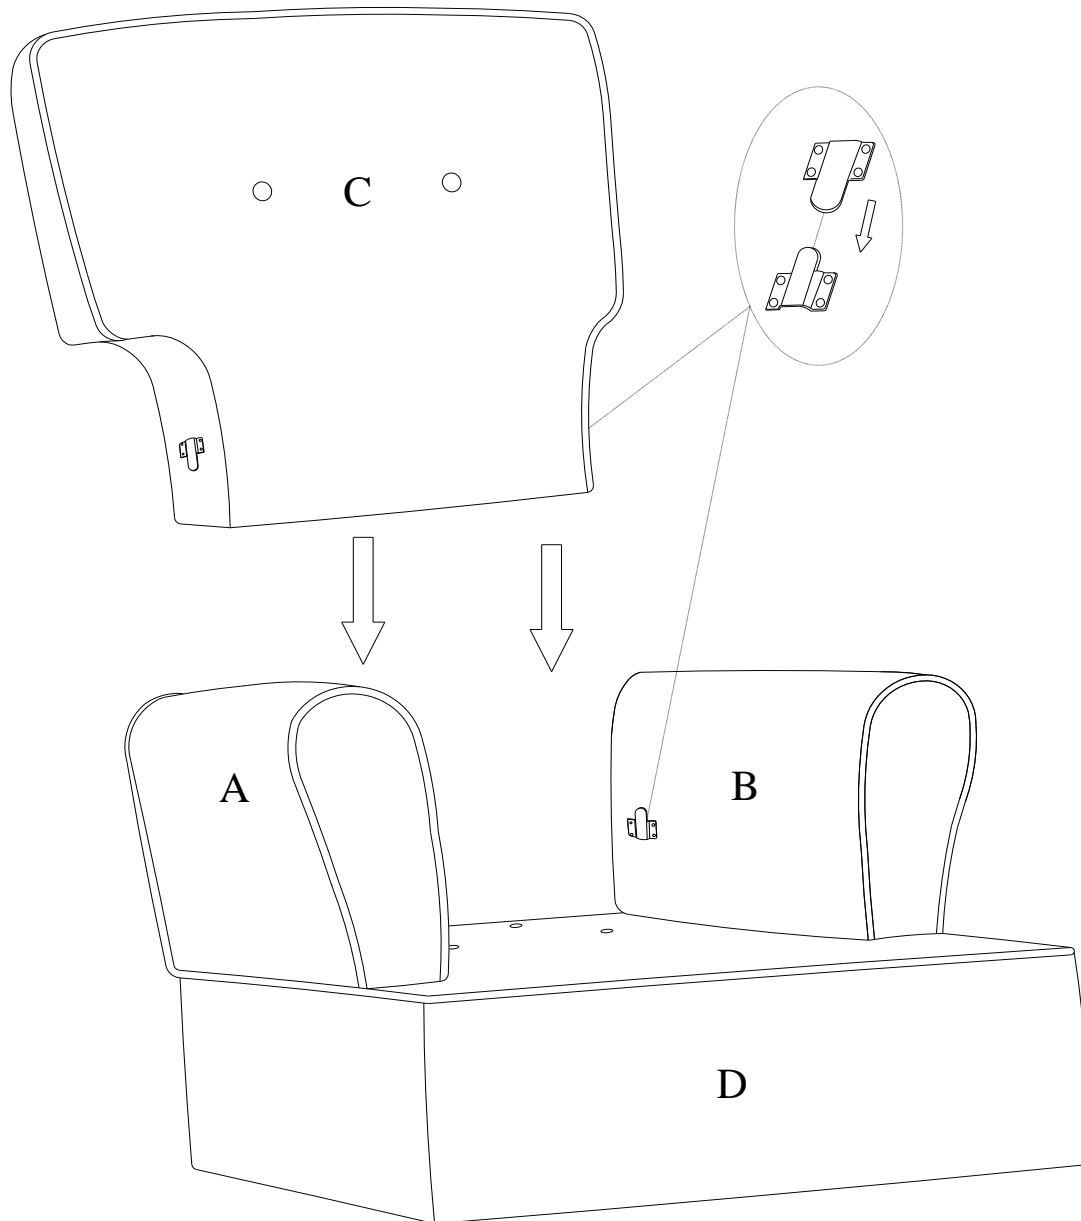







ROCKER

DA6727RO-BR / DA6727RO-BG / DA6727RO-GR

STEP 3:

With the help of another person, gently place the unit on its side and lift the fabric flap underneath seat base (D). Secure chair back (C) to seat base (D) with flat washers (2), spring washers (3) and hex socket head bolts (1). Use Allen key (4) to tighten the bolts.

Attach the fabric flap back into place using the Velcro straps.

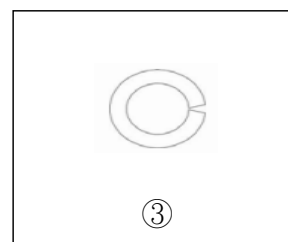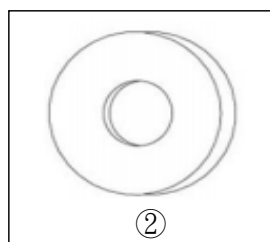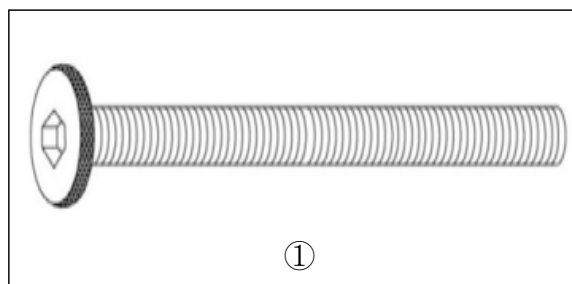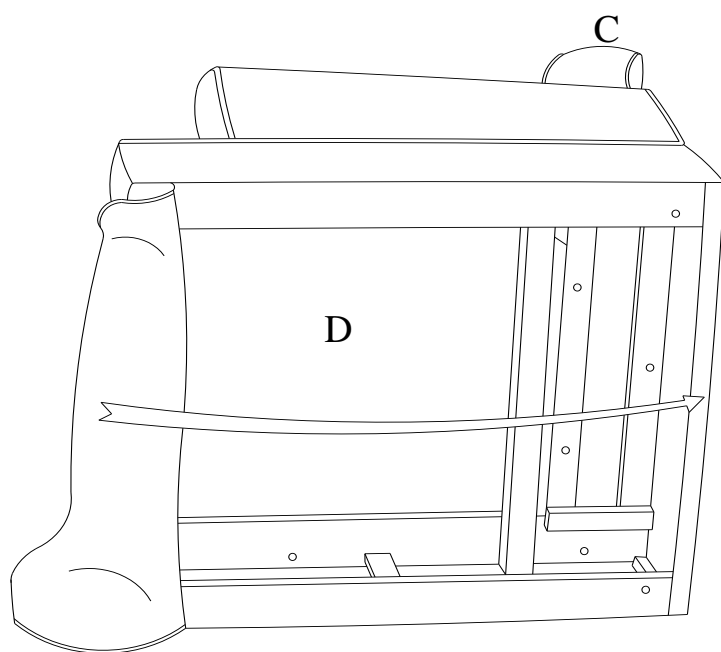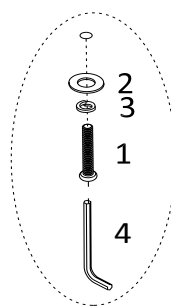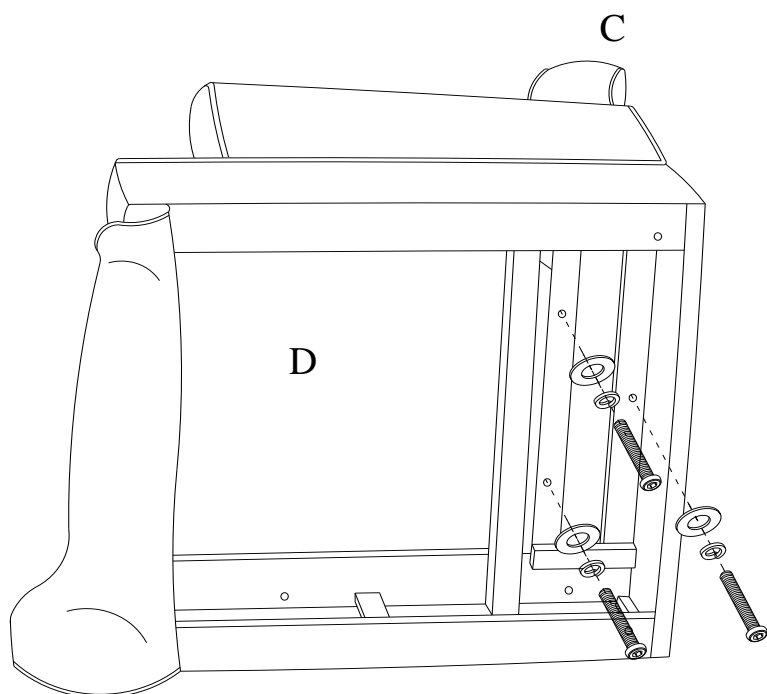

ROCKER





DA6727RO-BR / DA6727RO-BG / DA6727RO-GR

STEP 4:

Place the assembled unit on a clean, smooth surface.

Attach feet (F) to seat base (D) with flat washers (2), spring washers (3) and hex socket head bolts (1).

Use Allen key (4) to tighten the bolts.

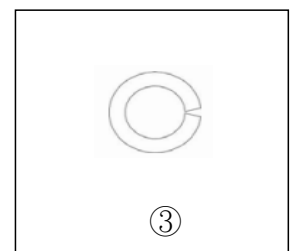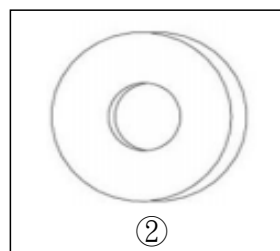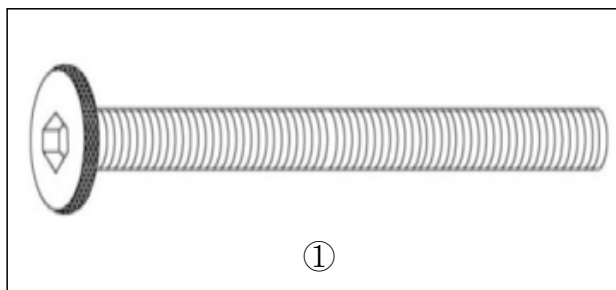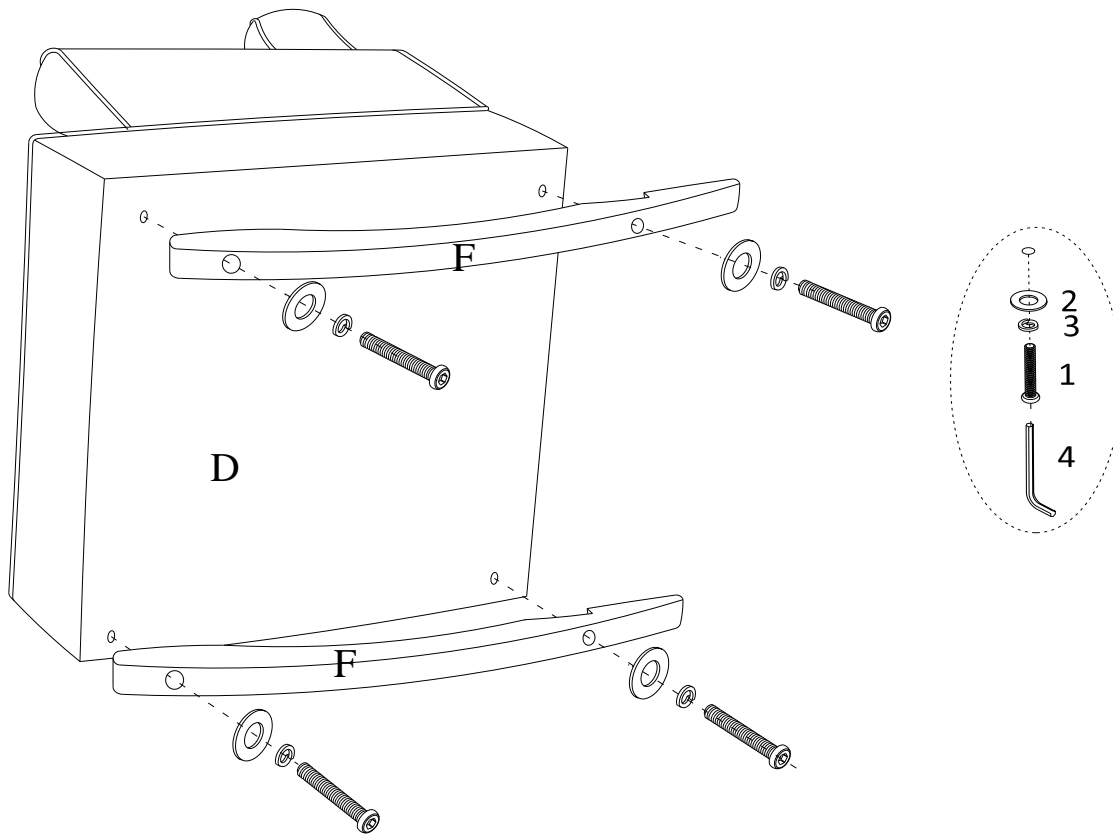


ROCKER

DA6727RO-BR / DA6727RO-BG / DA6727RO-GR

STEP 5:

Place seat cushion (E) on the rocker.

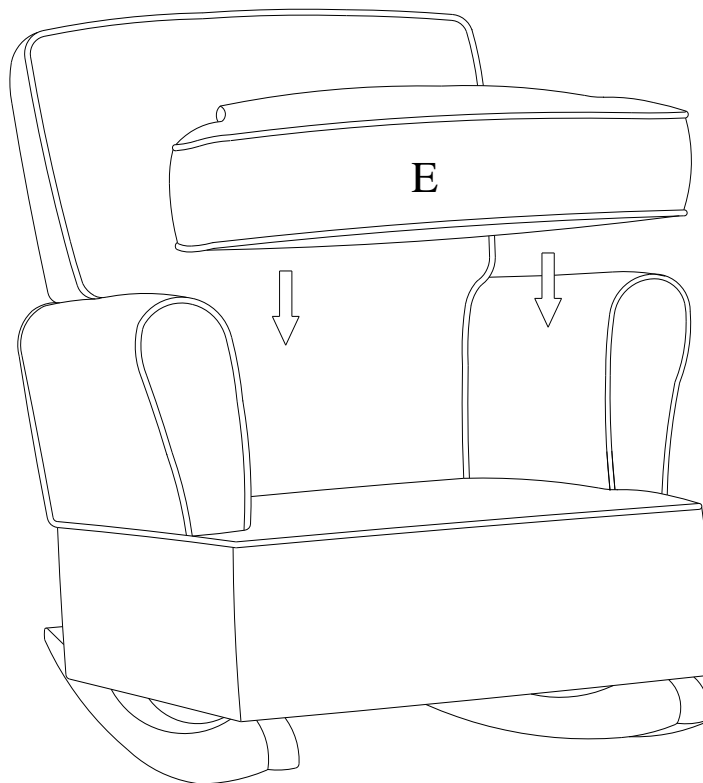


ROCKER

DA6727RO-BR / DA6727RO-BG / DA6727RO-GR



CAUTION: This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

Dust regularly with a soft, dry cloth to prevent soil build up. Wipe away spills immediately to prevent staining. Use a cloth dampened with water or a professional product to clean the fabric. Always test an inconspicuous area first. Allow upholstery to dry and brush lightly. Keep away from heat to avoid glazing, melting or scorching.

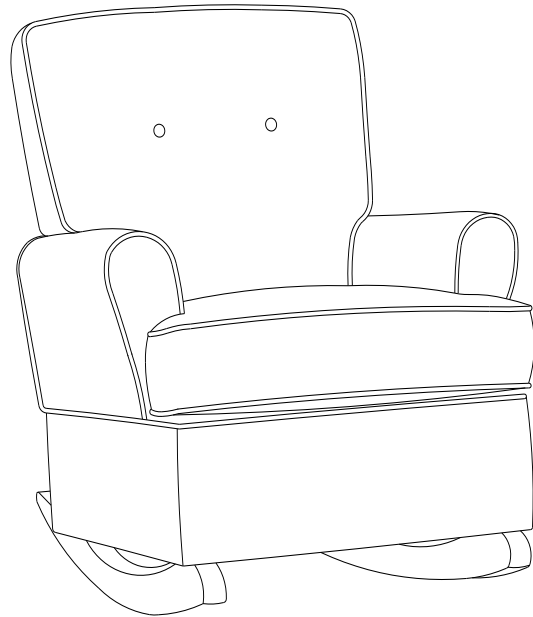

Congratulations! You've finished assembling your Rocker.

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

Customer Service Phone Number 1-800-295-1980

Email: das@dorel.com

Customer Service Fax Number 514-353-7819

Request Date:

Name:

Shipping Address:

Street & Number:

City & State:

Zip Code:

Day Time Phone Number:
(including area code)

Date & Place of Purchase:

Part(s) description and quantity (Please be sure to list model number or SKN number):

Customer Service Representative Mailing Address:

Customer Service Department No. 413, 12345 Albert-Hudon Boulevard, Suite 100, Montreal, QC, Canada, H1G 3L1