



Live life Comfortably.™



USE AND CARE GUIDE

Sears Karter 5Pc Dining Set

* Swivel Rocker

Product Code: D71 M20913

UPC Code: 7 22938 11287 6

Date of Purchase: __ / __ / __

La-Z-Boy® is a registered trademark of La-Z-Boy Incorporated and is used under license to BJI, Inc.

© 2015 La-Z-Boy Incorporated.

Thank you for your purchase

THANK YOU FOR YOUR PURCHASE!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents	2
Safety Information	3
Set up your furniture properly.....	3
Examine your furniture.....	3
Warranty	3
What is covered	3
What is not covered	3
Care and Maintenance	4
Pre-Assembly	5
Planning assembly.....	5
Observe weight limits.....	5
Hardware included	5
Package contents	6
Assembly Instruction	7
Customer Service	12

Safety Information

SET UP YOUR FURNITURE PROPERLY

- Ensure that all parts are assembled properly and fully tightened as per the instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.



CAUTION: Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!

EXAMINE YOUR FURNITURE

- Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

Warranty

THIS IS A RESIDENTIAL WARRANTY AND DOES NOT APPLY FOR COMMERCIAL USE.

7 YEARS WARRANTY FOR FRAME, 1 YEAR WARRANTY FOR CUSHIONS

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for 7 years, cushions for 1 year.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center.

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use.

Discoloration or fading of the finish or fabrics as a result of chemicals or spills is not covered.

Glass table top breakage and corrosion or rusting of hardware are not covered.

In addition, purchase parts are not covered under this warranty.

Warranty (continued)

Proof of purchase (dated register receipt) is required for warranty claims.

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

For a copy of our full limited warranty, please contact our customer service team below.

Contact the Customer Service Team at 1-866-391-4868 or visit www.bjifurniture.com.

Care and Maintenance

- Do not allow water to build up in frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. DO NOT use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients can cause discoloration or have adverse reaction to your finish.
- Rinse with clean water and dry with a soft, absorbent cloth towel.
- Cushions, slings, and/or an umbrella may be cleaned by hand with a solution of soap and water with a clean water rinse. Never machine wash as this will result in shrinking or damage. After cleaning, tip on end and allow to drip dry. Never use a commercial or home dryer to tumble dry fabric goods.
- Treat frames with liquid wax for maximum protection against UV rays and /or salty, damp air.
- Umbrella should be closed when not in use. Umbrella should be removed and stored in the event of wind, rain, hail, sleet, snow, or any other inclement weather. To prevent damage to your table, always use an umbrella base with your umbrella. Store indoors during winter months.
- Use and operation: To prolong the life of your outdoor furniture, cover when not in use. Store indoors during winter months.

Pre-Assembly

PLANNING ASSEMBLY

PLEASE READ COMPLETE USE AND CARE GUIDE PRIOR TO ASSEMBLY!

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a nonabrasive surface to avoid scratching. It takes about 45 minutes for three persons to complete all the assembly.



NOTE: More than one person may be required to complete the assembly of this product.

OBSERVE WEIGHT LIMITS

 
The recommended weight limit for each item is listed below:

- Swivel Rocker: 300 lbs

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

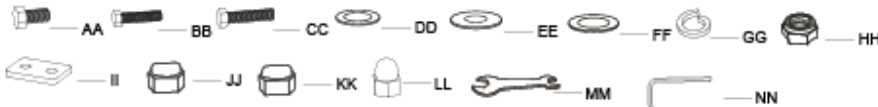

Part	Description	Quantity
AA	M6*17mm hex head bolt	16
BB	M6*50mm hex/allen head bolt	16
CC	M8*40mm hex head bolt	16
DD	M6 washer (small)	24
EE	M6 washer (large)	8
FF	M8 washer	32
GG	Lock washer	16
HH	M8 nut	16
II	Steel plate	16
JJ	M6 plastic cap	32
KK	M8 plastic cap	16
LL	Nut cap	16
MM	Hex wrench	8
NN	Allen wrench	4

Pre-Assembly (continued)


PACKAGE CONTENTS

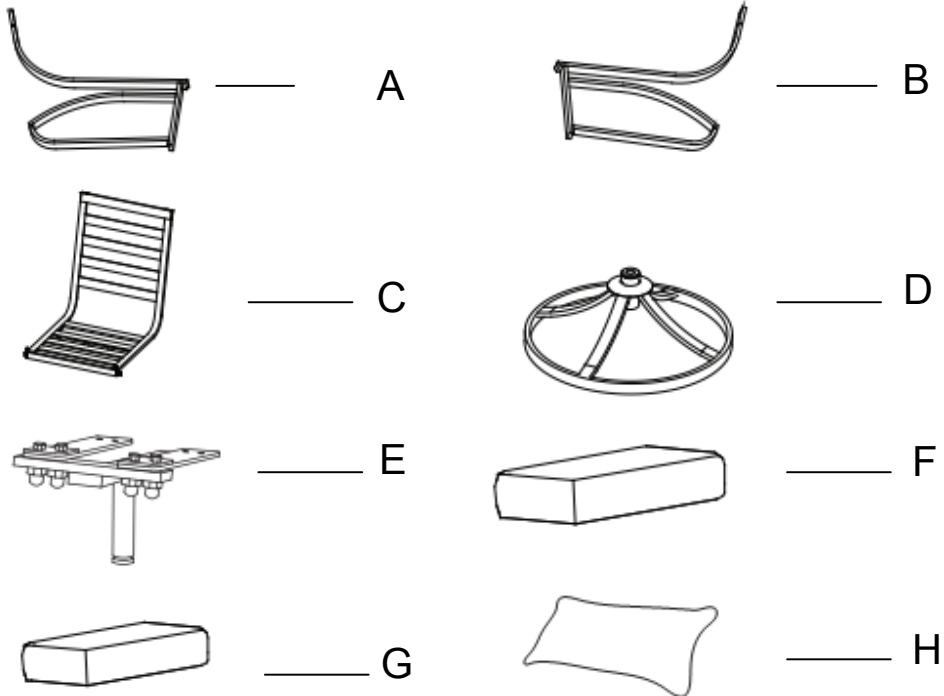

Part	Description	Quantity
A	Left arm	4
B	Right arm	4
C	Seat and back frame	4
D	Base	4
E	T-Rocker	4
F	Seat cushion	4
G	Back cushion	4
H	Lumbar Pillow	4



 Safety Information

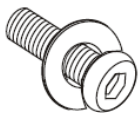

- EVERY BOLT NEEDS TO BE USED WITH A WASHER.
- DO NOT FULLY TIGHTEN BOLT UNTIL INDICATED IN **STEP 2 AND 3.**

Assembly Instruction


1 Attaching the right arm



NOTE: Do not fully tighten the bolts.

- Place the back/seat frame (C) on a sofa, flat non-abrasive surface.
- Attach the right arm (B) to the top and middle of the back/seat frame (C) with M6 allen/hex bolts (BB) and M6 small washers (DD).
- Attach the right arm (B) to the front of back/seat frame (C) with M6 hex bolts (AA), M6 small washer (DD) and M6 large washer (EE).

AA x 2 BB x 2 DD x 3 EE x 1

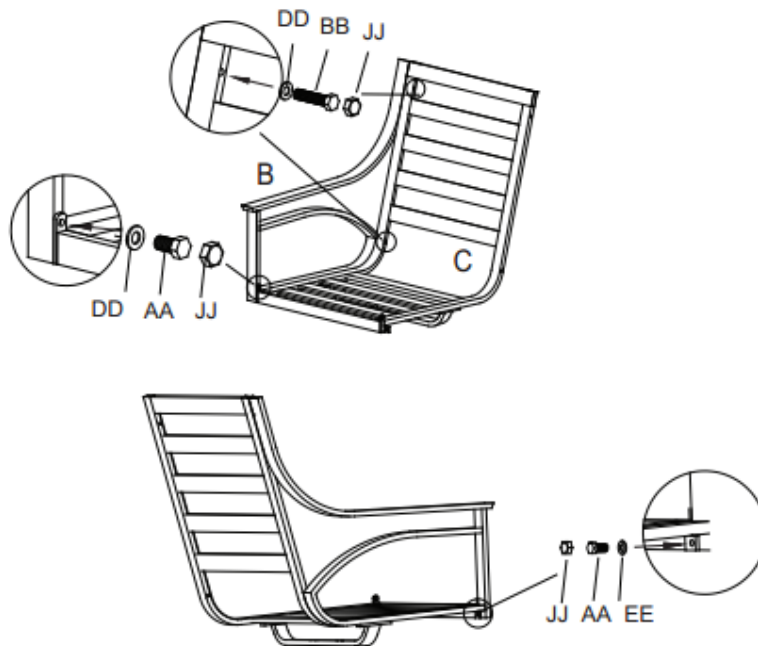


Assembly Instruction (continued)

2 Attaching the left arm



NOTE: Do not fully tighten the bolts.


- Attach the left arm (A) to the top and middle of the back/seat frame (C) with M6 allen/hex bolts (BB) and M6 small washers (DD).
- Attach the left arm (A) to the front of back/seat frame (C) with M6 hex bolts (AA), M6 small washer (DD) and M6 large washer (EE).
- Ensure all bolts are aligned and assembled correctly.
- Tighten all M6 allen/ hex bolts (BB) with the allen wrench (NN) and the M6 hex bolts (AA) with the hex wrench (MM). Attach the M6 plastic caps (JJ).

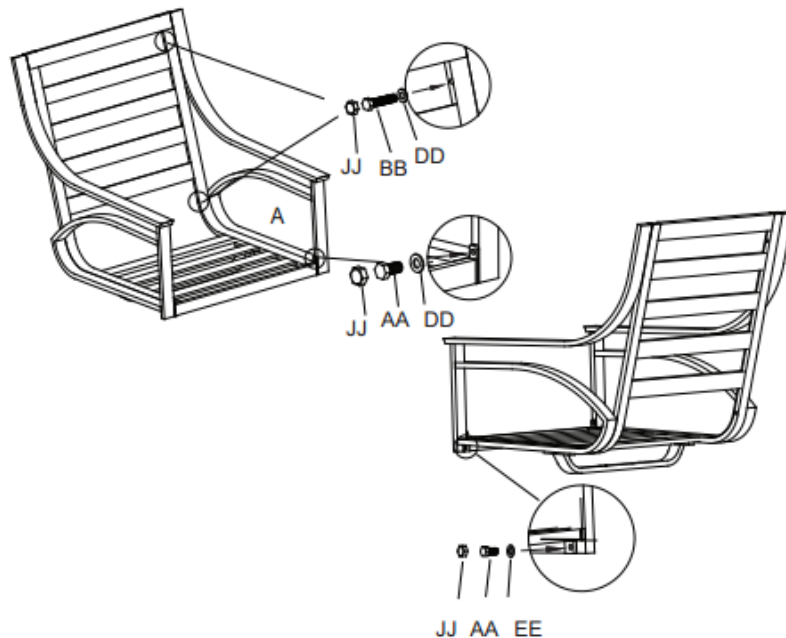

Assembly Instruction (continued)

3 Attaching the T-Rocker


- Turn the chair bucket over and place the front side down.
- Attach the T-Rocker (E) to the U bar on the back/seat frame (C) using M8 hex bolts (CC), M8 washers (FF), steel plate (II), M8 lock washer (GG) and M8 nut (HH). The sequence should be M8 hex bolts (CC), M8 washer (FF), steel plate (II), back/seat frame (C), T-rocker (E), steel plate (II), M8 washer (FF), M8 lock washer (GG) and M8 nut (HH).
- Ensure all bolts are aligned and assembled correctly.
- Tighten all M8 bolts (CC) and M8 nuts (HH) with the hex wrench (MM). Attach the M8 plastic caps (KK) to M8 bolts (CC) and nut cap (LL) to M8 nut (HH).

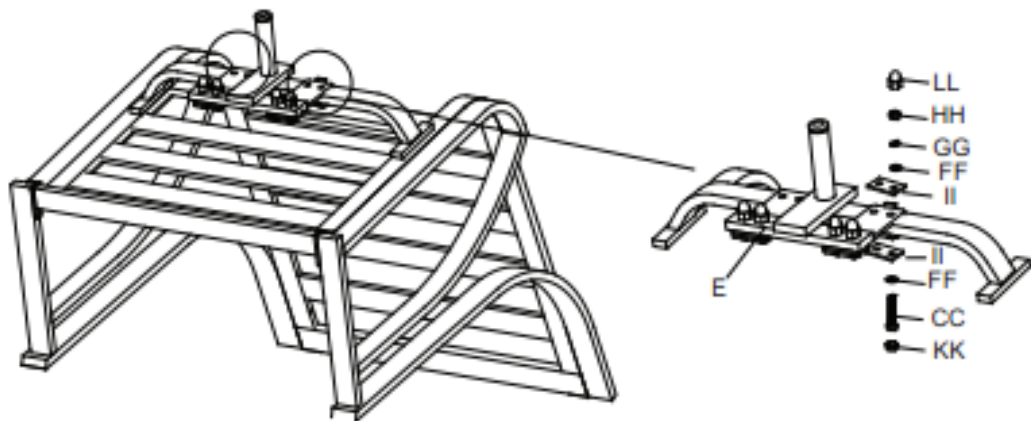

Assembly Instruction (continued)

4 Inserting the T-Rocker


- Place the base (D) on a flat surface.
- With the assistance of another person carefully turn the seat bucket with the T-Rocker over.
- Align the chair seat with the center of the base (D).
- Insert the T-Rocker (E) into the base (D). Make sure the seat bottoms out in the base for safety.

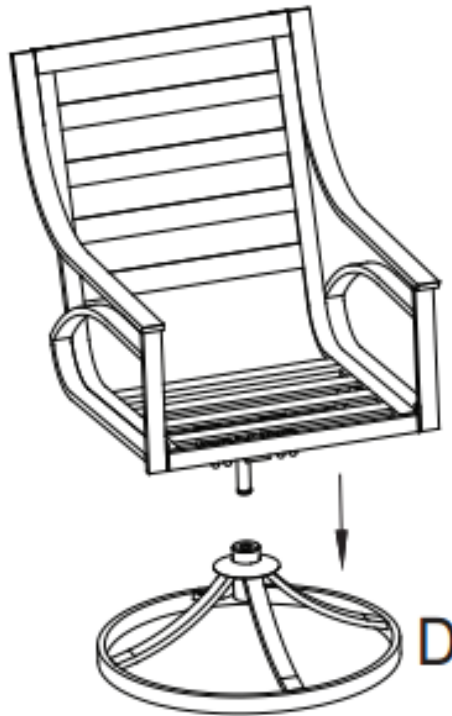

Assembly Instruction (continued)

5 Placing the cushions

- Place the seat cushions (F), back cushions (G) and lumbar pillows (H) onto the rocker.
- Repeat these instructions to assemble the other three swivel rockers.
- The swivel rockers are ready for your enjoyment.

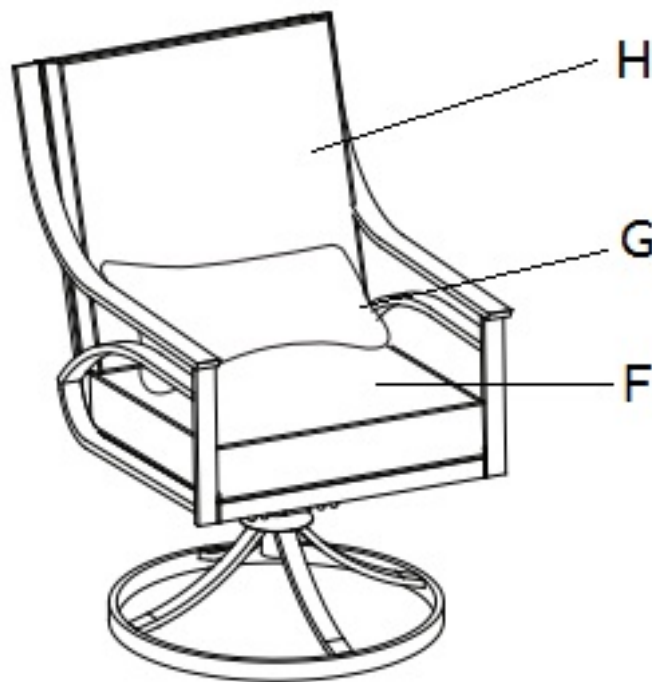

sears

Please refer to part number when reordering

Questions, problems, missing parts? Before returning to the store,
call our Customer Service
8 a.m. - 5 p.m., EST, Monday-Thursday
8 a.m. – 4 p.m., EST, Friday

1-866-391-4868

Made in/ Hecho en CHINA


Distributed by Sears, Roebuck and Co., Hoffman Estates, IL60179

See our extensive assortment of outdoor living products on-line
at www.sears.com and www.kmart.com

Retain this manual for future use.



Live life Comfortably.™

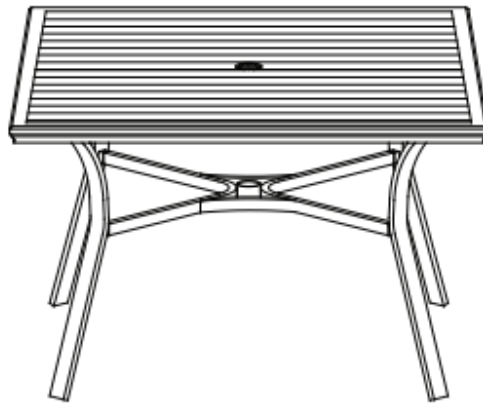

USE AND CARE GUIDE

Sears Karter 5Pc Dining Set

* Dining Table

Product Code: D71 M20913

UPC Code: 7 22938 11287 6

Date of Purchase: ___ / ___ / ___

La-Z-Boy® is a registered trademark of La-Z-Boy Incorporated and is used under license to BJI, Inc.

© 2015 La-Z-Boy Incorporated.

Thank you for your purchase

THANK YOU FOR YOUR PURCHASE!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents	2
Safety Information	3
Set up your furniture properly.....	3
Examine your furniture	3
Warranty	3
What is covered	3
What is not covered	3
Care and Maintenance	4
Pre-Assembly	5
Planning assembly.....	5
Observe weight limits	5
Hardware included	5
Package contents	6
Assembly Instruction	7
Customer Service	10

Safety Information

SET UP YOUR FURNITURE PROPERLY

- Ensure that all parts are assembled properly and fully tightened as per the instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.



CAUTION: Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!

EXAMINE YOUR FURNITURE

- Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.



WARNING: 1. Do not crawl, stand, or sit on table tops.
2. Do not set or lay heavy items on table tops.
3. Avoid extreme hot & cold items being placed on table tops.

Warranty

THIS IS A RESIDENTIAL WARRANTY AND DOES NOT APPLY FOR COMMERCIAL USE.

7 YEARS WARRANTY FOR FRAME

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for 7 years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center.

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use.

Discoloration or fading of the finish or fabrics as a result of chemicals or spills is not covered.

Glass table top breakage and corrosion or rusting of hardware are not covered.

In addition, purchase parts are not covered under this warranty.

Warranty (continued)

Proof of purchase (dated register receipt) is required for warranty claims.

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

For a copy of our full limited warranty, please contact our customer service team below.

Contact the Customer Service Team at 1-866-391-4868 or visit www.bjifurniture.com.

Care and Maintenance

- Do not allow water to build up in frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. DO NOT use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients can cause discoloration or have adverse reaction to your finish.
- Rinse with clean water and dry with a soft, absorbent cloth towel.
- Cushions, slings, and/or an umbrella may be cleaned by hand with a solution of soap and water with a clean water rinse. Never machine wash as this will result in shrinking or damage. After cleaning, tip on end and allow to drip dry. Never use a commercial or home dryer to tumble dry fabric goods.
- Treat frames with liquid wax for maximum protection against UV rays and /or salty, damp air.
- Umbrella should be closed when not in use. Umbrella should be removed and stored in the event of wind, rain, hail, sleet, snow, or any other inclement weather. To prevent damage to your table, always use an umbrella base with your umbrella. Store indoors during winter months.
- Use and operation: To prolong the life of your outdoor furniture, cover when not in use. Store indoors during winter months.

Pre-Assembly

PLANNING ASSEMBLY

PLEASE READ COMPLETE USE AND CARE GUIDE PRIOR TO ASSEMBLY!

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a nonabrasive surface to avoid scratching. It takes about 45 minutes for three persons to complete all the assembly.



NOTE: More than one person may be required to complete the assembly of this product.

OBSERVE WEIGHT LIMITS

The recommended weight limit for each item is listed below:

- Swivel Rocker: 300 lbs

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.



Part	Description	Quantity
AA	M6*15mm hex bolt	8
BB	M6*30mm hex bolt	8
CC	M6 washer (small)	8
DD	M6 washer (large)	8
EE	M6 plastic cap	16
FF	Hex wrench	1

Pre-Assembly (continued)

PACKAGE CONTENTS



A



B




C

Part	Description	Quantity
A	Table top	1
B	Leg connector	1
C	Table leg	4



 Safety Information

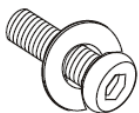

- EVERY BOLT NEEDS TO BE USED WITH A WASHER.
- DO NOT FULLY TIGHTEN BOLT UNTIL INDICATED IN **STEP 2**.


Assembly Instruction

1 Attaching the connector



NOTE: Do not fully tighten the bolts.


- Place the leg on a soft, flat non-abrasive surface.
- Attach the leg connector (B) to the leg (C) using M6 hex bolts (AA) and M6 small washers (CC).

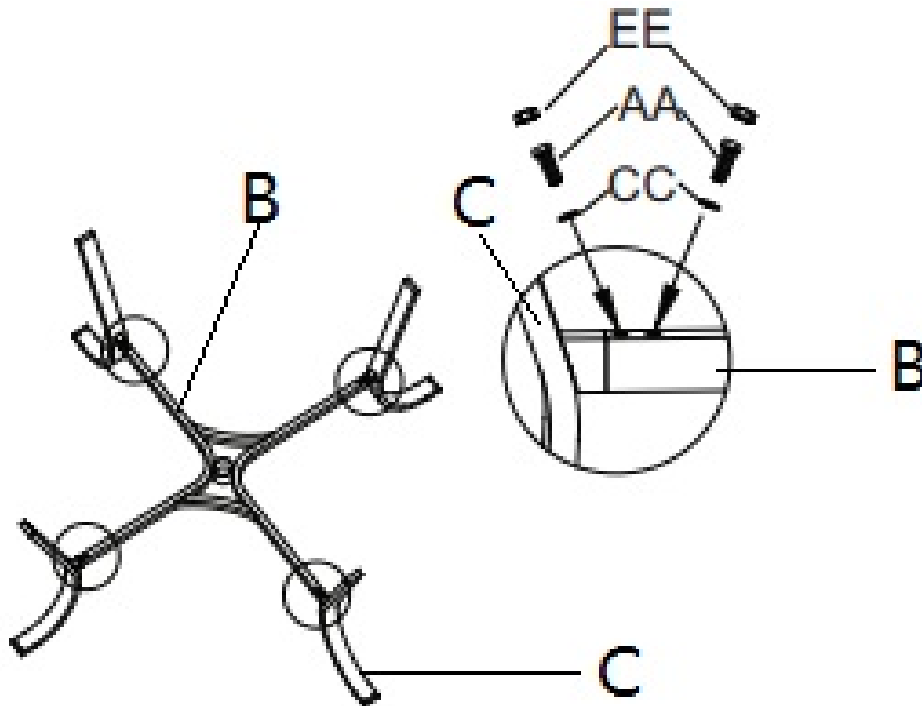

Assembly Instruction (continued)

2 Attaching the table top

- Attach the leg (B) to the table top (A) by using M6 hex bolts (BB) and M6 large washers (DD).
- Ensure all bolts are aligned and assembled correctly.
- Tighten all M6 hex bolts (AA) & (BB) with the hex wrench (FF). Attach the M6 plastic caps (EE).

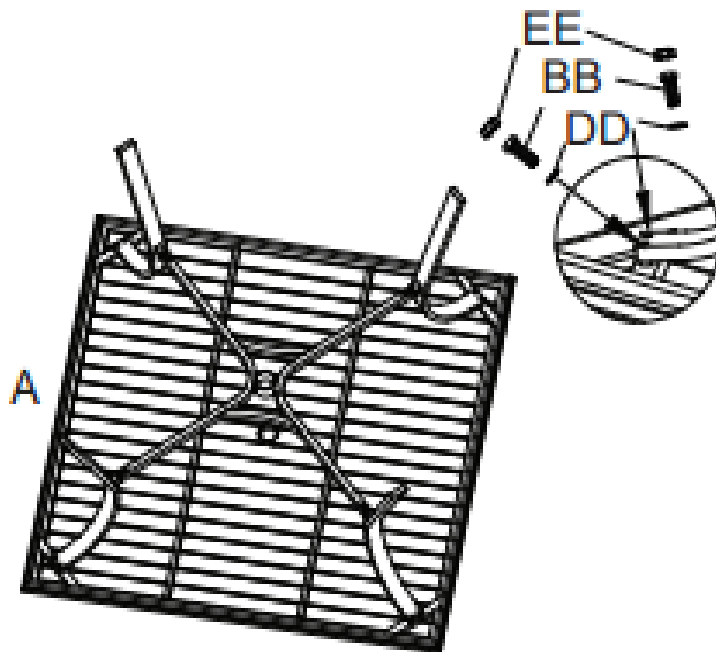

Assembly Instruction (continued)


3 Positioning the table

- Carefully turn the table over and set it down on its legs.
- The dining table is ready for your enjoyment.

WARNING:



1. Do not crawl, stand, or sit on table tops.
2. Do not set or lay heavy items on table tops.
3. Avoid extreme hot & cold items being placed on table tops.

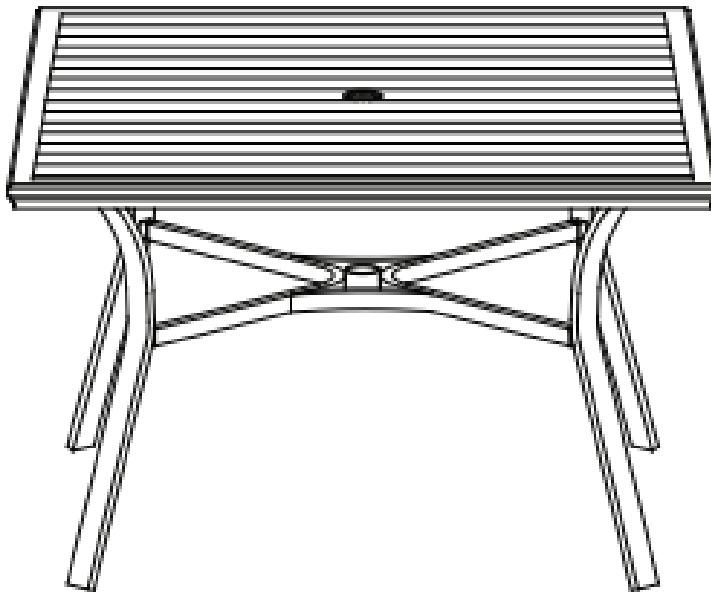

sears

Please refer to part number when reordering

Questions, problems, missing parts? Before returning to the store,
call our Customer Service

8 a.m. - 5 p.m., EST, Monday-Thursday

8 a.m. – 4 p.m., EST, Friday

1-866-391-4868

Made in/ Hecho en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL60179

See our extensive assortment of outdoor living products on-line

at www.sears.com and www.kmart.com

Retain this manual for future use.