

USE AND CARE GUIDE

EMERY 3PCS BISTRO SET-RED

Product code: D71 M30442 UPC code: 471 333112 177 6 Vendor Item: SC-K-429N-1S/3-R

Date of purchase: ____/ ____/

Thank you for your purchase

Thank you for your purchase

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents2
Safety Information 3
Set Up your Furniture Properly3
Examine your furniture3
Warranty 3
Care and Maintenance 4
Pre-Assembly4
Planning Assembly4
Observe weight Limits4
Hardware Included 4
Assembly Instructions
Package Contents 5
Chair 6
Table 8
Customer Service 9

Safety Information

SET UP YOUR FURNITURE PROPERLY

Ensure that all parts are assembled properly and fully tightened as per the instructions
When placing in the desired location, ensure that all legs are resting on the same
surface. You may adjust the legs levelers as required to ensure that the item stands
in a rigid position.

EXAMINE YOUR FURNITURE

□ Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

Warranty

WARRANTY

We warrant our products to be free of manufacturing defects to the original purchaser for the period listed below. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

EXCLUSIONS

This warranty does not cover: Furniture used for commercial or non-residential purposes; failures caused by improper care; unreasonable or abusive use; freeze damage; acts of nature. Steel products are not covered against rust. Tempered glass table tops are not covered against breakage.

FINISH

Frame finish is warranted to be free of manufacturing defects for a period of one (1) year. Discoloration or fading of the finish as a result of exposure to the elements, chemicals, or spills is not covered.

FABRIC

Fabric is warranted to be free of manufacturing defects for a period of one (1) year. Discoloration or fading of the finish as a result of exposure to the elements, chemicals, or spills is not covered.

FRAMES

Frame is warranted to be free from defects in material or workmanship for a period of one (1) year for steel frame.

FREIGHT & PACKAGING

Freight and packaging are the responsibility of the original purchaser.

CUSTOMER SERVICE

In case of a problem, call 1-800-457-4652 between 9:00 am to 5:00 pm Eastern standard time Monday through Friday or contact us at www.numarkcustomerservice.com for any question or problems you may have.

Care and Maintenance

- ☐ Though its powder-coated finish is rust-resistant, steel is prone to rust over time with exposure to the elements. In case of rust or scratches, lightly sand the affected area and apply touch-up paint. To maintain the finish periodically apply wax with a soft cloth.
- □ Tabletop ceramic tiles must be stored during fall and winter months in a dry location where temperatures will not fall below 32°F (0°C).
- □ Wash frames and cushions with a mild solution of soap and water; rinse thoroughly. Dry completely and drip-dry cushions. Do not use bleach or solvents.

Pre-Assembly

PLANNING ASSEMBLY

Read through all the instructions before beginning assembly. Unpack and identify all the parts. Place them on a flat, non-abrasive surface. Assembly by two people is recommended.

OBSERVE WEIGHT LIMITS

The recommended weight limits for the following products are listed below:

☐ Table: 50 lbs☐ Chair: 225 lbs




CAUTION: If you overload your furniture, injuries can occur.

HARDWARE INCLUDED



NOTED: Hardware not shown to actual size.

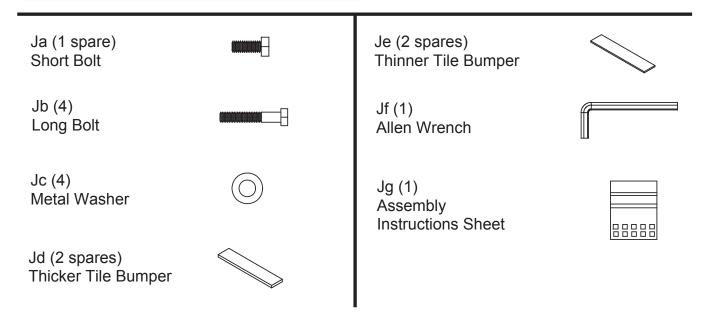

Pre-Assembly




A Safety Information

Do not completely tighten bolts and nuts until indicated in assembly step.


Assembly Instructions

Package Contents

ITEM	DESCRIPTION	QUANTITY
Α	Swivel Top	2
В	Center Post	2
С	Swivel Base	2
D	Seat Cushion	2
Ε	Back Cushion	2

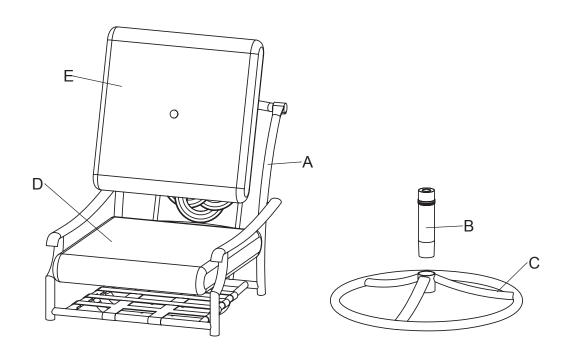


1 Inserting the center post to the swivel base

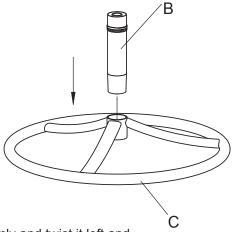


• Push the center post (B) down firmly and twist it left and right as necessary.

2 Pushing the swivel top into the center post

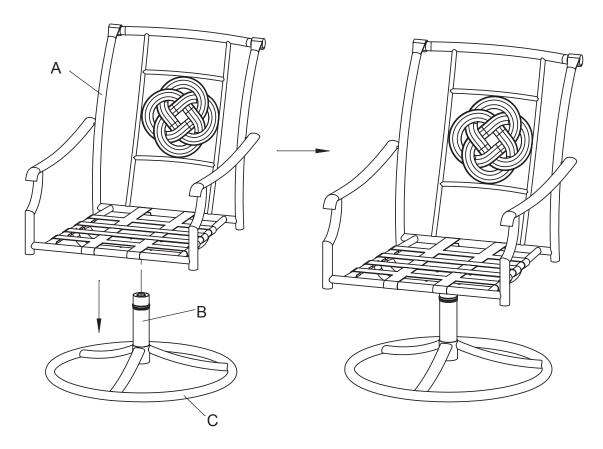


3 Putting cushion onto the swivel frame

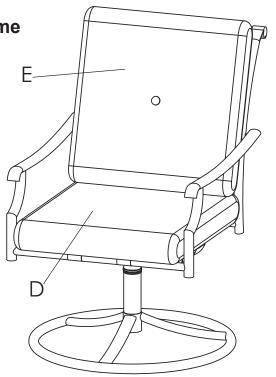


• Repeat procedure for the other swivel.

Package Contents

ITEM	DESCRIPTION	QUANTITY
F	Table Rim (8 Metal Washers	3 1
	and 8 Bolts attached)	
G	Metal Leg	4
Н	Metal Center Ring	1
I	Tile	1 + 1 spare

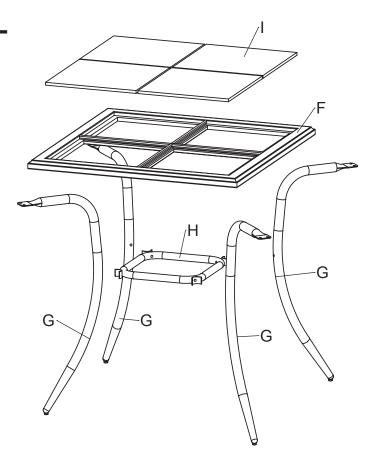


1 Attaching the leg to the table rim

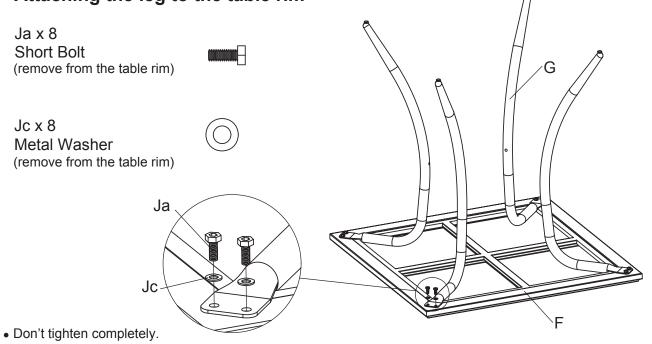


2 Attaching the metal center ring to the leg


• Repeat procedure for the other three legs.

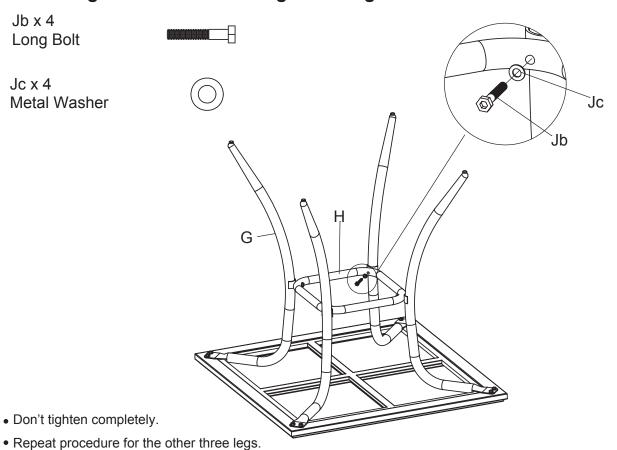

3 Putting tiles into the table rim

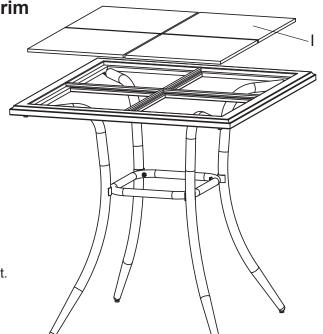

- Turn over the whole table and keep flat.
- Securely tighten all bolts diagonally.
- Put the tile (I) into the table rim.

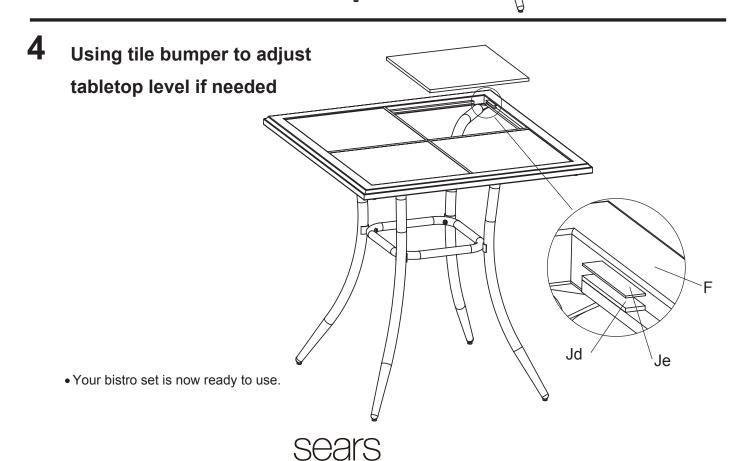

Please refer to part numbers when reordering

For questions or comments about product: Call toll-free: 1-800-457-4652

between 9:00 am to 5:00 pm Eastern standard time Monday through Friday or contact us at www.numarkcustomerservice.com

Made in / Hech en CHINA Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products on-line at www.sears.com and www.kmart.com