

## MW1327 WICKER FIRE PIT



**WARNING**  
**FOR YOUR SAFETY:**  
**For Outdoor Use Only**



**WARNING**  
**For your Safety:**

1: Improper installation, adjustment, alteration service or maintenance can cause injury or property damage.

2: Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.

3: Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury or death.

**Save these instructions for future reference. If you are assembling this unit for someone else, Give this manual to him or her to read and save for future reference.**

## Table Of Contents

Important Safeguards	1
Part List	3
Assembly Instruction	4
Operating Instructions	5
Warranty Details	6



**WARNING**  
**FOR YOUR SAFETY**



 





 
 
 

1. This appliance is for outdoor use only, and shall NOT be used in a building, garage, or any other enclosed area.
2. Do NOT use this outdoor fire pit for indoor heating. TOXIC carbon monoxide fumes can accumulate and cause asphyxiation.
3. This outdoor fire pit is NOT for commercial use.
4. This outdoor fire pit is NOT to be operated by children.
5. This outdoor fire pit is NOT to be used in or on boats or recreational vehicles.
6. Always use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor burning.
7. When using this outdoor fire pit, exercise the same precautions you would with any open fire.
8. The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate this outdoor fire pit.
9. Do NOT use this outdoor fire pit without reading the entire "Owner's Manual".
10. This outdoor fire pit is for use with dry, seasoned hardwood. It will burn hotter, more completely and create less smoke.
11. Do NOT burn charcoal briquets, lump charcoal, manufactured logs, driftwood, trash, leaves, paper, cardboard, plywood, painted or stained or pressure treated wood. Avoid using softwoods such as pine or cedar that can throw sparks.
12. Do NOT alter this outdoor fire pit in any manner.
13. Do NOT use this outdoor fire pit until it is COMPLETELY assembled and all parts are securely fastened and tightened.
14. Do NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.
15. Do NOT store or use an LP gas cylinder within 10 feet (3.05 m) of this outdoor fire pit while it is in operation.
16. Do NOT use this outdoor fire pit near automobiles, trucks, vans or recreational vehicles.
17. Do NOT use in an explosive atmosphere. Keep outdoor fire pit area clear and free from combustible materials, gasoline and other flammable liquids.
18. Do NOT use this outdoor fire pit under any overhead or near any unprotected combustible constructions. Avoid using near or under overhanging trees and shrubs.
19. Always use this outdoor fire pit on a hard, level non-combustible surface such as concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose. Do NOT use on wooden decks.
20. Always empty this outdoor fire pit before each use. Leave a thin layer of ash to protect the bottom.
21. Do NOT wear flammable or loose clothing when operating this outdoor fire pit.
22. Do NOT use in windy conditions.



23. Do NOT use this outdoor fire pit unless spark guards are securely in place.
24. Do NOT use gasoline, kerosene, diesel fuel, lighter fluid or alcohol to light or relight fires.
25. Keep all electrical cords away from a hot fire pit.
26. All surfaces of this outdoor fire pit are hot when in operation. To avoid burns, do NOT touch fire pit until it has completely cooled unless you are wearing protective gear (Potholders, gloves, BBQ mittens, hot pads & etc.). Never touch ashes or coals to see if they are hot.
27. Do NOT leave a lit outdoor fire pit unattended, especially around children and pets
28. Do NOT attempt to move or store this outdoor fire pit until all ashes and coals are completely extinguished.
29. Do NOT remove ashes or coals until they are completely and fully extinguished.
30. Use heat-resistant gloves or hot pads when contacting handles.
31. Use long, sturdy fire pit tools when adding or moving logs.
32. Do NOT place wood directly into bottom of the outdoor fire pit. Place wood only on the wood grid.
33. Do NOT overload the fire pit. Do not add additional firewood until the fire burns down. NOTICE: If any portion of the bowl, lid or spark guards of this outdoor fire pit are glowing red it is overloaded.
34. Do NOT lean over this outdoor fire pit when lighting or when in use.
35. Do NOT place a hot spark guard or hot fire pit tools onto combustible surfaces such as grass, wooden deck or furniture.
36. Avoid breathing smoke from the fire and avoid getting it into your eyes.
37. This outdoor fire pit should be thoroughly inspected and cleaned on a regular basis.
38. After a period of storage and/or non-use, check for signs of damage and creosote build-up. Do NOT operate until necessary repairs and/or cleanup are executed.
39. Deaths, serious injury or damage to property may occur if the above is not followed exactly.

 


## Part List

 
 
A	4	Guard Rail		F	4	Bracket	
B	4	Legs		G	1	Mesh Lid Linker	
C	1	Fire Bowl		H	1	Mesh Lid	
D	1	Charcoal Rack		I	1	Poker	
S1	4	Bolt		S2	8	Screw	
S3	9	Wing Nut		S4	4	Wing Screw	



# Assembly Instructions

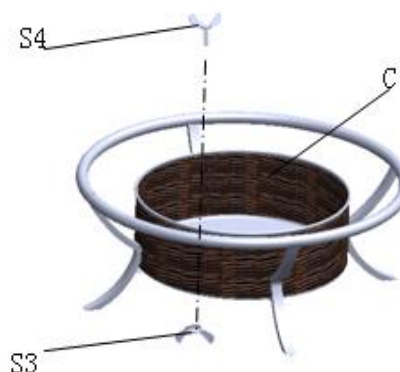 


**Step 1:** Assemble the bracket (F) and the fire bowl (C) and the legs (B) by using bolt (S1) and wing nut (S3). **Step 2:** Assemble the mesh lid (H) and the mesh lid linker (G) with wing nut (S3).

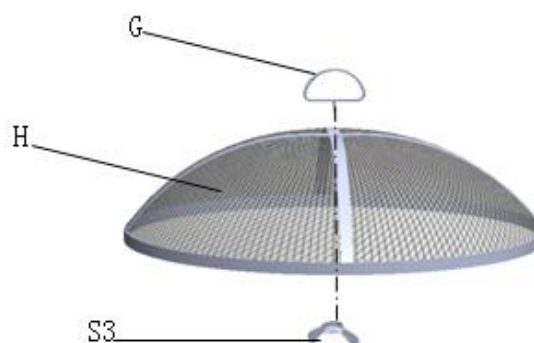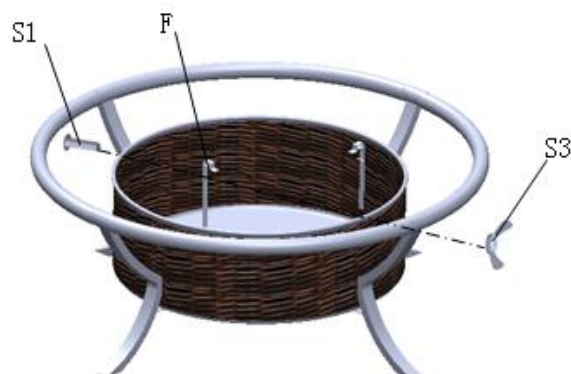

**Step 3:** Place charcoal rack (D) into the fire bowl (C); then put the assembled mesh lid (H) on top of fire bowl (C).

**Step 4:** Your fire pit is complete.

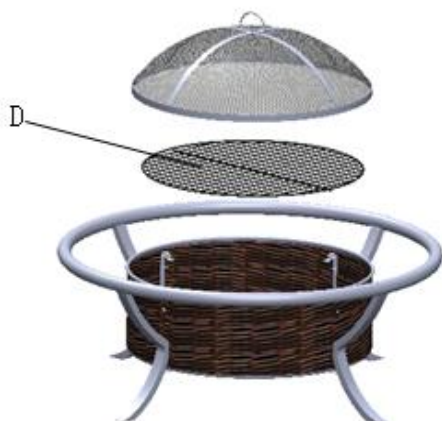

# Operating Instructions



## **WARNING** **FOR YOUR SAFETY**

Before using this outdoor fire pit, make sure you have read, understand and are following all information provided in the important safeguards presented on page

1. Failure to follow those instructions can cause death, serious injury or property damage.

## **Lighting**

1. Make sure there is only a small amount of ash in the bottom of the bowl.
2. Place a layer of dry kindling or a natural firestarter onto the center of the grate.
3. Place above that a layer of dry seasoned hardwood that is cut to lengths no more than 3/4 the diameter of the bowl.
4. Use a match to light kindling or firestarter.
5. Replace spark arrestor by using the fire tool once the kindling or firestarter is lit.

## **Tending the Fire**

You may need to shift and/or add logs for an ideal experience.

### *Reminders:*

- \* Always wear protective gloves or a pot holder when tending fire.
- \* Wait until glowing coals have developed before adding any additional wood.
- \* Do NOT add gasoline, kerosene, diesel fuel, Lighter fluid or alcohol to relight or enhance an existing fire.

1. Carefully remove spark arrestor by using the fire tool.
2. While using a long handled fireplace tool, shift coals and logs to allow additional airflow.
3. If additional wood is required, place wood on top coals. Be careful not to shift ashes.
4. Replace spark arrestor by using the fire tool.

## **Extinguishing**

1. Allow fire to burn itself out.
2. Do NOT use water to extinguish as this is dangerous and can cause damage to this outdoor fire pit.

## **Care and Inspecting**

This outdoor fire pit should be inspected on a regular basis to ensure product safety and longer product life.

**Do NOT attempt to inspect this outdoor fire pit until the fire is COMPLETELY out.**

1. Check handles to make sure they are secure.
2. Check components for any signs of damage or rust.
3. If damage to any component is detected, do NOT operate until repairs are executed.

## **Cleaning**

This outdoor fire pit should be cleaned on a regular basis to promote safer experiences and longer product life. **Note:** After repeated use, a slight discoloration of the finish may occur.

**Do NOT attempt to clean this outdoor fire pit until the fire is COMPLETELY out.**

**Do NOT use oven cleaner or abrasive cleaners as they will damage this product.**

**Do NOT clean any part of this outdoor fire pit in a self cleaning oven as it may damage the finish.**

1. Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
2. For stubborn surfaces use a citrus based degreaser and a nylon scrubbing brush.
3. Rinse clean with water.
4. Remove built-up creosote from components with a chimney cleaning product.

## **Storage**

Do NOT move or store this outdoor fire pit until the fire is COMPLETELY out.

1. Once the fire is out, coals are cold and outdoor fire pit is cool to the touch, remove ashes and properly dispose.
3. Store assembled in a location away from children and pets.

Note: If you do not use a cover, store this outdoor fire pit in a dry location to maximize product life.

**Distributed By:**

**Fireside Escapes**

**Torrance, CA**

**Tel: 310-533-1177**

**[www.firesideescapes.com](http://www.firesideescapes.com)**

**Distributed By:**  
 Fireside Escapes  
 414 Alaska Ave  
 Torrance, CA 90503  
 Tel: 310-533-1177



Web: [www.firesideescapes.com](http://www.firesideescapes.com)

## **1 YEAR LIMITED WARRANTY – Customers in the Continental US**

1 Year Limited Warranty TERMS OF YOUR LIMITED WARRANTY: Manufacturer warrants to the original purchaser of product, and to no other person, that if this product is assembled and operated in accordance with the printed instructions accompanying it, then for a period of one (1) year from the date of purchase, all parts in such product shall be free from defects in material and workmanship. Manufacturer may require reasonable proof of your date of purchase. Therefore, purchaser should retain sales receipt or invoice. This Limited Warranty shall be limited to the repair or replacement of parts, which prove defective under normal use and service and which Manufacturer shall determine in its reasonable discretion upon examination to be defective. Before returning any parts, Manufacturer should be contacted. If defective parts are returned, transportation charges must be prepaid by customer. Manufacturer will return replacement parts to the original retail purchaser, freight or postage prd. This Limited Warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, improper installation or improper maintenance or service by you or any third party, or failure to perform normal and routine maintenance on the product as set out in the owner manual. In addition, the Limited Warranty does not cover the damage to the finish, such as scratches, dents, discoloration, rust or other weather damage, after purchase.

**\*\*\*THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED ABOVE\*\*\***

**\*\*\*PURCHASER ASSUMES ALL RISKS IN THE ASSEMBLY AND OPERATION OF THIS UNIT\*\*\***

**\*\*\*FAILURE TO FOLLOW WARNINGS AND OPERATIONAL INSTRUCTIONS CONTAINED IN THIS MANUAL CAN RESULT IN SEVERE PROPERTY DAMAGE AND/OR PERSONAL INJURY\*\*\***

This Limited Warranty is in lieu of all other express warranties. Vendor disclaims all warranties for products that are purchased from sellers other than authorized retailers or distributors, including the warranty of merchantability or the warranty of fitness for a particular purpose. VENDOR ALSO DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. VENDOR SHALL HAVE NO LIABILITY TO PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL DAMAGES. Vendor further disclaims any implied or express warranty of and assumes no responsibility for, defects in workmanship caused by third parties. this limited warranty gives the purchaser specific legal rights; a purchaser may have other rights depending upon where he or she lives. Some jurisdictions do not allow the exclusion or limitation of special, incidental or consequential damages, or limitations on how long a warranty lasts, so the above exclusion and limitations may not apply to everyone. Vendor does not authorize any person or company to assume for it any other obligation or liability in connection with the sale, installation, use, removal, return, or replacement of its equipment and no such representations are binding on vendor.

**\*\*\*IMPORTANT NOTICE\*\*\***

Do NOT return to place of purchase  
 For customer service and warranty issues  
 contact our Customer Service Center at:  
 (310)- 533- 1177















