



# USER MANUAL

Please read all instructions carefully before using this product.

# **Garment Steamer**

Model: GS18-DJ/120



www.salavusa.com


Visit our website to find product tips, customer support and learn about SALAV patented steam technology. www.salavusa.com

#### Dear Valued Customers -


Thank you for purchasing this SALAV product. Please read this manual prior to using your SALAV appliance. For more product information, FAQ and customer support please visit our website at www.salavusa.com.

#### **Important Safety Instructions:**


- The voltage of your electrical source must correspond to that of the appliance (120V-60H2). Connecting to the incorrect voltage may cause unrepairable damage to the appliance and will invalidate the warrantv.
- 2. Do not share the power supply with other high-powered electric appliances.
- 3. To reduce the risk of electric shock, do not immerse the appliance, plug, or power cord in water or other liquids.
- 4. Do not leave this appliance unattended while it is in operation.
- 5. Fill water to "MAX" level before using and observe the water level during use.
- Do not lay hose on the ground. Do not wind hose. Do not operate the appliance if cord is damaged.
- Always keep the hose and nozzle elevated above the water tank. Never insert any object into any opening or hose.
- 8. Do not cut or attempt to extend the steaming hose or power cord.
- Do not place the nozzle directly on any surface or the appliance power cord while it is hot or plugged in.
- 10. Be cautious about steam spraying out from the nozzle. Do not direct steam at people or animals, or use steamer on garments while they are being worn.
- 11. Steam only in a vertical motion. Never use steamer in a horizontal position or tilt backwards doing so may result in hot water discharge.
- 12. Move the appliance by firmly grasping the pole. Do not force the casters if they are stuck. Drain the water tank and water reservoir before inspecting the casters.
- 13. Turn off, unplug and allow the appliance to cool completely for at least 30 minutes prior to draining the water tank and water reservoir and storing.
- 14. Always turn off and unplug unit before refilling, draining, cleaning, moving, or when not in use.
- 15. For indoor use only.
- 16. Keep the appliance away from flammable materials and chemicals.
- 17. Do not fill the water tank with hot water or corrosive cleaning agents which could cause damage. Distilled or filtered water is strongly recommended.
- 18. When in use, this appliance will spray hot steam from its steam nozzle. To avoid injury from hot steam, do not aim the steam nozzle at people or pets.
- 19. Only use SALAV accessories on your SALAV appliance. The use of accessory attachments other than those provided by SALAV may result in fire, electric shock or irreversible damage to the appliance.
- 20. This appliance is not intended for use by children or near children and other persons whose physical, sensory or mental capabilities or lack of experience and knowledge prevents them from using the appliance safely without supervision or instruction by a responsible person to ensure that they can use the appliance sofely.

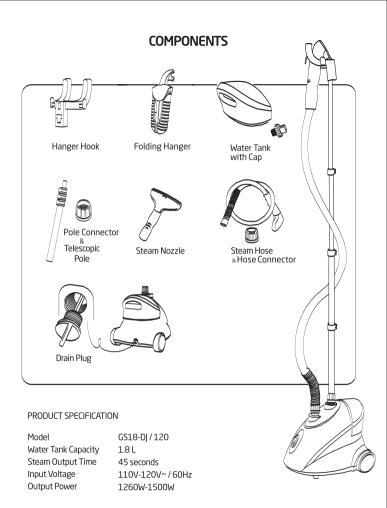



#### SETTING UP YOUR GARMENT STEAMER

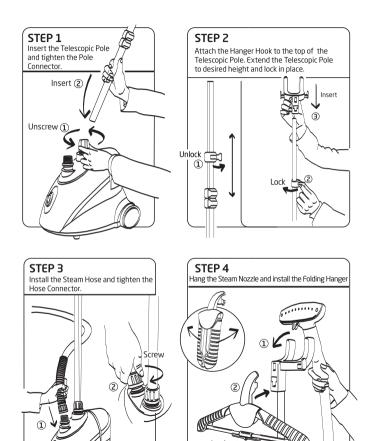

#### INSTRUCTIONS FOR USE

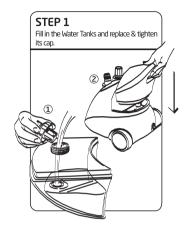


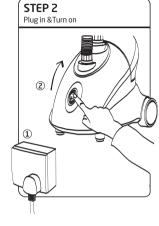

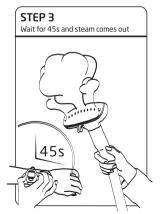





#### MAINTENANCE AND CLEANING

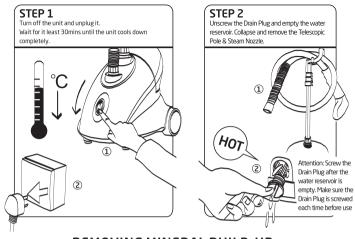


### **REMOVING MINERAL BUILD-UP**

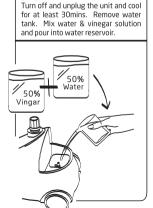


STEP 1

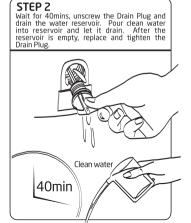


## **ACCESSORIES ASSEMBLY AND USE**

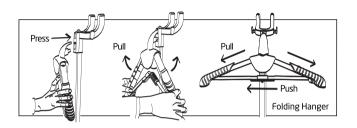



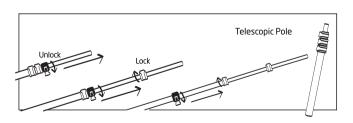

# STEAMING INSTRUCTION

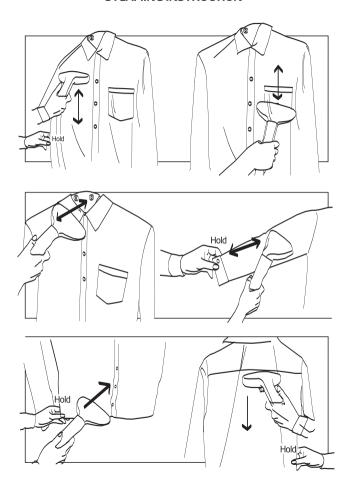

#### TROUBLE SHOOTING

