


Step 1: Locate filter housing



Step 3: Replace the old filter with the new one - carbon facing outward

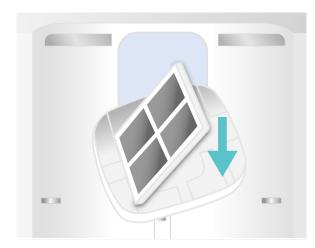

Step 2: Remove the housing by turning it counter-clockwise



Step 4:

Replace the housing into the refrigerator by turning it in clockwise

## FOR EASY REORDER

use the camera app on your smartphone to scan this QR code



Use code REORDER for 10% off of your next order



Installation Manual for BAF043 LT120F Air Filter Replacement

www.mayafilters.com