

EARISE

T65



USER INSTRUCTION

WARNING	01
DISPLAY SCREEN	02
THE OPERATION PANEL	03
BLUETOOTH	04
LIGHT	04
REPEAT	04
FM RADIO	05
TF Card / USB	05
AUX IN	06
HOW TO CHARGE YOUR T65	06
SPECIFICATION	08
WHAT'S IN THE BOX	08
WARRANTY	08

WARNING

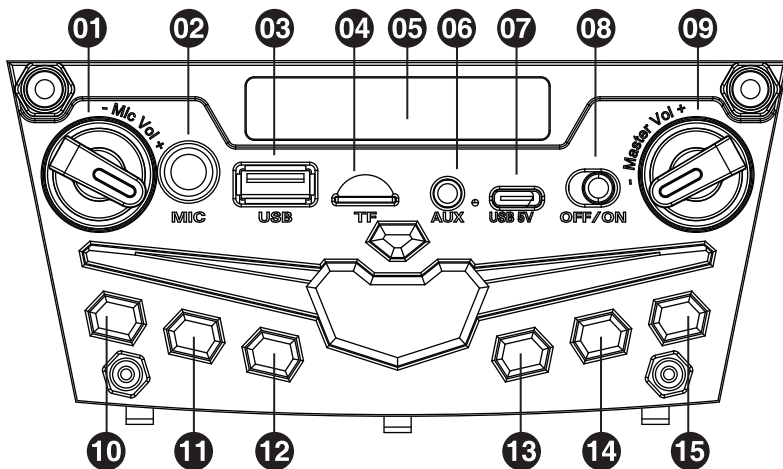
1. Do not place in humid environment or expose to rain. Avoid severe collisions.
2. Keep the product away from high temperature and open flame environment to prevent dangers such as battery explosion.
3. Do not open the cabinet of the product, or it will cause machine damage and other accidents.
4. For maintenance, contact the service station or professional personnel if needed.
5. Can only be replaced with the same or equivalent type of battery.
6. In order to avoid charging issues, the product must be charged with the original USB cable. Accidents and machine damage caused by using other charging cable will not covered by warranty.

DISPLAY SCREEN



1. **▶||** : With a USB flash drive or TF card inserted, this symbol will light up when music is paused. As for AUX in or FM radio mode, this symbol will light up when music is muted.
2. **U/TF**: When a USB flash drive or TF card inserted, this symbol will light up.
3. **↶** : Single cycle.
4. **88:88** : When using the AUX function, "LINE IN" will be displayed on the screen; When in the FM radio mode, it will display the number of current channel; When playing music via a USB flash drive or TF card, it will display the song playing time; When in Bluetooth mode, it will display "BLUE"; "PAUS" will be displayed on the screen when music is paused.
5. **MIC**: When the microphone is in use, this symbol will light up.
6. **🔋**: This symbol will light up when there's only a few power left. The volume will automatically decrease to about 70%. Please use the including charging cable to charge the machine.

THE OPERATION PANEL



- | | |
|--------------------------------|---------------------------------|
| 01 Mic Volume Control | 08 Power On/Off |
| 02 1/4" Mic In Jack | 09 Master Volume Control |
| 03 USB Flash Drive Slot | 10 Mode |
| 04 TF Card Slot | 11 Repeat |
| 05 Display Screen | 12 Light On/Off |
| 06 AUX In Jack | 13 Previous Track |
| 07 USB 5V Charging Port | 14 Play/Pause |
| | 15 Next Track |

BLUETOOTH

1. Power on the speaker. The default mode is Bluetooth. The screen display shows "BLUE" and it will flash.
2. Turn on the device's Bluetooth, search for "EARISE T65", and click to pair.
3. A voice prompt "Bluetooth connected" to be heard indicates a successful connection. The display "BLUE" stops flashing.
4. Disconnect Bluetooth: Press and hold the "◆| " button to disconnect Bluetooth.

LIGHT

1. The light will be default on when power on.
2. Press and hold the "LIGHT" button to turn off or turn on again.
3. There are 3 light modes: default, breathing, quick-flashing.
4. Note: The light on the operation panel will not be off unless power off the machine.

REPEAT

1. The repeat function only work when a TF card or USB flash drive inserted.
2. Press the "REP" button to select a loop mode.
3. There are 2 modes: ONE (single song cycle), ALL (loop all playlist of all folders).

FM RADIO

1. Press the "MODE" button to switch to FM radio mode. The FM range is 87.5MHz-108.0MHz.
2. Press and hold the "▶| " button to automatically search for FM stations. The station will be saved automatically, the display screen shows "P01", "P02", etc. It is suggested to search for radio stations automatically the first time you use it.
3. When searching for stations, you can stop searching by pressing the "▶| " button.
4. After searching, press "▶▶|" or "◀◀|" button to select a saved station.
5. If you are listening to a saved station "P05" in which FM range is 92.0MHz, press and hold "▶▶|" button to searching stations from 92.0MHz to 108.0MHz, and the found station will be saved automatically as "P06"; press and hold "◀◀|" button to searching stations from 87.5MHz to 92.0MHz, and the found station will be saved automatically as "P04".

TF Card / USB


1. Press the "MODE" button to switch to USB / TF mode.
2. Insert a USB flash drive / TF card, the speaker will automatically start playing the existing music from the first song. The display shows "U / TF" in the upper left corner.
3. The song file format must be MP3 \ WMA \ WAV \ FALC.
4. The USB flash drive must have a capacity of 8G to 32G.

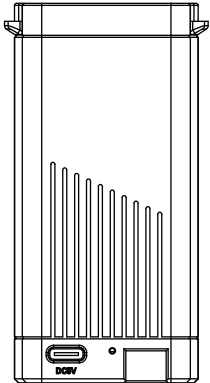
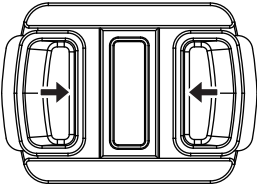
- The USB flash drive must be USB 2.0 and the file system must be FAT32.
- If the USB flash drive is formatted and the file system is not FAT32, it will not work properly.

AUX IN

- The speaker has a 3.5 mm AUX jack for connecting non-Bluetooth devices.
- (Not including cable) One end of the cable is plugged into the AUX jack, and the other end is connected to the audio output port of the device, such as a computer, mobile phone and amplifier.
- The speaker will automatically switch to AUX IN mode. Alternatively, you can switch to the AUX IN mode by pressing the "MODE" button.

HOW TO CHARGE YOUR T65

Graphical	Method	Steps
 <p>The graphical section contains three icons: a circular 'AUX' port, a rectangular 'USB TV' port, and a circular 'OFF/ON' button.</p>	<p>Charge the T65 Machine Directly</p>	<ol style="list-style-type: none"> There is an included USB charging cable. One end of the USB cable is connected to the USB 5V charging port on the speaker and the other end is connected to the power outlet. (The power adapter is not included)

Graphical	Method	Steps
	<p>Charge the External Li-ion Battery</p>	<ol style="list-style-type: none"> 3. When charging, the red light indicator is on. It will go off after fully charged. 1. Use the included USB charging cable to charge the external battery. 2. One end of the USB cable is connected to the external battery and the other end is connected to the power outlet. (The power adapter is not included) 3. When charging, the red light indicator will flashing. It will go off after fully charged.
	<p>Replace the External Li-ion Battery</p>	<ol style="list-style-type: none"> 1. There are 2pcs external Li-ion batteries included. 2. Pinch the top buckle of the battery with your thumb and index finger. 3. Please note the side with a sticker indicating "this side up". 4. Push the battery into the bottom of the battery slot. 5. Release your fingers, you will hear a "click" sound, indicating that the battery is placed correctly.

SPECIFICATION

Peak Power Output: 30W

R.Frequency: 90Hz-20KHz

Built-in Li-ion Battery: 3.7V / 2400mAh

External Li-ion Battery: 2pcs 3.7V / 3600mAh

Drive Unit: 5.25"3Ω

S/N Ratio: ≥ 60dB

DC Input: USB 5V

Power Supply: AC 100-240V

Dimension: L280*W200*H340mm (11" x 7.9" x 13.4")

WHAT'S IN THE BOX

1 x T65 PA Speaker

2 x Wireless Microphones (Batteries not included)

2 x External Li-ion Batteries

1 x USB Charging Cable

1 x User Manual

WARRANTY

EARISE guarantees one and a half years warranty and 60 days hassle-free return. We provides lifetime technical support. Please reach us via **support@eariseshop.com**.

