

MEMORISM

HIGH SPEED HAIR DRYER

Model: Zeph HSD1



USER MANUAL

Please read all instructions before use and keep this manual for future reference.

Introduction

Congratulations on your purchase and welcome to Memorism!

To fully benefit from the support that Memorism offers please register your product at

www.mymemorism.com/register.

Important Safety Instructions

As with most electrical appliances, electrical parts are powered when plugged in even when the switch is turned off.

To avoid the risk of burns, fire, electric shock, or injury:

1. Always unplug this appliance from the electrical outlet immediately after use.
2. Keep this appliance away from water. Do not use it while bathing or in the shower.
3. Do not plug or unplug this appliance when your hands are wet.
4. Do not place or drop this appliance into water or other liquid. Always store this appliance and cord in a moisture-free area.
5. Do not reach for the appliance that has fallen into the water. Please unplug it immediately.
6. Never operate this appliance if it has a damaged cord or plug if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
7. Keep the cord away from the heated surfaces and do not wrap the cord around the appliance.
8. Unplug this appliance before cleaning it.
9. An appliance should never be left unattended when it is plugged in.

10. **KEEP AWAY FROM CHILDREN.** Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
11. Use this appliance only for its intended use as described in this manual.
12. Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
13. Do not use an extension cord.
14. Never allow the power cord to be pulled, twisted, or severely bent.
15. This appliance is hot when in use. Do not touch the heated surfaces.
16. Do not place the heated unit directly on any surface while it is hot or plugged in.
17. Do not store it in temperatures exceeding 140°F (60°C).
18. This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Specifications

Product Name: High Speed Hair Dryer

Model: HSD1

Power Supply: 120V 60Hz


Power: 1100W

Motor: 100,000 RPM

Size: 1.5 x 1.68 x 13.39 inch

Weight: 16.23 oz

Parts

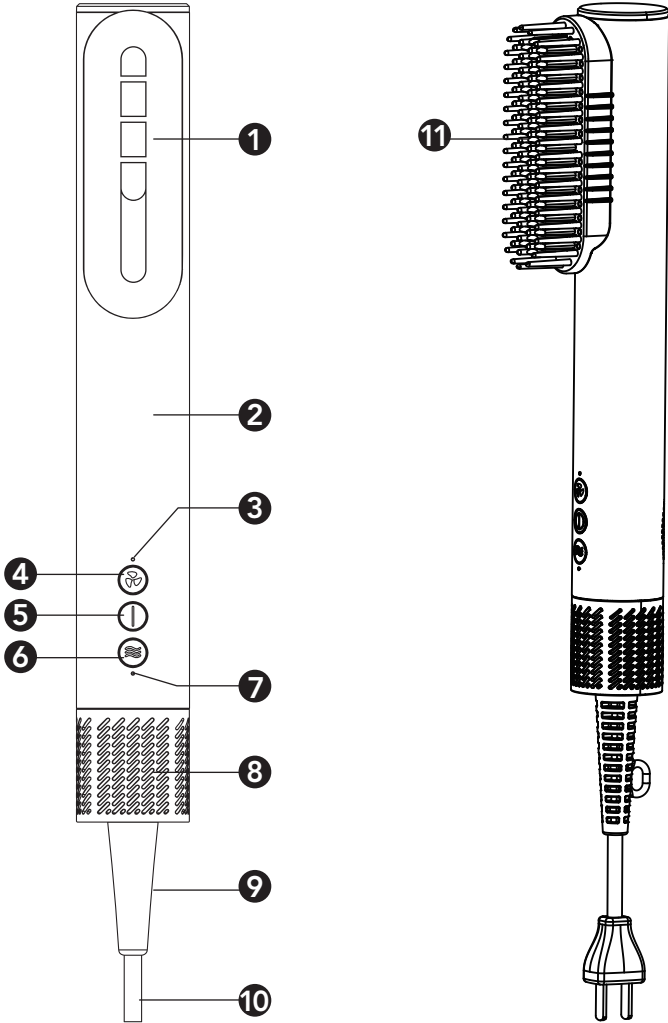

- ① Air Outlet
- ② Handle
- ③ Speed Indicator
- ④ Speed Control
- ⑤ Power On/Off
- ⑥ Temperature Control

- ⑦ Temperature Indicator
- ⑧ Air Inlet
- ⑨ Power Cord Cover
- ⑩ Power Cord
- ⑪ Hair Straightening Attachment

How To Use

1. Insert the power plug into an electrical power socket.
2. Long press the power button to turn the power on. The default mode is Gentle and Low.
3. Press the speed and temperature control buttons to choose speed and temperature. The LED light will change based on the settings you choose. The speed cycle is Low-Medium-High-Medium-Low. The temperature cycle is Cool-Gentle-Warm-Hot-Warm-Gentle-Cool.


LED Color	No light	Green	Blue	Red
Speed	N/A	Low	Medium	High
Temperature	Cool	Gentle	Warm	Hot

3. Begin to dry your hair.
4. After use, press the power button to turn the power off and unplug the hair dryer.

** The appliance has a memory function. Without unplugging it, when the power is powered on again, the hair dryer will automatically select the mode used when it was powered off last time.*

Straightening Brush Attachment

1. Make sure the appliance is powered off.
2. Slide the attachment from the top over the air outlet.
3. After the appliance is cool down, slide upwards to remove the attachment.

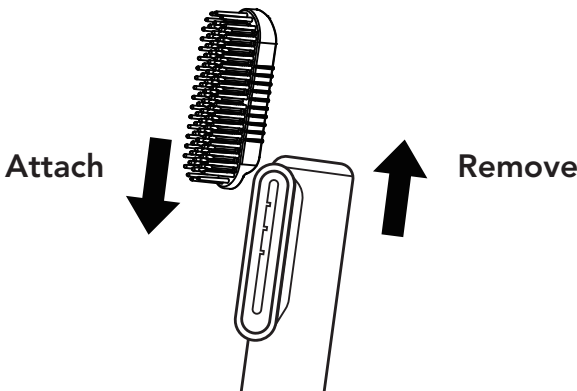

Tips:

1. Start with a low setting first to test the proper temperature for your scalp.
2. During the first few minutes of initial use you may notice smoke and a slight odor. This is normal and will quickly disappear.
3. Do not concentrate the airflow on one area for an extended period of time.
4. Attention to the hot surface of the attachment when the product is powered on.
5. Comb your hair thoroughly before use the straightening brush.

Cleaning and Maintenance

1. Always unplug and allow it to cool before cleaning.
2. Periodically inspect the back of the straightening attachment and remove debris that may have accumulated. Debris may reduce airflow and damage the brush.
3. Never use the following chemicals to clean the product: thinner, gasoline, alcohol, or any other flammable chemicals.
4. Do not wrap the cord around the appliance as this may cause the cord to wear.
5. Use a soft dry cloth to wipe any debris from the product.
6. Allow the appliance to cool after use, then store it out of reach of children in a safe, dry location.
7. Allow the cord to hang or lie straight at the point of entry into the appliance.

Limited Warranty

Memorism warrants High Speed Hair Dryer HSD1 for 1 year from the date of purchase. For more information, please visit www.mymemorism.com/warranty.

What's covered?

Defects due to faulty materials and/or workmanship of the product.

What's not covered?

1. Damage caused by the owner when attempting to fix or altering the product by himself or herself.
2. Damage caused by misuse, abuse, neglect, alterations, or unauthorized repair.
3. Natural depreciation.

Warranty Period

Warranty becomes effective from the date of original purchase and will last for 1 year.

Who's covered?

This limited warranty is only effective for the original purchaser. It is non-transferable.

How to request warranty services?

To obtain the benefit of this warranty, please email support@mymemorism.com. Our customer service team will address your issue as soon as possible!

MEMORISM



www.mymemorism.com
support@mymemorism.com

6945 Speedway Blvd Ste, H102 Las Vegas, NV 89115